MANUAL TRANSMISSION - NSG370 (Continued)

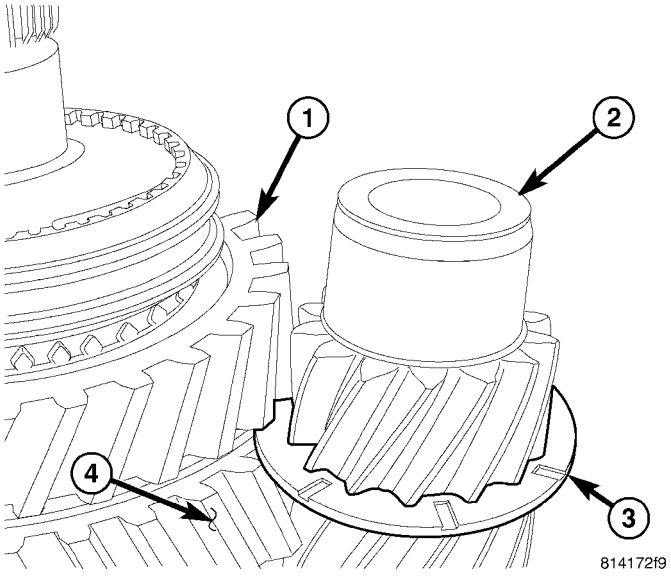


Fig. 102 OIL SILINGER

1 - REVERSE GEAR
2 - COUNTERSHAFT
3 - OIL SLINGER
4 - FIRST GEAR

(3) Install oil slinger (3) on countershaft (2) between reverse (1) and first gear (4) (Fig. 102).

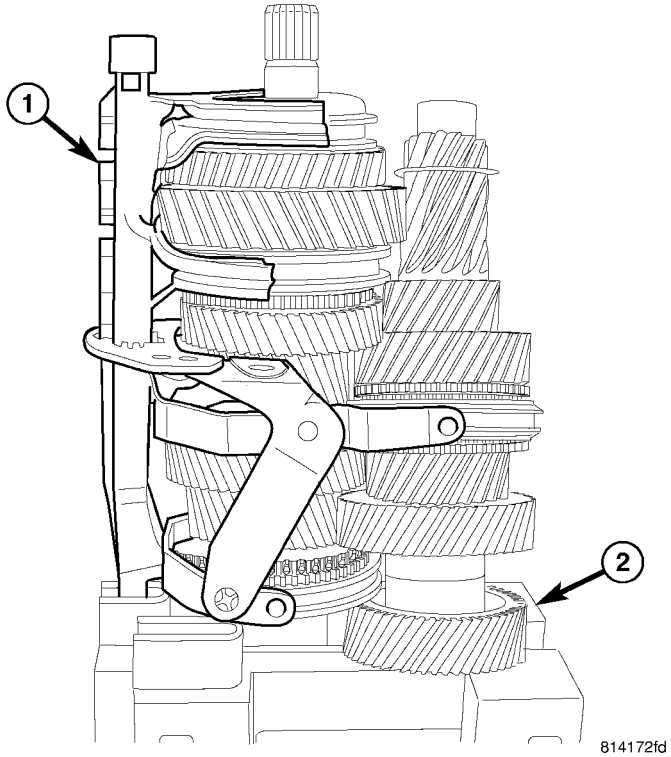


Fig. 103 SHIFT RAILS/FORKS IN FIXTURE

1 - SHIFT RAILS/FORKS
2 - FIXTURE

(4) Install shift rails and forks (1) onto Build Fixture 9633 (2) and countershaft/mainshaft. (Fig. 103).

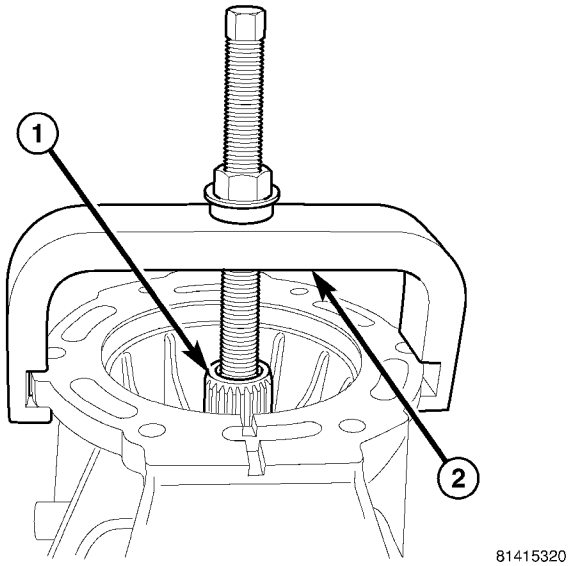


Fig. 104 MAINSHAFT INSTALLER

1 - MAINSHAFT
2 - REMOVER/INSTALLER

(5) Install rear housing on mainshaft (1) (Fig. 104) with Installer 9636 (2).

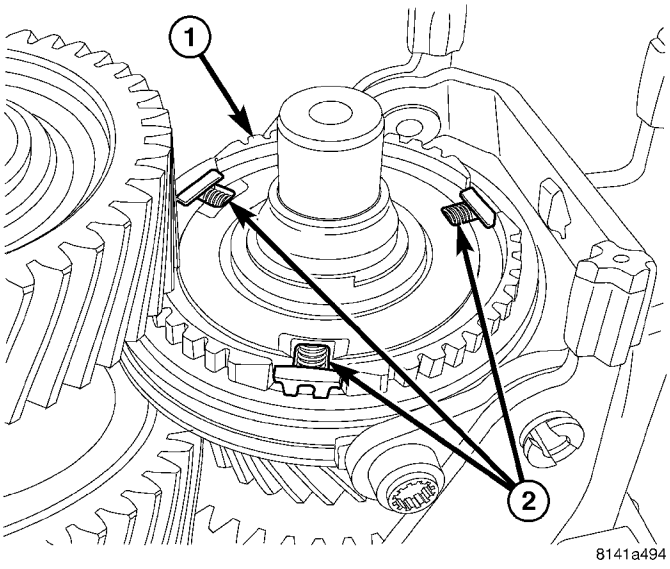


Fig. 105 5-6 SYNCRO DETENTS

1 - HUB
2 - DETENTS

(6) Remove rear housing with mainshaft, countershaft and shift rails from fixture. Set assembly on rear housing with shafts pointing up.

(7) Install 5-6 synchronizer hub (1) (Fig. 105) detents, springs, and balls (2).