MANUAL TRANSMISSION - NSG370 (Continued)

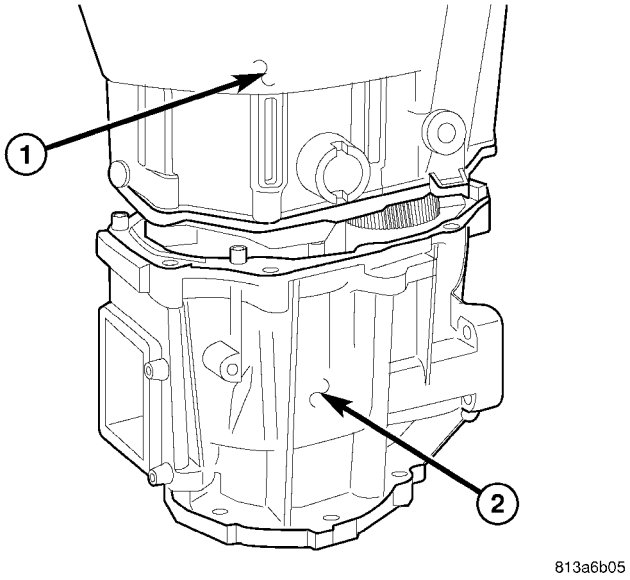

Fig. 110 SPLIT HOUSING

1 - FRONT HOUSING
2 - REAR HOUSING

(12) Apply MOPAR® Gasket Maker to front housing.

(13) Install front housing (1) (Fig. 110) on rear housing (2) and tighten bolts to 28 N·m (21 ft. lbs.).

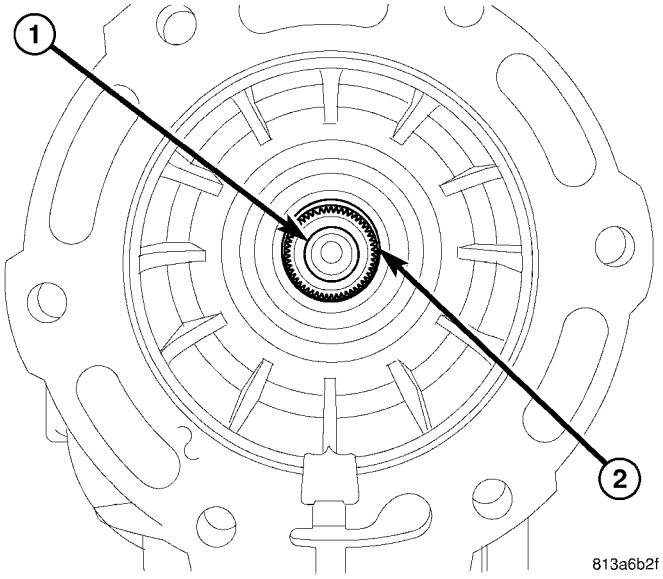

Fig. 111 OUTPUT SHAFT SNAP RING

1 - OUTPUT SHAFT
2 - SNAP RING

(14) Install output shaft (1) (Fig. 111) snap ring (2) 4x4 only.

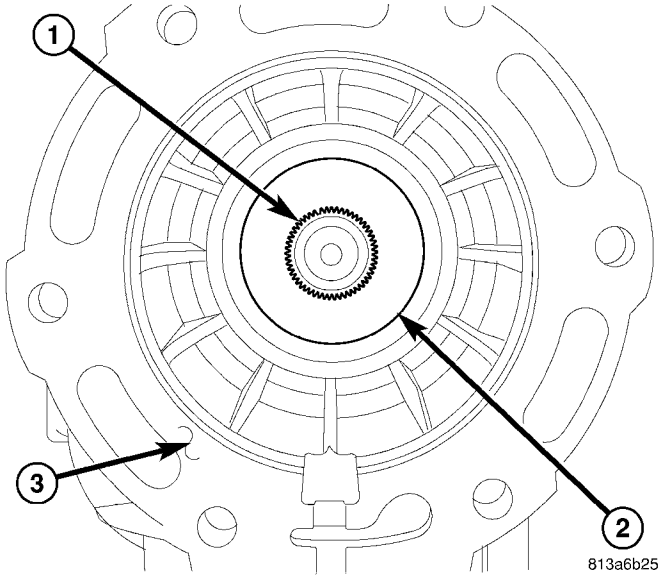

Fig. 112 OUTPUT SHAFT SEAL

1 - OUTPUT SHAFT
2 - SEAL
3 - REAR HOUSING

(15) Install output shaft (1) (Fig. 112) seal (2) in rear housing with Installer 9638.

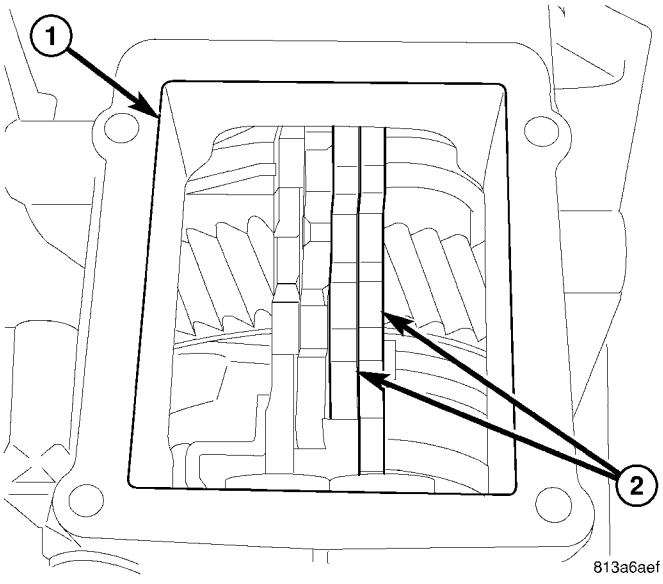

Fig. 113 SHIFT TOWER OPENING

1 - SHIFT TOWER OPENING
2 - SHIFT RAILS

(16) Through the shift tower opening (1) (Fig. 113) move two shift rails (2) forward to lock the transmission in two gear.