MANUAL TRANSMISSION - NSG370 (Continued)

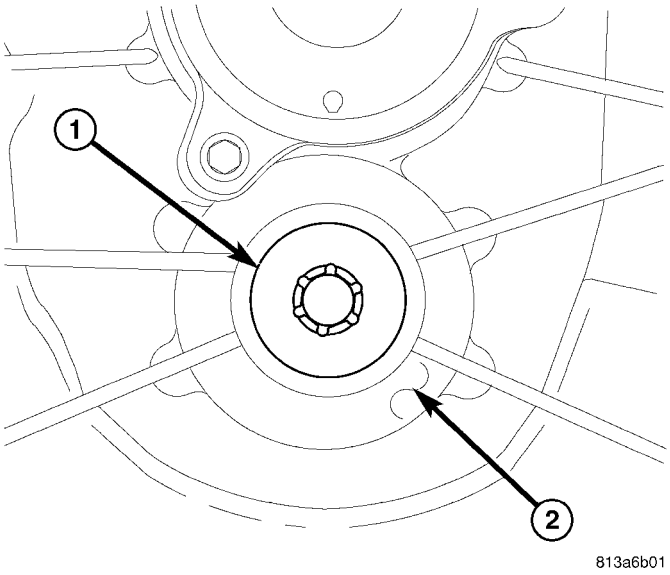

Fig. 114 COUNTERSHAFT BOLT

1 - COUNTERSHAFT BOLT
2 - FRONT HOUSING

(17) Install countershaft bolt (1) (Fig. 114) into the front housing (2) and tighten to 100 N·m (74 ft. lbs.).

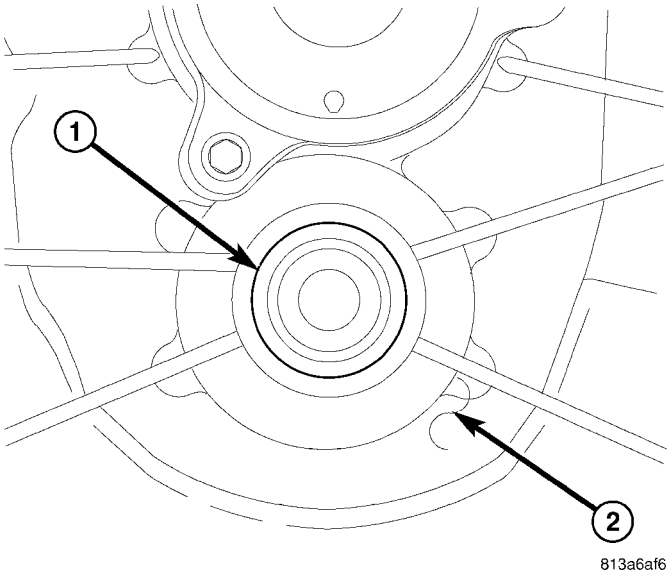

Fig. 115 COUNTERSHAFT PLUG

1 - COUNTERSHAFT PLUG
2 - FRONT HOUSING

(18) Install countershaft plug (1) (Fig. 115) in front housing (2) with Installer 7829-A and Handle C-4171.

(19) Move shift rails to neutral.

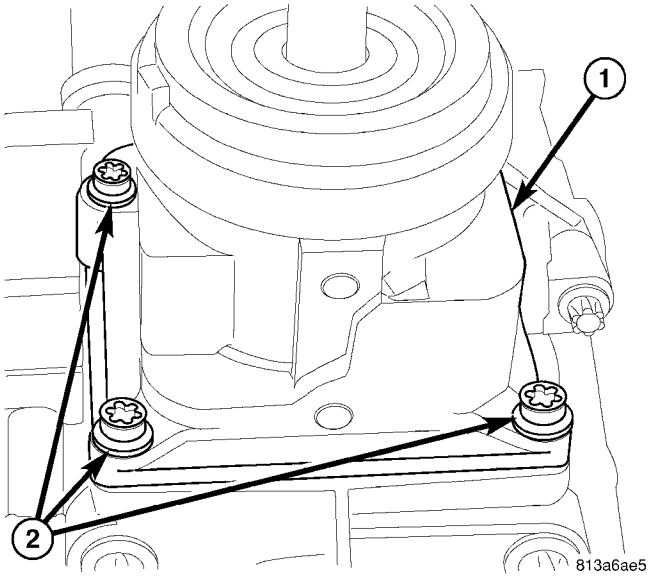

Fig. 116 SHIFT TOWER

1 - SHIFT TOWER
2 - BOLTS

(20) Apply MOPAR® Gasket Maker to shift tower.

(21) Install shift tower (1) (Fig. 116) and tighten bolts (2) to 14 N·m (10 ft. lbs.).

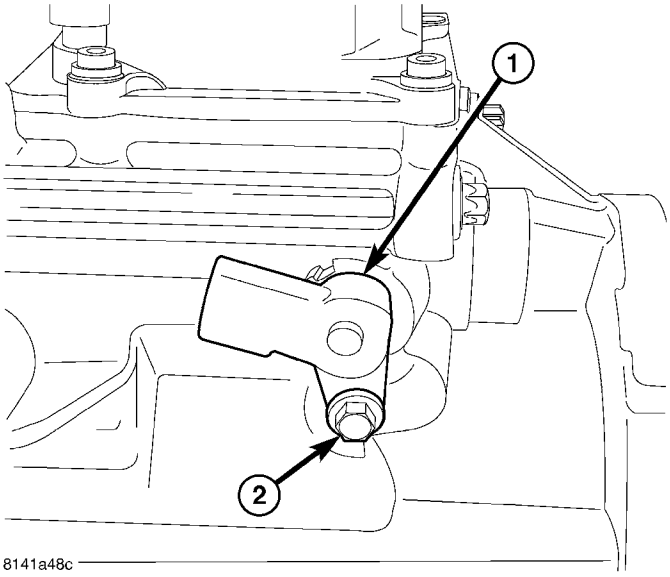

Fig. 117 BACK-UP LAMP SWITCH

1 - SWITCH
2 - BOLTS

(22) Install back up lamp switch (1) and bolt (2) (Fig. 117).