LUBRICATION & MAINTENANCE

TABLE OF CONTENTS

page

INTERNATIONAL SYMBOLS
DESCRIPTION 1
PARTS & LUBRICANT RECOMMENDATION
DESCRIPTION
LUBRICANT RECOMMENDATIONS 1
FLUID TYPES 2
FLUID TYPES
DESCRIPTION
ENGINE OIL 2
FUEL REQUIREMENTS 3
HOAT COOLANT 4
TRANSFER CASE - NV231 5
TRANSFER CASE - NV241 5
AXLE LUBRICATION 5
MANUAL TRANSMISSION 5
AUTOMATIC TRANSMISSION FLUID 5
POWER STEERING FLUID 6
OPERATION - AUTOMATIC TRANSMISSION FLUID 6

page

FLUID CAPACITIES
SPECIFICATIONS - FLUID CAPACITIES 6
MAINTENANCE SCHEDULES
DESCRIPTION
MAINTENANCE SCHEDULES 7
MAINTENANCE SCHEDULES – EXPORT . . . 13
HOISTING
STANDARD PROCEDURE - HOISTING RECOMMENDATIONS 19
TOWING
STANDARD PROCEDURE - TOWING RECOMMENDATIONS 19
JUMP STARTING
STANDARD PROCEDURE - JUMP STARTING PROCEDURE 21
EMERGENCY TOW HOOKS
DESCRIPTION — EMERGENCY TOW HOOKS . 22

INTERNATIONAL SYMBOLS

DESCRIPTION

DaimlerChrysler Corporation uses international symbols to identify engine compartment lubricant and fluid inspection and fill locations (Fig. 1).

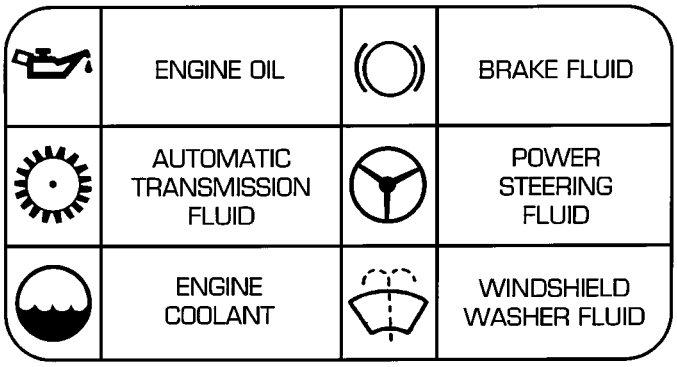

Fig. 1 INTERNATIONAL SYMBOLS

PARTS & LUBRICANT RECOMMENDATION

DESCRIPTION

LUBRICANT RECOMMENDATIONS

Chassis

Component	Fluid, Lubricant, or Genuine Part
Steering Gear & Linkage, Ball Joints, Prop Shafts & Yokes, Wheel Bearings	Mopar® Multi-Purpose Grease NLGI Grade 2 EP, GC-LB

Body

Component	Fluid, Lubricant, or Genuine Part
Hinges:	
Door And Hood	Mopar® Engine Oil
Liftgate	Mopar® Multi-Purpose Grease NLGI Grade 2 EP, GC-LB
Latches:	