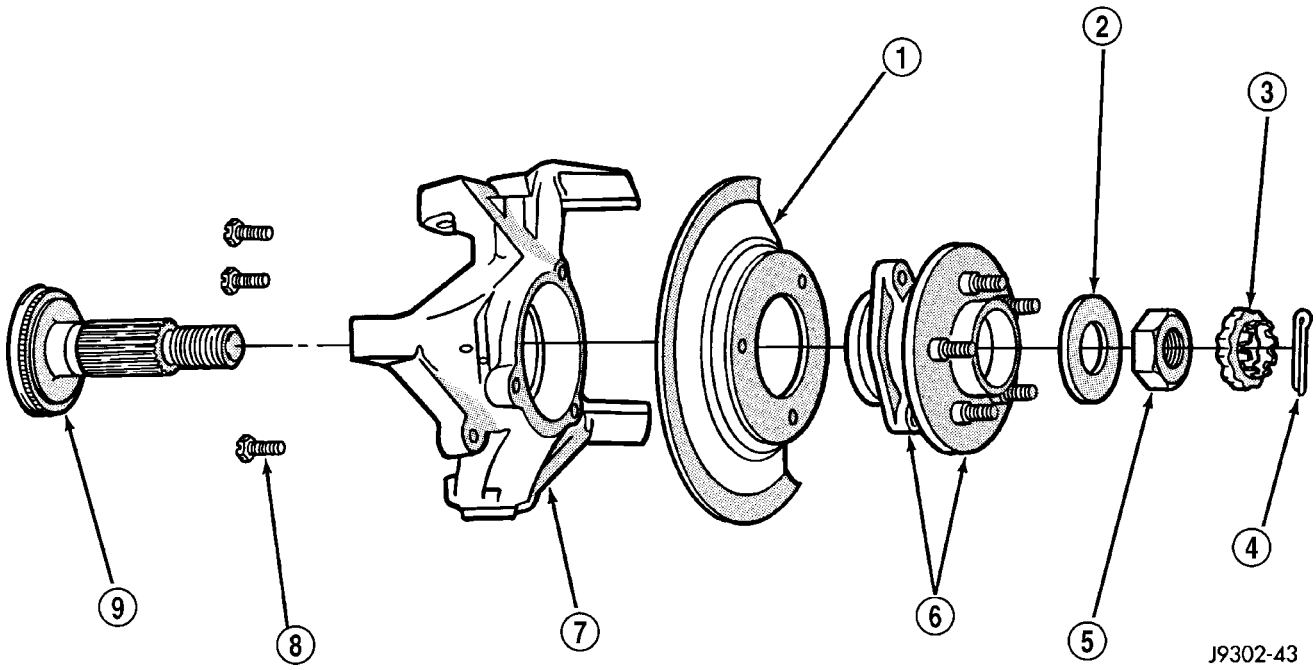

Fig. 3 Hub Bearing & Knuckle

1 - BRAKE SHIELD
2 - WASHER
3 - RETAINER
4 - COTTER PIN
5 - NUT
6 - HUB AND BEARING ASSEMBLY
7 - STEERING KNUCKLE
8 - BOLT
9 - TONE WHEEL (ABS)

INSTALLATION

(1) Install the hub bearing and brake dust shield to the knuckle.

(2) Install the hub bearing to knuckle bolts and tighten to 102 N·m (75 ft. lbs.).

(3) Install the hub washer and nut. Tighten the hub nut to 237 N·m (175 ft. lbs.). Install the nut retainer and a new cotter pin.

(4) Install the brake rotor, caliper and ABS wheel speed sensor, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - INSTALLATION).

(5) Install the wheel and tire assembly. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).

(6) Remove support and lower the vehicle.

JOUNCE BUMPER

DESCRIPTION

The jounce bumpers are mounted under the frame rails inside of the coil springs.

KNUCKLE

REMOVAL

Ball stud service procedures below require removal of the hub bearing and axle shaft. Removal and installation of upper and lower ball studs require the use of Tool Kit 6289.

(1) Remove hub bearing and axle shaft. (Refer to 2 - SUSPENSION/FRONT/HUB / BEARING - REMOVAL) (Refer to 3 - DIFFERENTIAL & DRIVELINE/FRONT AXLE - 181FBI/AXLE SHAFTS - REMOVAL).

(2) Disconnect the tie-rod or drag link from the steering knuckle arm, (Refer to 19 - STEERING/LINKAGE/TIE ROD END - REMOVAL) OR (Refer to 19 - STEERING/LINKAGE/DRAG LINK - REMOVAL).

(3) Remove the cotter pins from the upper and lower ball studs.

(4) Remove the upper and lower ball stud nuts.

(5) Using special tool C-4150A seperate the ball joints from the steering knuckle. Remove knuckle from ball studs (Fig. 4).