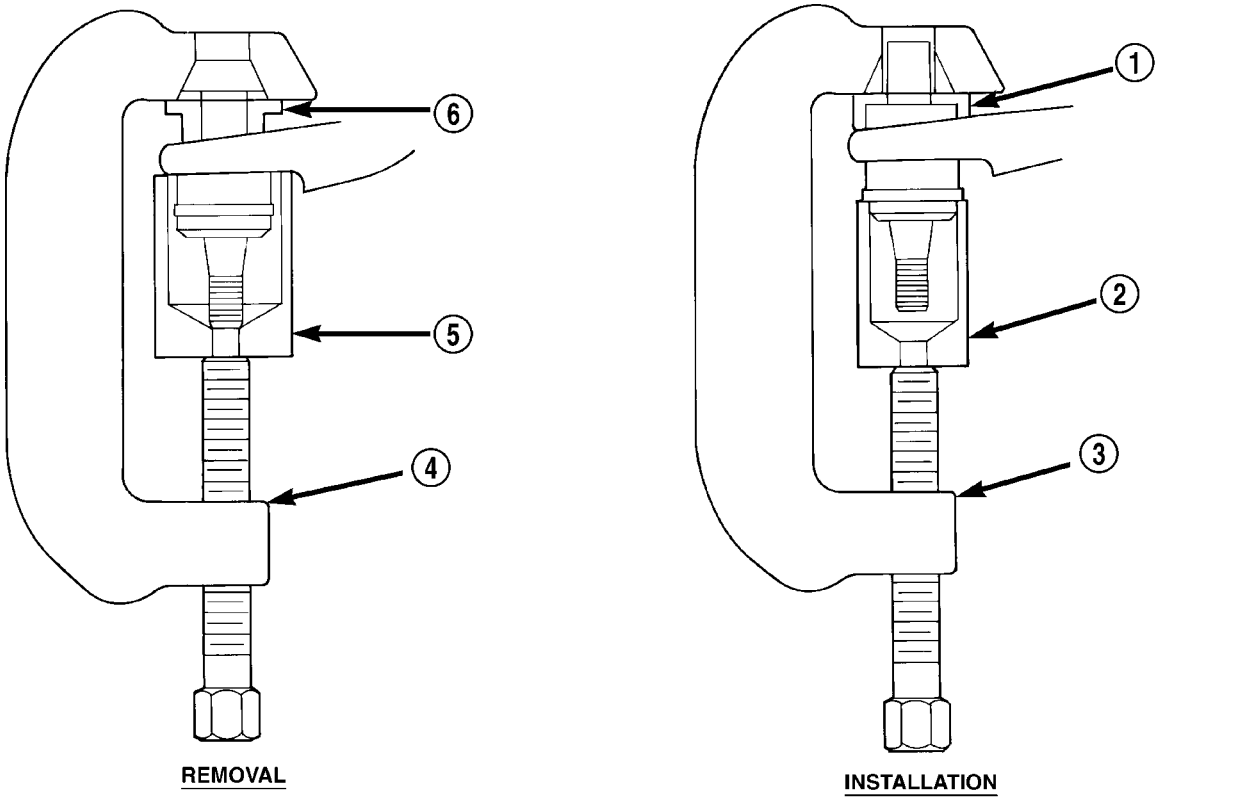


***Fig. 5 Lower Ball Stud Remove/Install***

1 - SPECIAL TOOL 6289–12
2 - SPECIAL TOOL 6289–4
3 - SPECIAL TOOL 4212F
4 - SPECIAL TOOL 4212F
5 - SPECIAL TOOL 6289–1
6 - SPECIAL TOOL 6289–3

# LOWER CONTROL ARM

## DESCRIPTION

The lower suspension arms are steel and use bushings at both ends of the arm. The arms mount to the frame rail bracket and the axle brackets.

## OPERATION

The lower suspension arm bushings provide isolation from the axle. The arm and bushings provide location and react to loads from the axle. The lower suspension arms can be used to adjust caster and pinion angle by installing a cam bolt service package.

## REMOVAL

(1) Raise and support the vehicle.

(2) If equipped with ABS brakes remove sensor wire from the inboard side of the arm.

(3) If the vehicle is equipped with a cam bolt service package paint or scribe alignment marks on the cam adjusters and suspension arm for installation reference (Fig. 6).

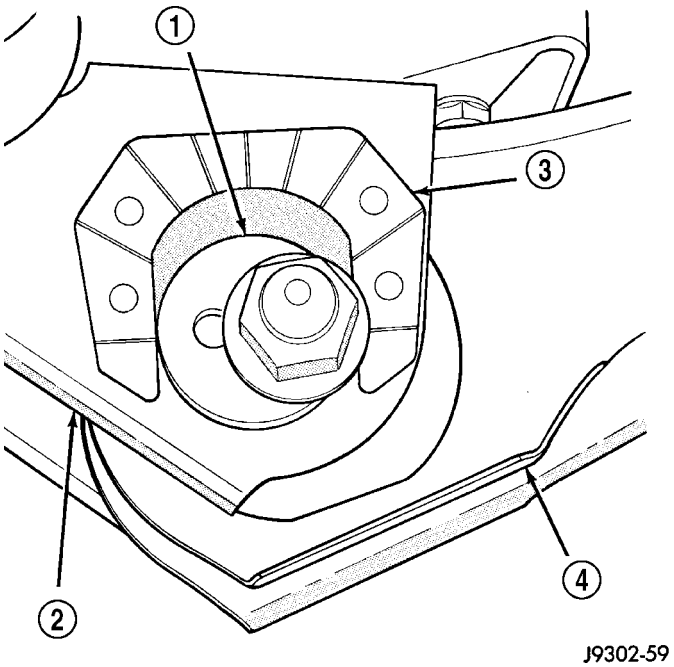


***Fig. 6 Cam Bolt Service Package***

1 - ADJUSTMENT CAM
2 - AXLE BRACKET
3 - BRACKET REINFORCEMENT
4 - LOWER SUSPENSION ARM