setting does not change during clamp tightening.

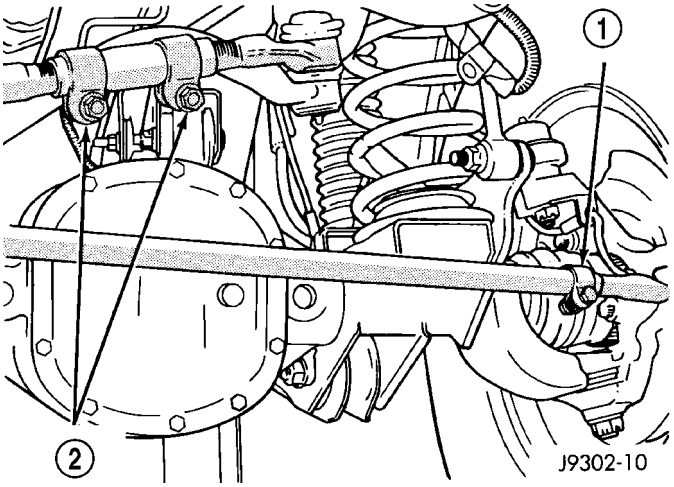

Fig. 3 Drag Link and Tie Rod Clamp

1 - TIE ROD CLAMP
2 - DRAG LINK CLAMPS

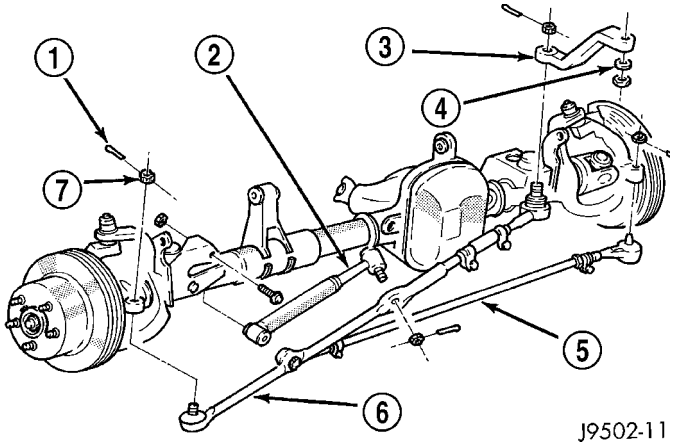

Fig. 4 Steering Linkage

1 - COTTER PIN
2 - DAMPENER
3 - PITMAN ARM
4 - WASHER
5 - TIE ROD
6 - DRAG LINK
7 - NUT

(4) Adjust the left wheel toe position with the tie rod. Turn the sleeve until the left wheel is at the same TOE-IN position as the right wheel. Position the clamp bolts as shown (Fig. 3) and tighten to 27 N·m (20 ft. lbs.). **Make sure the toe setting does not change during clamp tightening.**

(5) Verify the right toe specifications and turn off the engine.

SPECIFICATIONS

ALIGNMENT SPECIFICATIONS

NOTE: Alignment specifications are in degrees.

SPECIFICATIONS

DESCRIPTION	SPECIFICATION		
PREFERRED	CASTER + 7.0°	CAMBER (fixed angle) − 0.25°	TOTAL TOE-IN + 0.15° (each front wheel)
RANGE	±1.0°	± 0.63°	±0.06°
MAX RT/LT DIFFERENCE	0.65°	±1.0°	.06°
REAR SPECIFICATION			
PREFERRED	N/A	REAR CAMBER –0.25°	TOTAL TOE-IN +0.25°
RANGE	N/A	0° to –.50°	0° to.5°
THRUST ANGLE 0° ± 0.25°			