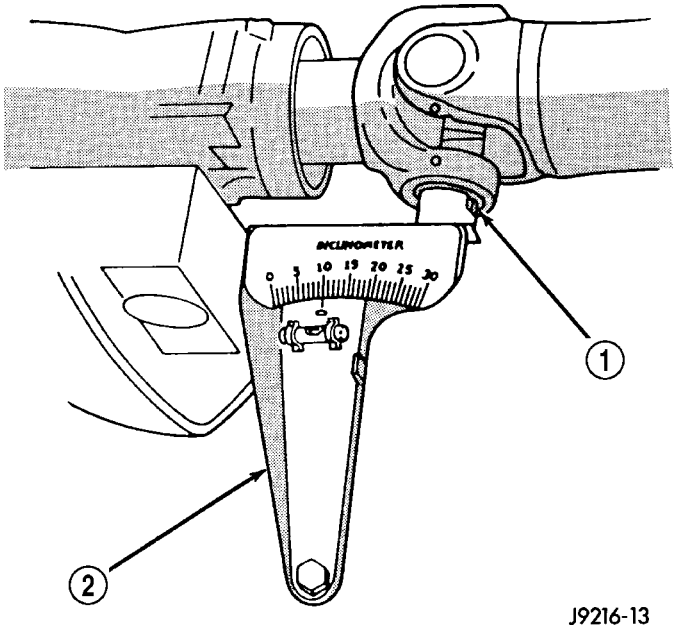


Fig. 4 OUTPUT YOKE ANGLE (A)

1 - SLIP YOKE BEARING CAP
2 - INCLINOMETER

(6) Rotate propeller shaft 90 degrees and place Inclinometer on yoke bearing parallel to the shaft (Fig. 5). Center bubble in sight glass and record measurement. This measurement can also be taken at the rear end of the shaft.

NOTE: This measurement will give you the Propeller Shaft Angle (C).

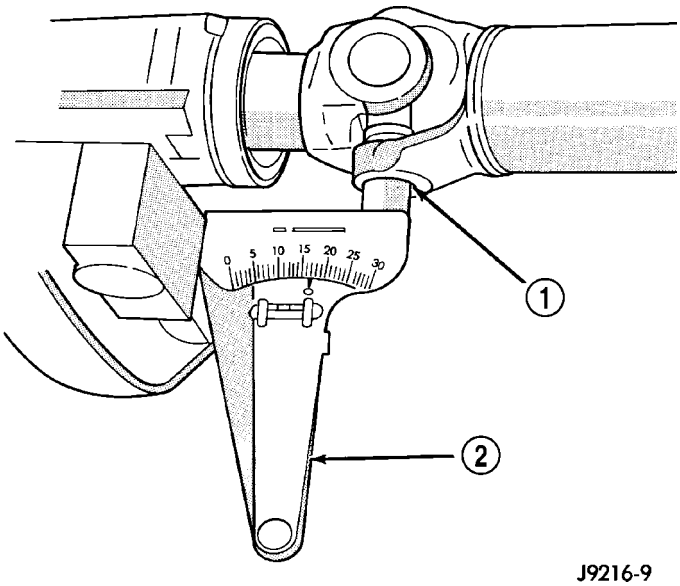


Fig. 5 PROPELLER SHAFT ANGLE (C)

1 - SHAFT YOKE BEARING CAP
2 - INCLINOMETER

(7) Subtract smaller figure from larger (C minus A) to obtain Transmission Output Operating Angle.

(8) Rotate propeller shaft 90 degrees and place Inclinometer on pinion yoke bearing parallel to the shaft (Fig. 6). Center bubble in sight glass and record measurement.

NOTE: This measurement will give you the pinion shaft or Input Yoke Angle (B).

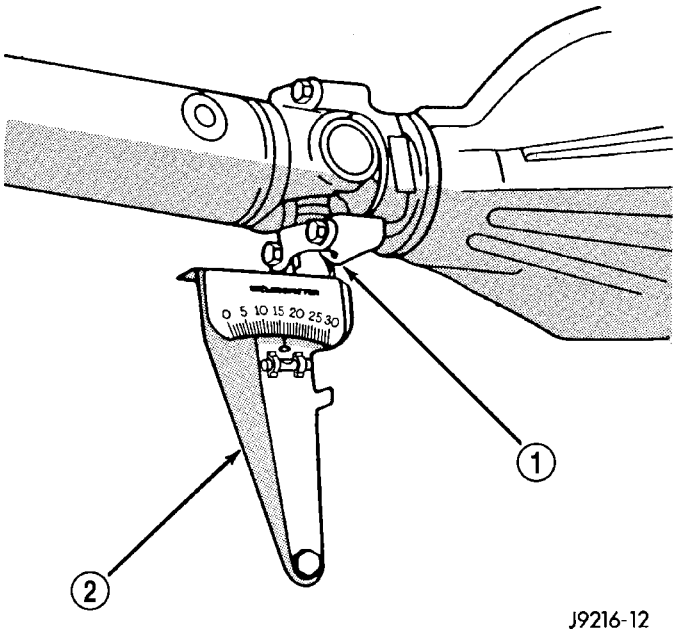


Fig. 6 INPUT YOKE ANGLE (B)

1 - PINION YOKE BEARING CAP
2 - INCLINOMETER

(9) Subtract smaller figure from larger (C minus B) to obtain axle Input Operating Angle.

Refer to rules given below and the example in (Fig. 7) for additional information.

- Good cancellation of U-joint operating angles (within 1°).
- Operating angles less than 3°.
- At least 1/2 of one degree continuous operating (propeller shaft) angle.