SPECIFICATIONS

PROPELLER SHAFT

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Front Shaft Front Yoke Bolts	19	14	-
Front Shaft Rear Flange Bolts	27	20	-
Rear Saft Rear Yoke Bolts	19	14	-
Rear Shaft Transfer Case Flange Bolts	115	85	-

SPECIAL TOOLS

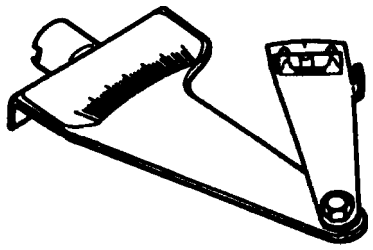

INCLINOMETER 7663

SHAFT - PROPELLER FRONT

REMOVAL

(1) With vehicle in neutral positon vehicle on hoist.
(2) Remove skid plate if equipped to gain access to the propeller shaft.
(3) Mark a line across the transfer case yoke, link yoke and propeller shaft yoke for installation reference (Fig. 9).

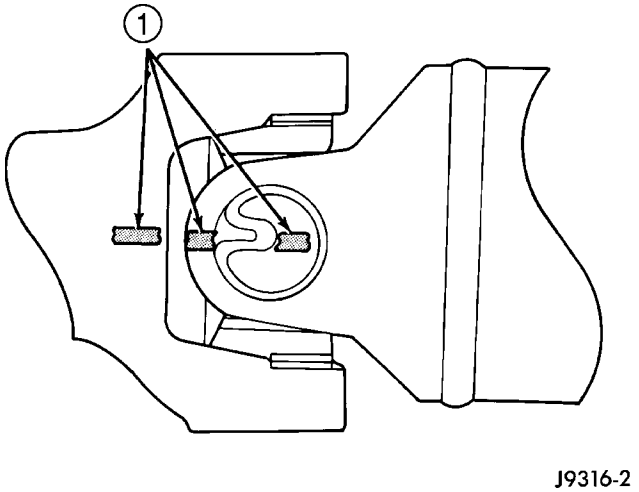

Fig. 9 YOKE REFERENCE MARKS

1 - REFERENCE MARKS

(4) Remove U-joint strap bolts at the pinion shaft yoke (Fig. 10).
(5) Remove transfer case yoke bolts.
(6) Push rear of propeller shaft forward to clear transfer case yoke.
(7) Remove propeller shaft from vehicle.

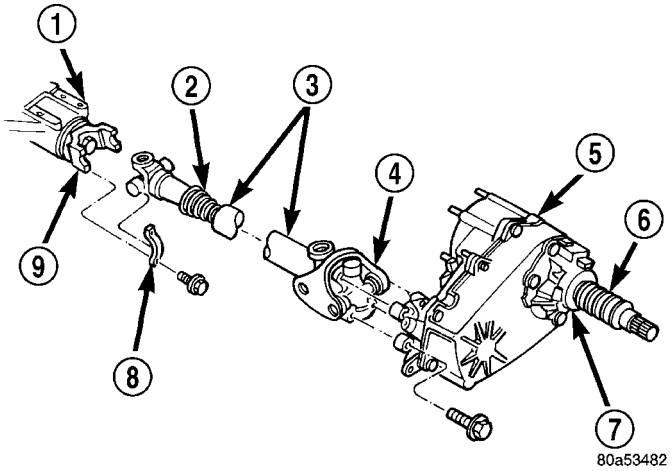

Fig. 10 FRONT PROPELLER SHAFT

1 - FRONT AXLE
2 - BOOT
3 - PROPELLER SHAFT
4 - CV-JOINT
5 - TRANSFER CASE
6 - BOOT
7 - SLINGER
8 - CLAMP
9 - YOKE

INSTALLATION

(1) Install propeller shaft with reference marks aligned.
(2) Loosely install bolts to hold universal joint to transfer case yoke.
(3) Install U-joint strap bolts at the axle yoke and tighten to 19 N·m (14 ft. lbs.).
(4) Install universal joint to transfer case bolts and tighten to 27 N·m (20 ft. lbs.).