SHAFT - PROPELLER REAR

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Mark a line across the shaft and at each end of the propeller shaft for installation reference.

(3) Remove U-joint strap bolts, at pinion shaft yoke.

(4) Pry open clamp, holding dust boot to propeller shaft yoke (Fig. 11).

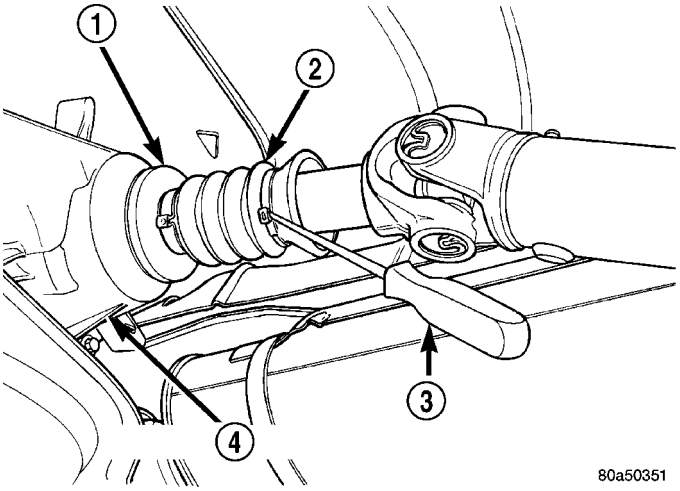

Fig. 11 DUST BOOT CLAMP

1 - SLINGER
2 - BOOT
3 - AWL
4 - TRANSFER CASE

(5) Slide slip yoke off of transmission/transfer case output shaft and remove propeller shaft (Fig. 12).

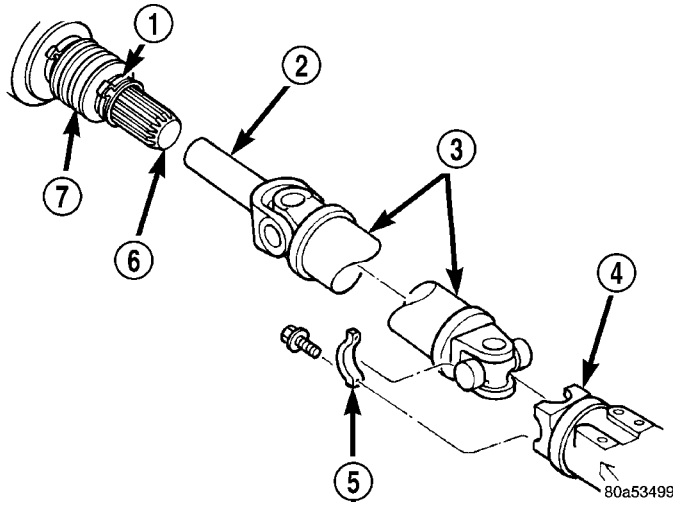

Fig. 12 REAR PROPELLER SHAFT

1 - CLAMP
2 - YOKE
3 - PROPELLER SHAFT
4 - AXLE YOKE
5 - CLAMP
6 - OUTPUT SHAFT
7 - BOOT

INSTALLATION

(1) Slide slip yoke on transmission/transfer case output shaft. Align installation reference marks at axle yoke and install propeller shaft.

(2) Install U-joint strap bolts at axle yoke and tighten to 19 N·m (14 ft. lbs.).

(3) Tighten clamp with Clamp Tool C-4975A to hold dust boot to propeller shaft yoke (Fig. 13).

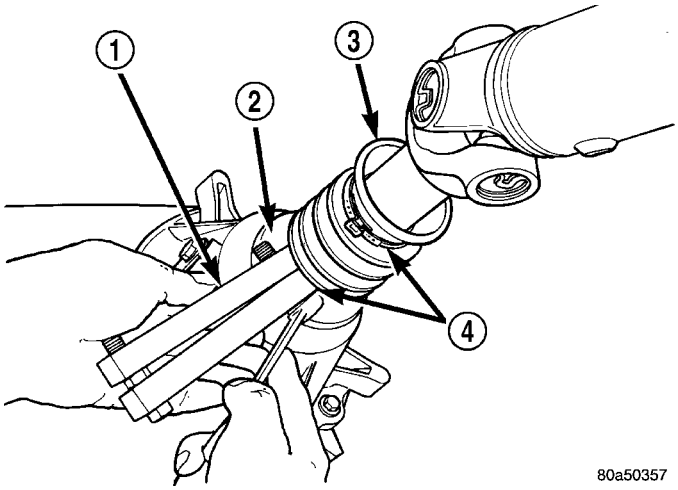

Fig. 13 CRIMPING DUST BOOT CLAMP

1 - CLAMP TOOL
2 - SLINGER
3 - BOOT
4 - CLAMP

SHAFT - PROPELLER REAR RUBICON

REMOVAL

(1) With vihicle in neutral, postion vehicle on hoist.

(2) Mark reference lines across the pinion yoke, transfer case flange and propeller shaft for installation reference.

(3) Remove transfer case flange bolts (Fig. 14) and U-joint strap bolts at the pinion shaft yoke.