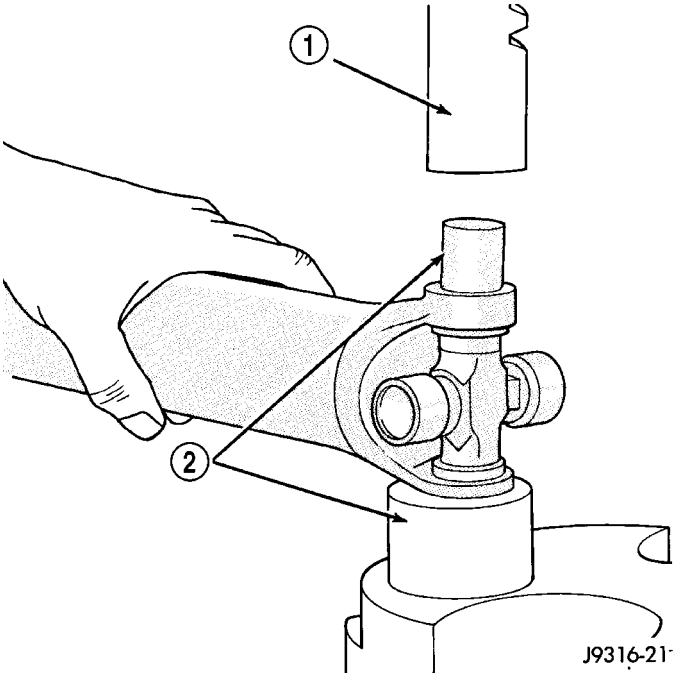

Fig. 17 PRESS OUT BEARING CAP

1 - PRESS
2 - SOCKET

(6) Pull bearing cap of the yoke.

NOTE: If bearing cap will not come out, tap the yoke ear near the bearing cap to dislodge the cap.

(7) Turn yoke over and straighten the cross in the open hole. Then carefully press the end of the cross until the other bearing cap can be removed (Fig. 18).

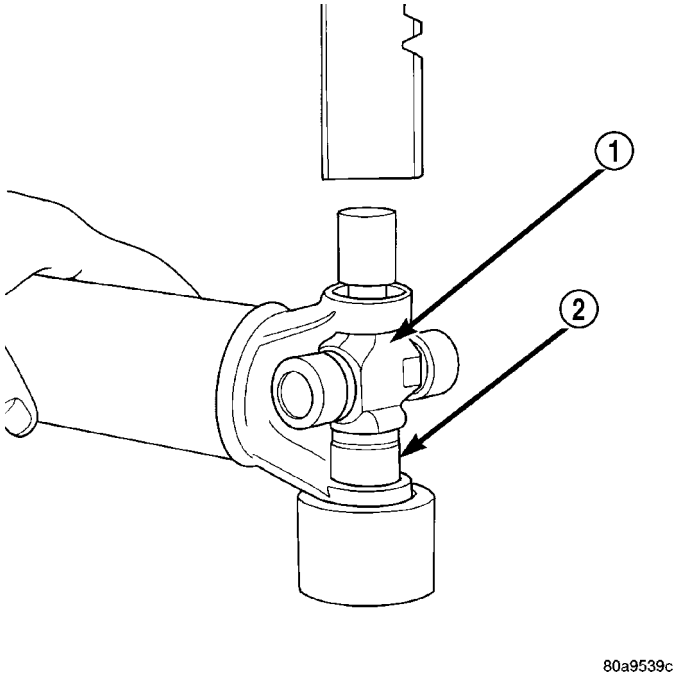

Fig. 18 PRESS OUT BEARING CAP

1 - CROSS
2 - BEARING CAP

DISASSEMBLY - WITH INJECTED RINGS

(1) Place shaft yoke in vise.

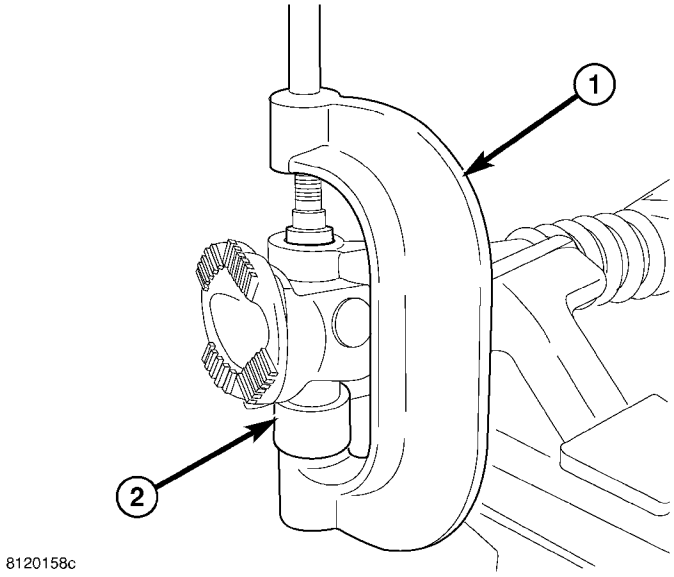

Fig. 19 PRESS ON SHAFT YOKE

1 - PRESS
2 - RECEIVER

(2) Position U-joint press (1) with receiver (2) on propeller shaft yoke (Fig. 19).