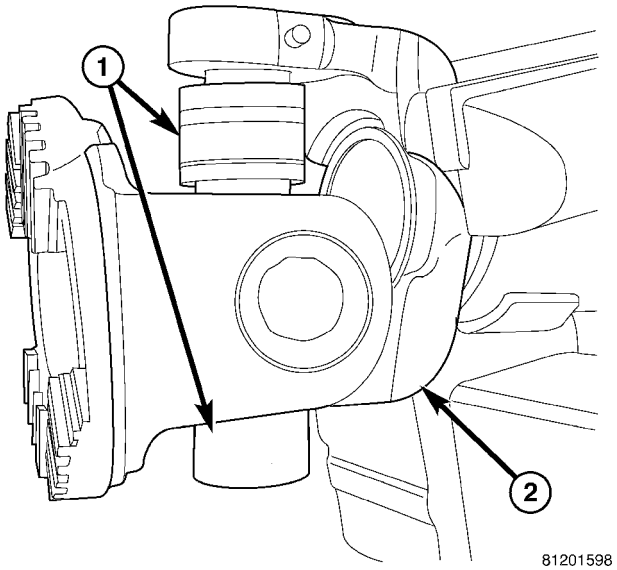

Fig. 20 BEARING OUT OF YOKE

1 - BEARING CAPS
2 - YOKE

(3) Pressed U-joint bearing caps (1) out of shaft yoke (2) (Fig. 20).

(4) Remove lower bearing cap from shaft yoke.

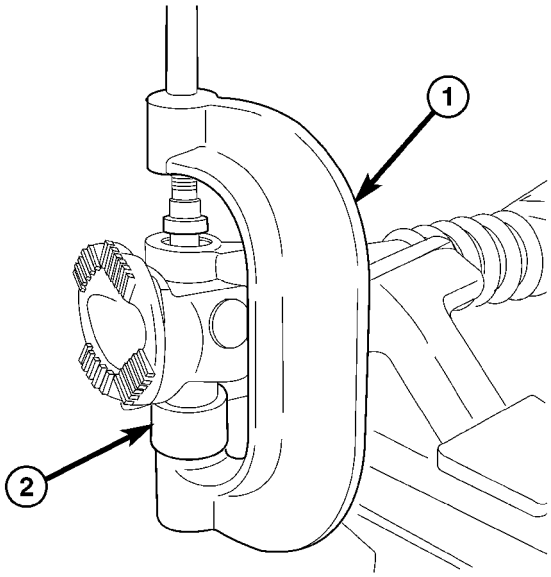

Fig. 21 REMAINING BEARING IN YOKE

1 - PRESS
2 - RECEIVER

(5) Turn shaft over and position press (1) with receiver (2) on shaft yoke (Fig. 21).

(6) Press remaining U-joint bearing cap out of shaft yoke.

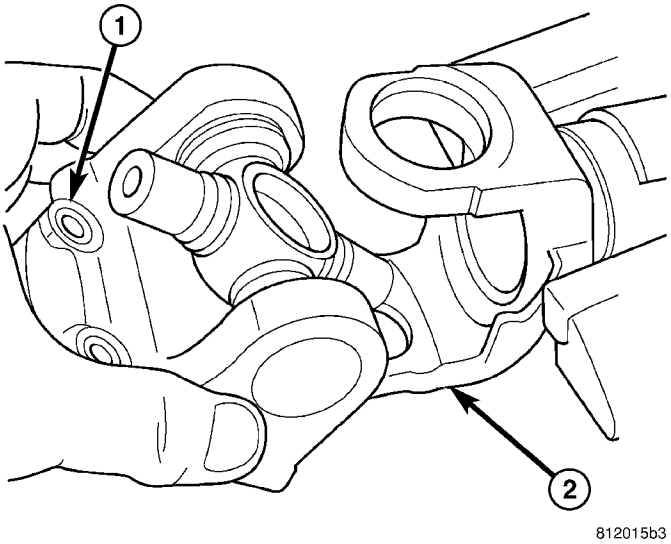

Fig. 22 FLANGE WITH U-JOINT

1 - FLANGE
2 - YOKE

(7) Remove flange (1) with U-joint out of shaft yoke (2) (Fig. 22).

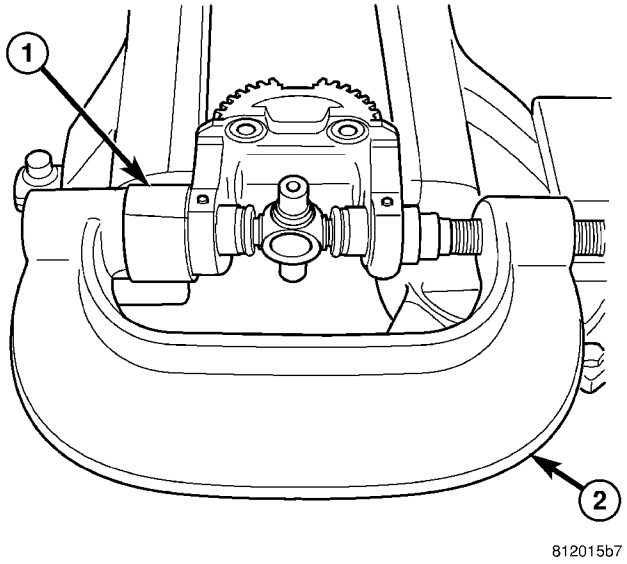

Fig. 23 PRESS ON FLANGE

1 - RECEIVER
2 - PRESS

(8) Position U-joint press (2) with receiver (1) on flange (Fig. 23).