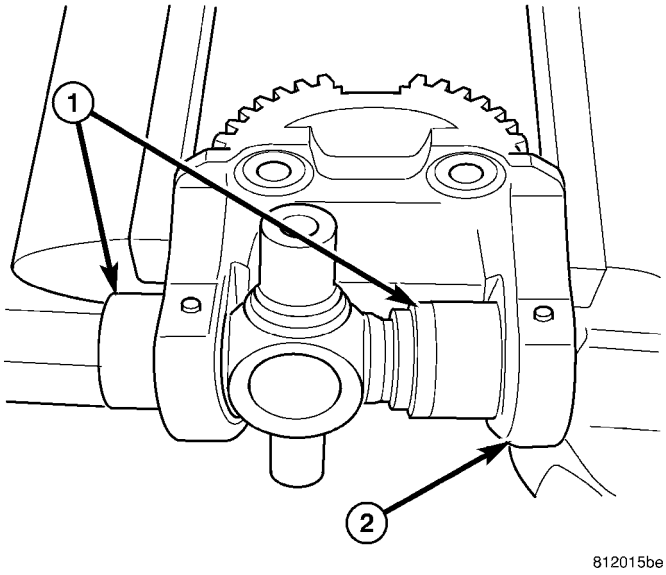

Fig. 24 BEARING OUT OF FLANGE

1 - BEARINGS
2 - FLANGE

(9) Press U-joint bearing caps (1) out of flange (2) (Fig. 24).

(10) Remove bearing cap on the outside of the flange.

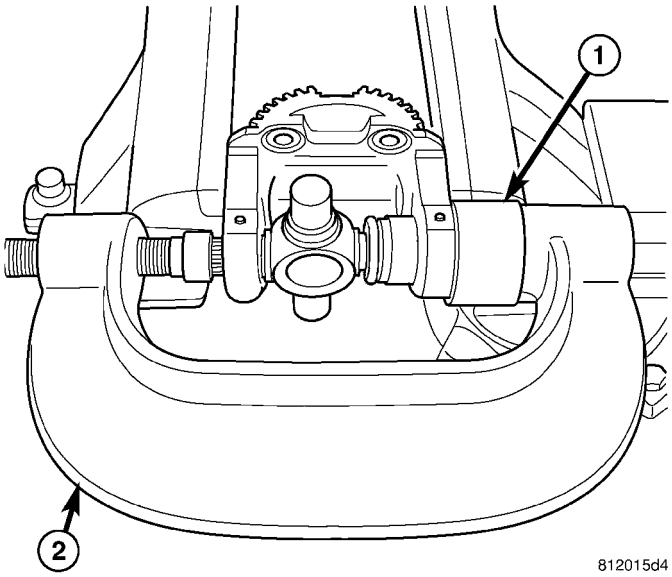

Fig. 25 REMAINING BEARING IN FLANGE

1 - RECEIVER
2 - PRESS

(11) Position U-joint press (2) with receiver (1) on flange (Fig. 25).

(12) Press remaining U-joint bearing cap out of flange.

(13) Remove U-joint from flange.

ASSEMBLY

ASSEMBLY

CAUTION: Keep cross and bearing cap straight during installation. Failure to heed caution may result in damage.

(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores.

(2) Position cross in the yoke with lube fitting if equipped, pointing up (Fig. 26).

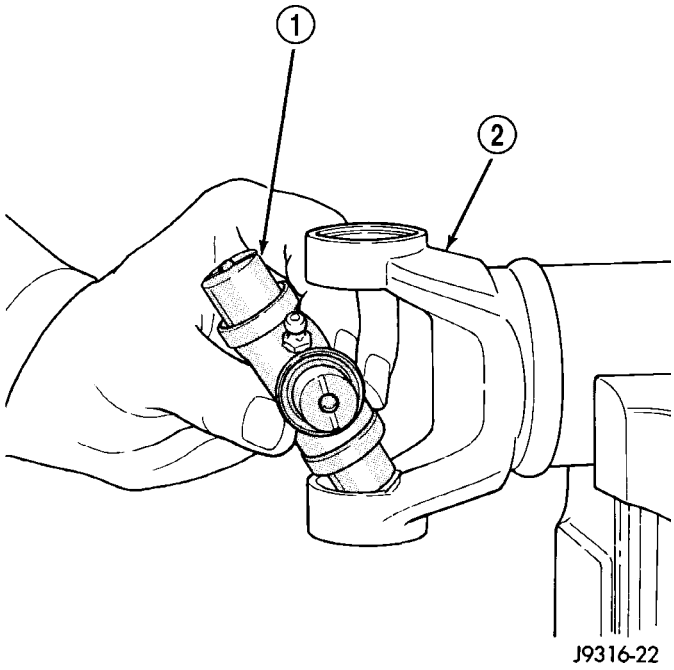

Fig. 26 U-JOINT CROSS

1 - CROSS
2 - YOKE

(3) Place a bearing cap over the trunnion and align cap with yoke bore (Fig. 27).