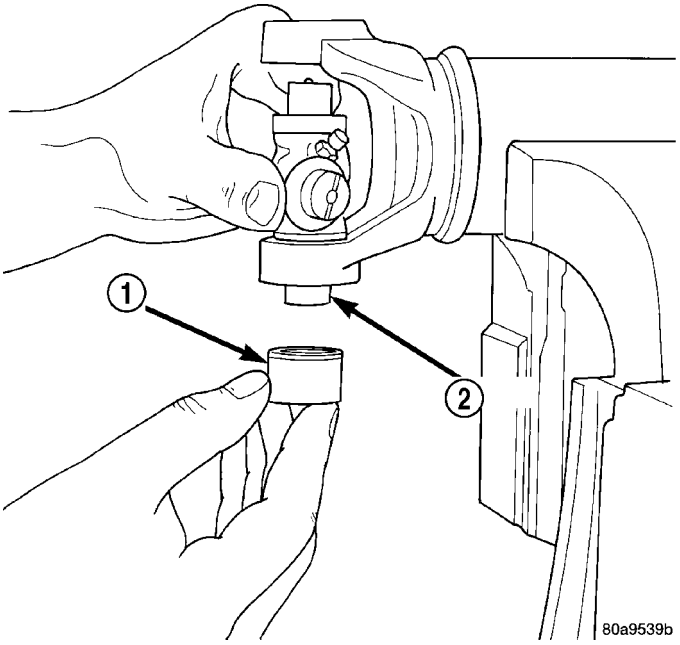

Fig. 27 BEARING AND CROSS

1 - BEARING CAP
2 - TRUNNION

(4) Press bearing cap into the yoke bore enough to clear snap ring groove.

(5) Install a snap ring.

(6) Repeat Step 3 and Step 4 to install the other bearing cap.

NOTE: If joint is stiff or binding, strike the yoke with a soft hammer to seat the needle bearings.

(7) Add grease to lube fitting, if equipped.

ASSEMBLY - WITH INJECTED RINGS

NOTE: Replacement joint has internal snap rings.

(1) Place joint in flange with one bearing cap.

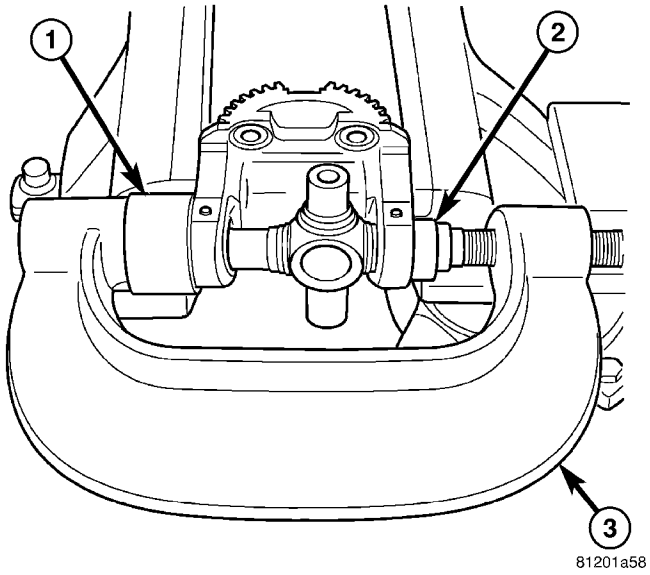

Fig. 28 PRESS ON FLANGE

1 - RECEIVER
2 - BEARING
3 - PRESS

(2) Position press (3) with receiver (1) on flange and bearing cap (2) (Fig. 28).

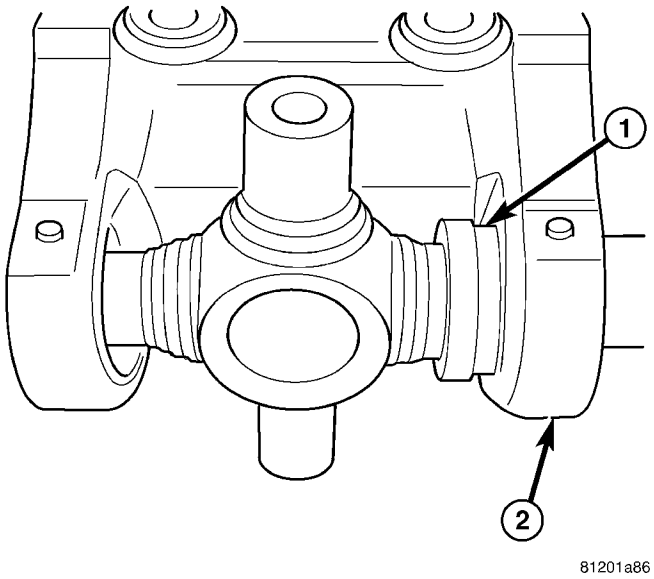

Fig. 29 SNAP RING GROOVE

1 - YOKE
2 - GROOVE

(3) Press bearing cap until snap ring groove (1) is through the flange (2) (Fig. 29).