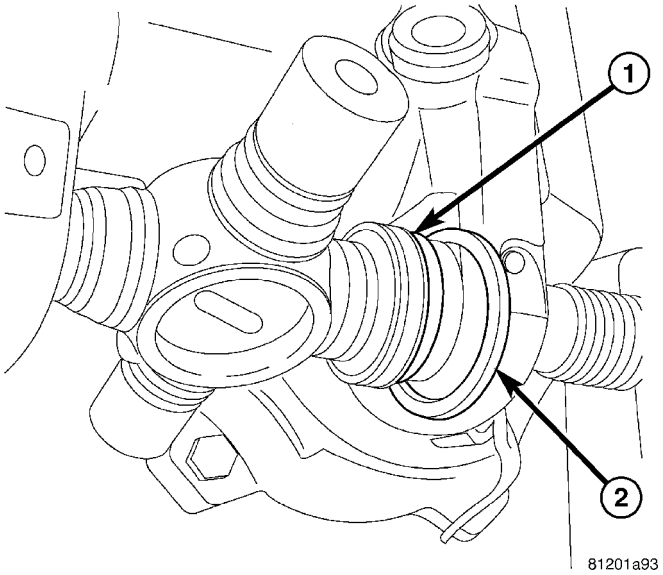

Fig. 30 SNAP RING

1 - BEARING
2 - SNAP RING

(4) Install snap ring (2) on bearing (1) (Fig. 30).

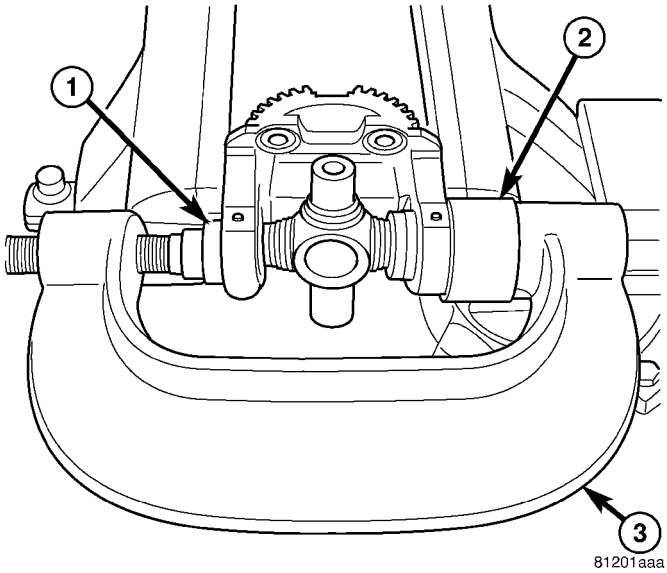

Fig. 31 REMAINING BEARING IN FLANGE

1 - BEARING
2 - RECEIVER
3 - PRESS

(5) Position press (3) with receiver (2) on remaining bearing cap (1) and flange (Fig. 31).

(6) Press bearing cap until snap ring groove is through the flange.

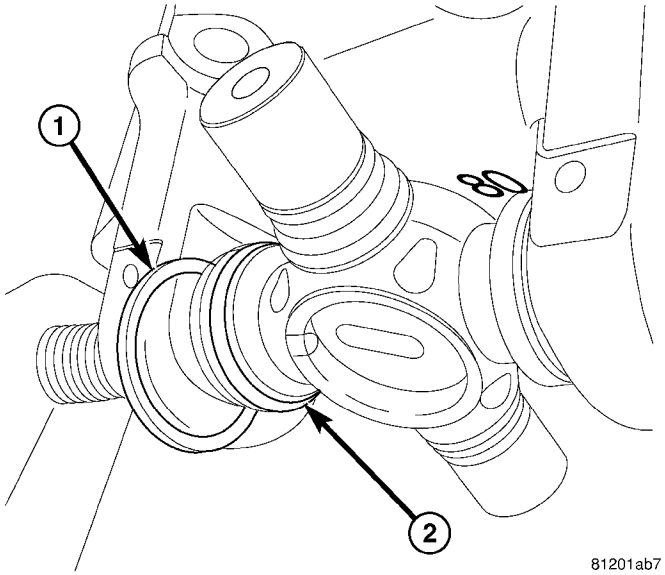

Fig. 32 REMAINING SNAP RING ON FLANGE

1 - SNAP RING
2 - BEARING

(7) Install snap ring (1) on bearing cap (2) (Fig. 32).

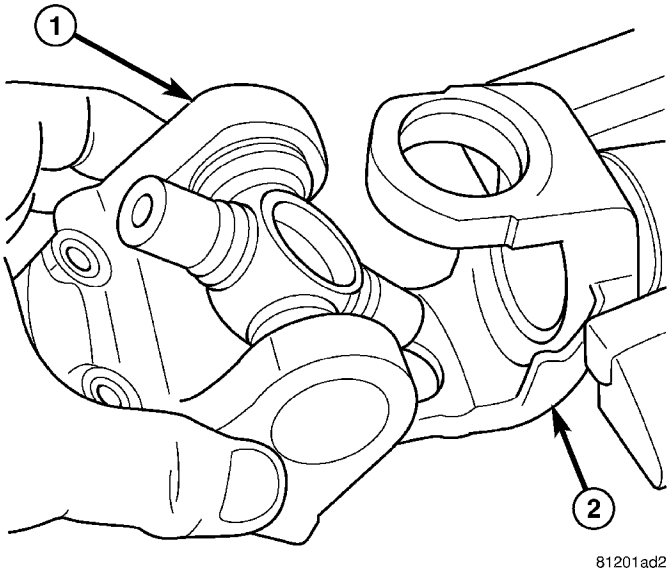

Fig. 33 FLANGE WITH U-JOINT

1 - FLANGE
2 - YOKE

(8) Install flange (1) with U-joint in yoke (2) (Fig. 33).