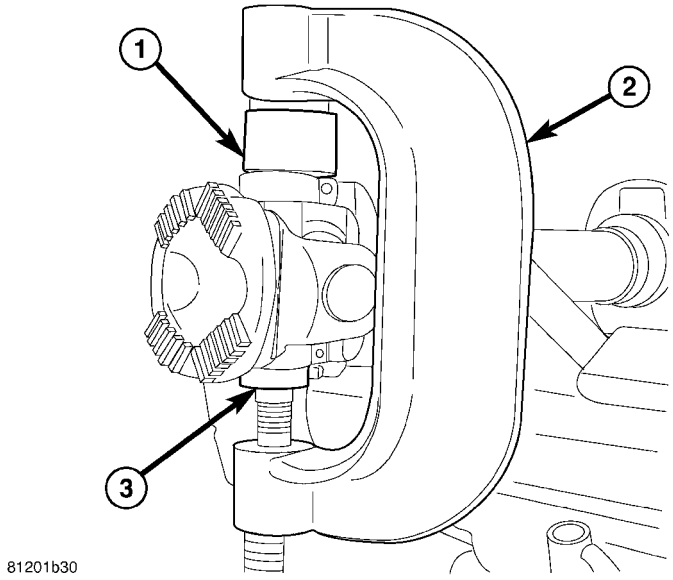

Fig. 34 PRESS ON YOKE

1 - RECEIVER
2 - PRESS
3 - BEARING

(9) Position press (2) with receiver (1) and lower bearing cap (3) on yoke (Fig. 34).

(10) Press bearing cap until snap ring groove is through the yoke.

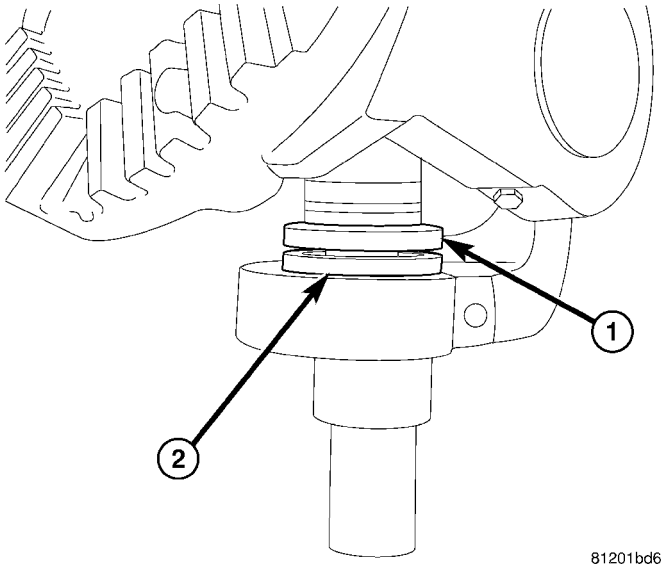

Fig. 35 SNAP RING

1 - BEARING
2 - SNAP RING

(11) Install snap ring (2) on bearing cap (1) (Fig. 35).

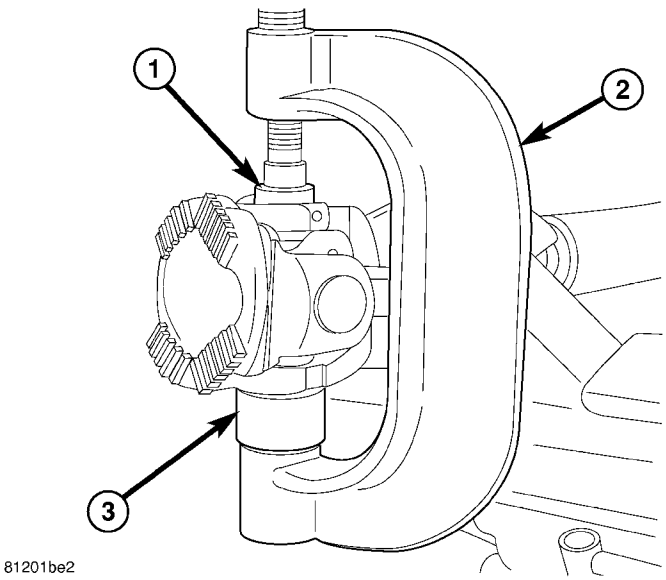

Fig. 36 REMAINING BEARING ON YOKE

1 - BEARING
2 - PRESS
3 - RECEIVER

(12) Position press (2) with receiver (3) on remaining bearing cap (1) and yoke (Fig. 36).

(13) Press remaining bearing cap until snap ring groove is through the yoke.

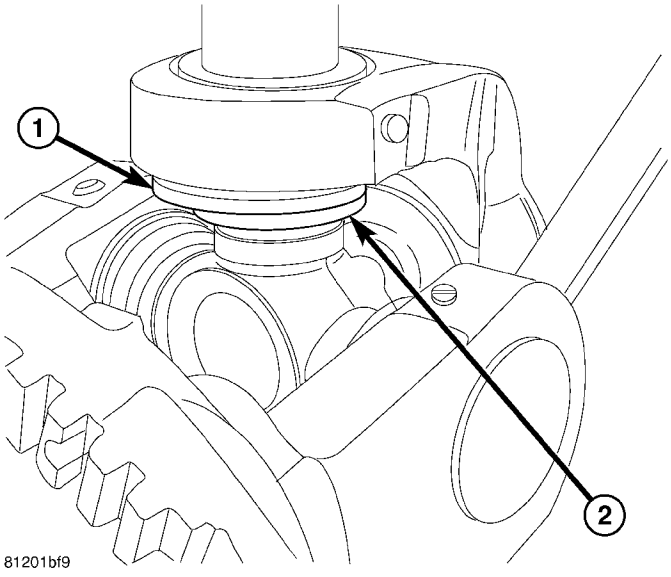

Fig. 37 REMAINING SNAP RING

1 - BEARING
2 - SNAP RING

(14) Install snap ring (2) on bearing cap (1) (Fig. 37).