UNIVERSAL JOINT - DOUBLE CARDAN

DISASSEMBLY

NOTE: Individual components of cardan universal joints are not serviceable they must be replaced as an assembly.

(1) Mark propeller shaft yoke and link yoke for assembly reference.
(2) Tap the outside of the bearing cap assembly with drift to loosen snap rings.
(3) Remove all bearing cap snap rings (Fig. 38).

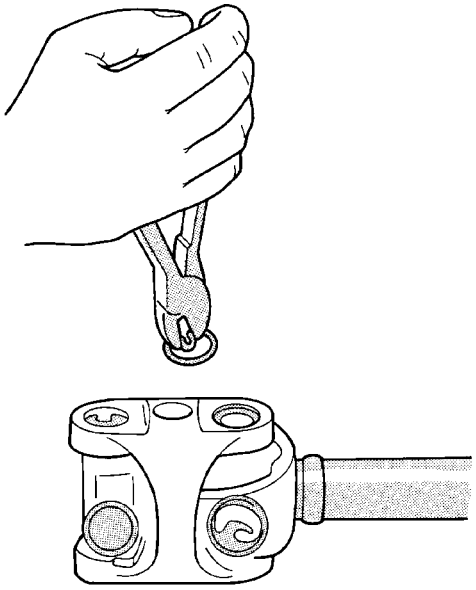

Fig. 38 SNAP RINGS

(4) Remove any grease fittings if equipped.
(5) Position a socket on the press with an inside diameter large enough to receive the bearing cap under the link yoke.
(6) Place another socket with an outside diameter smaller than the bearing cap on the upper bearing cap.
(7) Press one bearing cap from the outboard side of the link yoke enough to grasp the cap with vise jaws (Fig. 39).

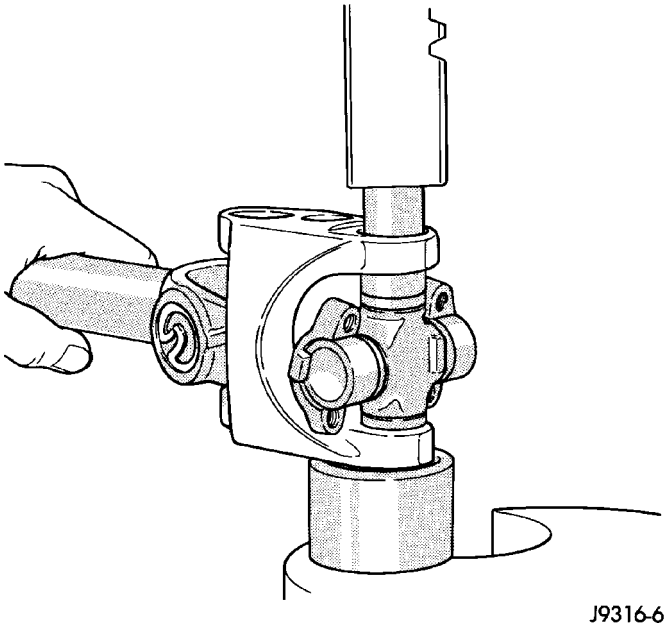

Fig. 39 PRESS OUT BEARING

(8) Grasp protruding bearing cap with vise jaws and tap link yoke with a mallet and drift to remove bearing cap (Fig. 40).

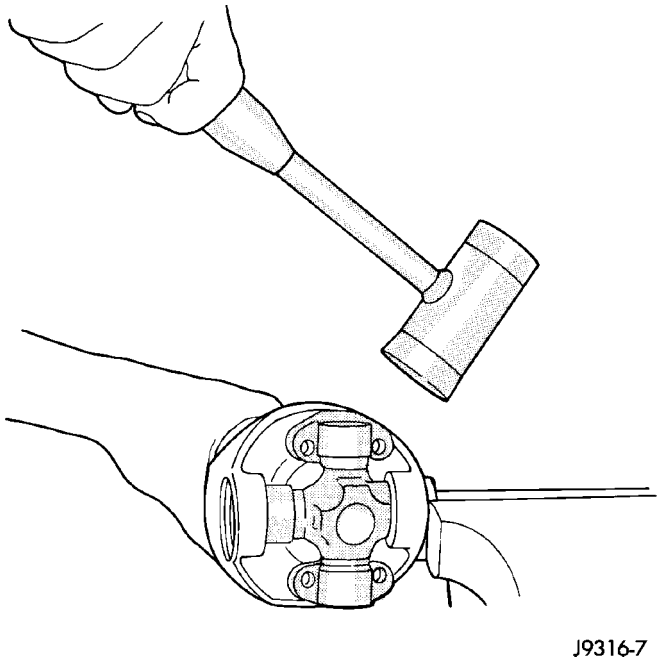

Fig. 40 REMOVE BEARING FROM YOKE

(9) Flip assembly and repeat Step 5, Step 6, Step 7 and Step 8 to remove the opposite bearing cap.
(10) Remove cross centering kit assembly and spring (Fig. 41).