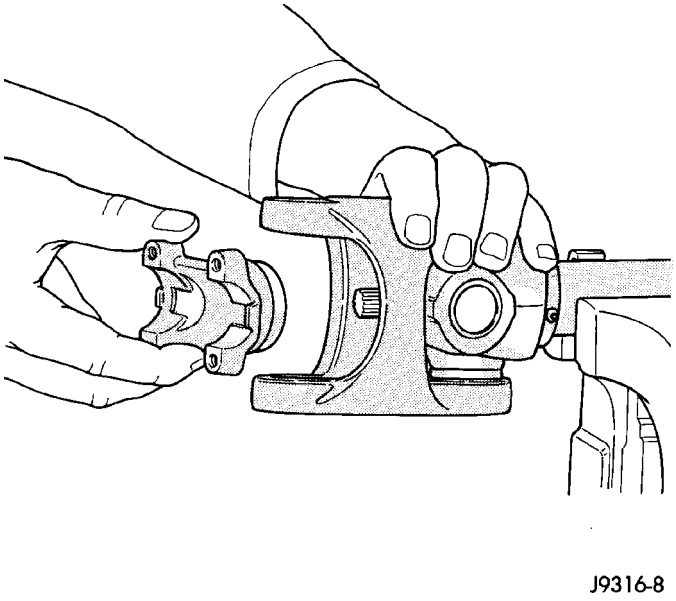


Fig. 41 CENTERING KIT

(11) Press remaining bearing caps out the other end of the link yoke, as described above to complete the disassembly.

ASSEMBLY

CAUTION: Alignment marks on link yoke and propeller shaft yoke must be aligned during assembled. Keep needle bearings upright in the bearing cap. Failure to heed caution may result in damage.

(1) Apply extreme pressure (EP) N.L.G.I. Grade 1 or 2 grease to inside of yoke bores.

(2) Fit a cross into propeller shaft yoke (Fig. 42).

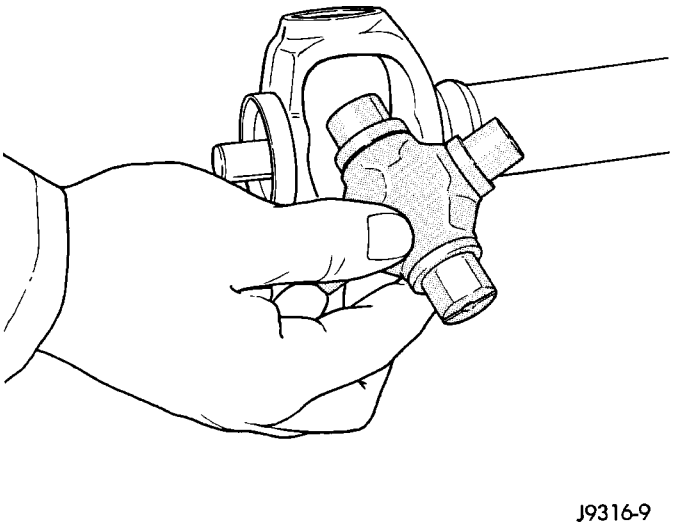


Fig. 42 INSTALL CROSS IN YOKE

(3) Place a bearing cap over the trunnion and align cap with the yoke bore (Fig. 43).

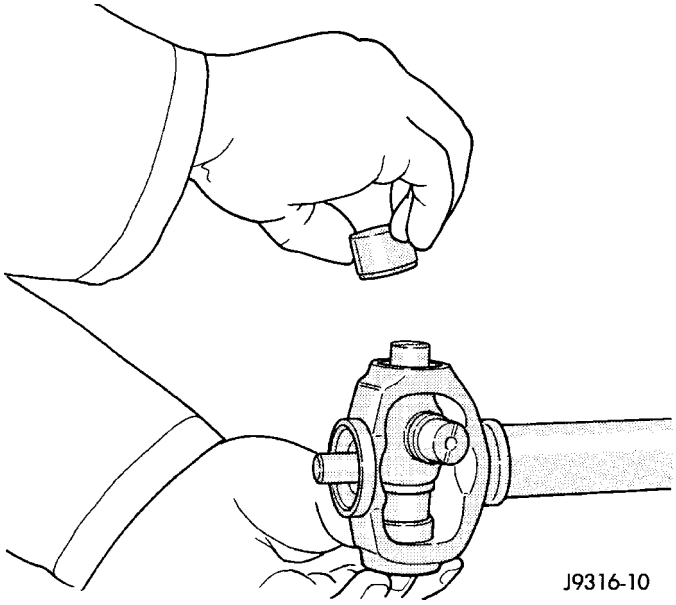


Fig. 43 INSTALL BEARING CAP

(4) Press bearing cap into the yoke bore enough to clear snap ring groove (Fig. 44).

(5) Install a snap ring.

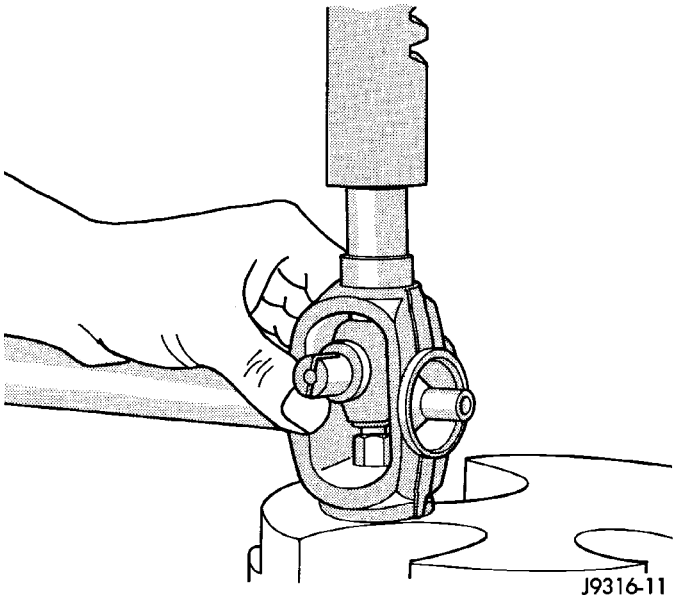


Fig. 44 PRESS BEARING CAP

(6) Flip propeller shaft yoke and install other bearing cap onto the opposite trunnion and install a snap ring (Fig. 45).