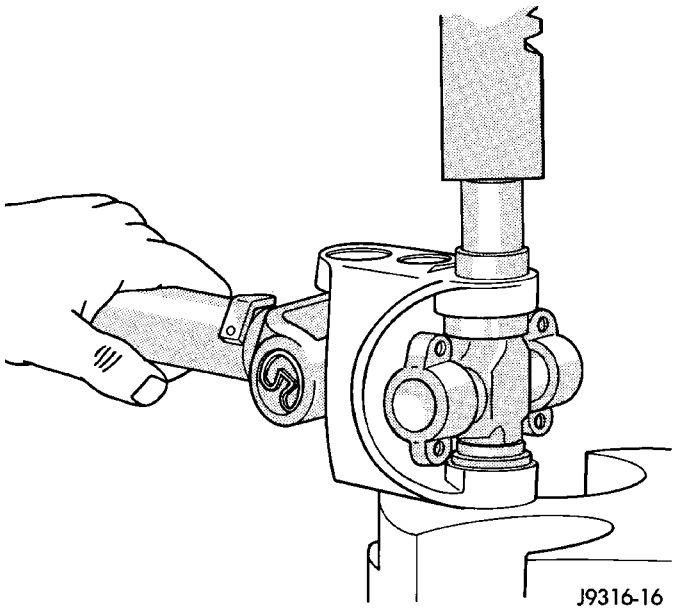

Fig. 49 PRESS BEARING CAP

(11) Tap snap rings to seat them into the grooves (Fig. 50).

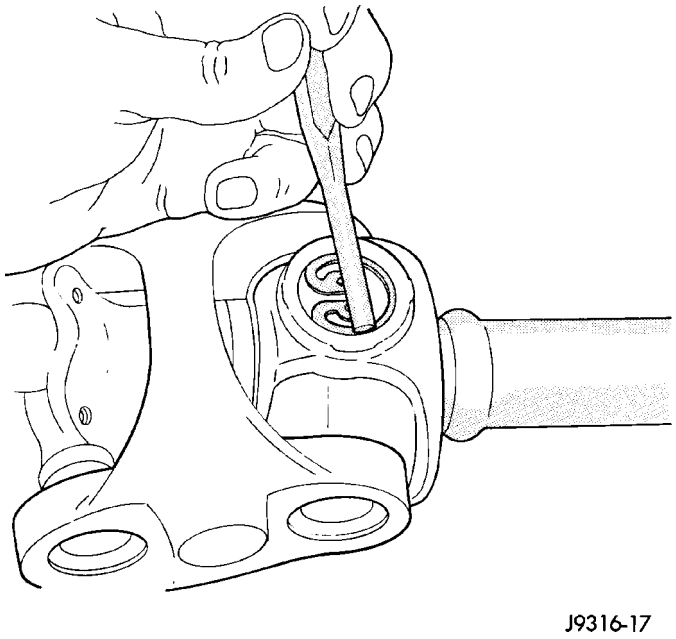

Fig. 50 SEAT SNAP RINGS

(12) Flexing joint beyond center, the joint should snap over-center in both directions if assembled correctly (Fig. 51).

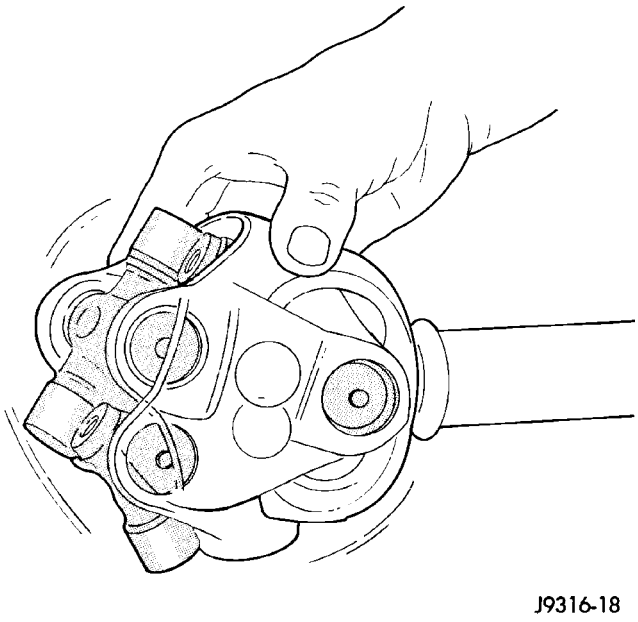

Fig. 51 VERIFY ASSEMBLY