(6) Install shock absorbers and tighten the bolts (Fig. 6) to torque specification.

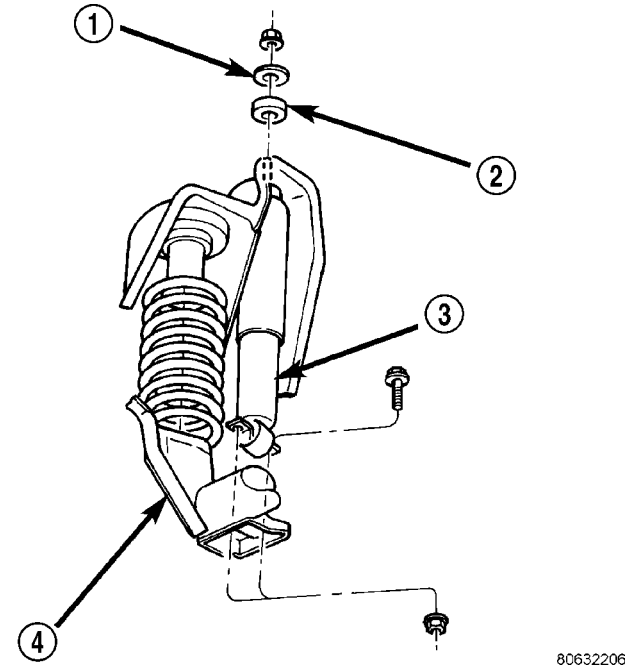

Fig. 6 COIL SPRING & SHOCK ABSORBER

1 - RETAINER
2 - GROMMET
3 - SHOCK
4 - FRONT AXLE

(7) Install stabilizer bar links to the axle brackets and tighten nuts (Fig. 7) to torque specification.

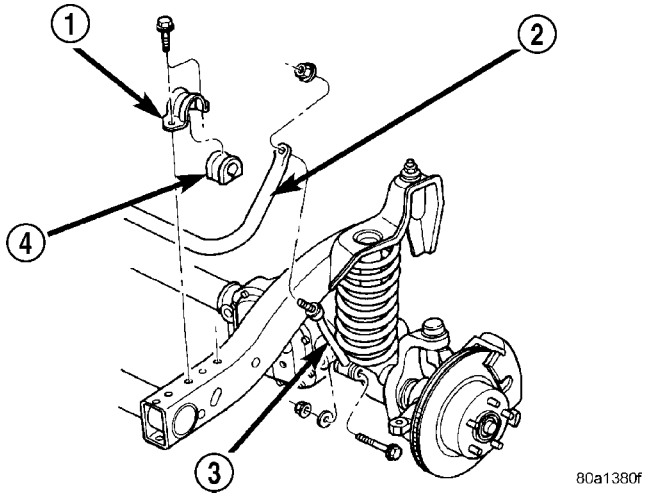

Fig. 7 STABILIZER BAR

1 - RETAINER
2 - STABILIZER BAR
3 - LINK
4 - BUSHING

(8) Install drag link and tie rod and tighten nut to torque specification

(9) Install steering damper to the axle bracket and tighten nut to torque specification.

(10) Install brake components.

(11) Install propeller shaft.

(12) Remove lift from the axle and lower vehicle.

(13) Tighten upper and lower control arm nuts to torque specification.

(14) Tighten track bar bolt at the axle bracket to torque specification.

(15) Check the front wheel alignment.

ADJUSTMENTS

Ring and pinion gears are supplied as matched sets only. The identifying numbers for the ring and pinion gear are etched/marked onto each gear (Fig. 8). A plus (+) number, minus (–) number or zero (0) is etched/marked on the pinion gear. This number is the amount (in thousandths of an inch) the depth varies from the standard depth setting of a pinion etched/marked with a (0). The standard setting from the center line of the ring gear to the back face of the pinion is 92.08 mm (3.625 in.). The standard depth provides the best gear tooth contact pattern.

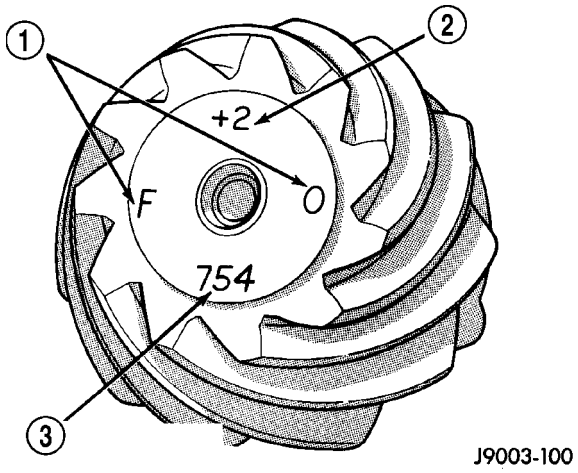

Fig. 8 PINION GEAR ID NUMBERS

1 - PRODUCTION NUMBERS
2 - PINION GEAR DEPTH VARIANCE
3 - GEAR MATCHING NUMBER

Compensation for pinion depth variance is achieved with a select shim/oil slinger. The shims are placed between the rear pinion bearing and the pinion gear head (Fig. 9).