(1) Remove differential side bearings from differential case.

(2) Remove factory installed shims from differential case.

(3) Install ring gear on differential case and tighten bolts to specification.

(4) Install dummy side bearings D-348 on differential case.

(5) Install differential case in the housing.

(6) Install marked bearing caps in their correct positions. Install and snug the bolts (Fig. 15).

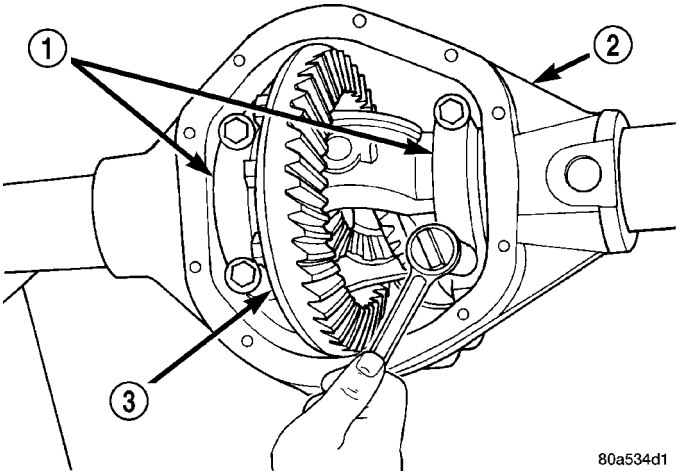

Fig. 15 BEARING CAP BOLTS

1 - BEARING CAP
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

(7) With a dead-blow hammer, seat the differential dummy bearings to each side of the housing (Fig. 16) and (Fig. 17).

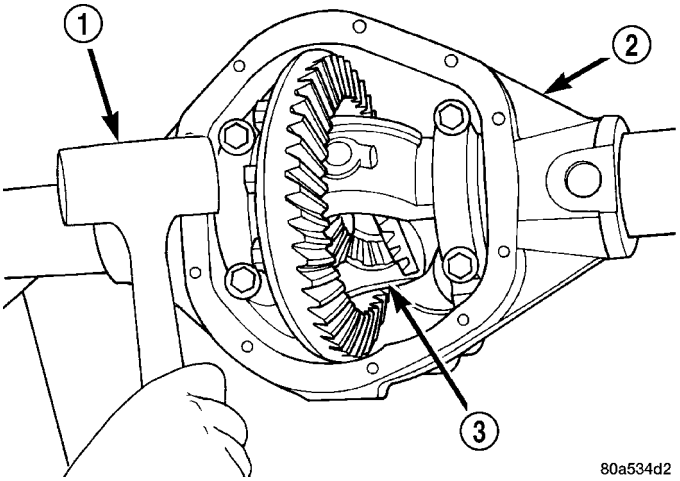

Fig. 16 SEAT DUMMY BEARINGS PINION SIDE

1 - MALLET
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

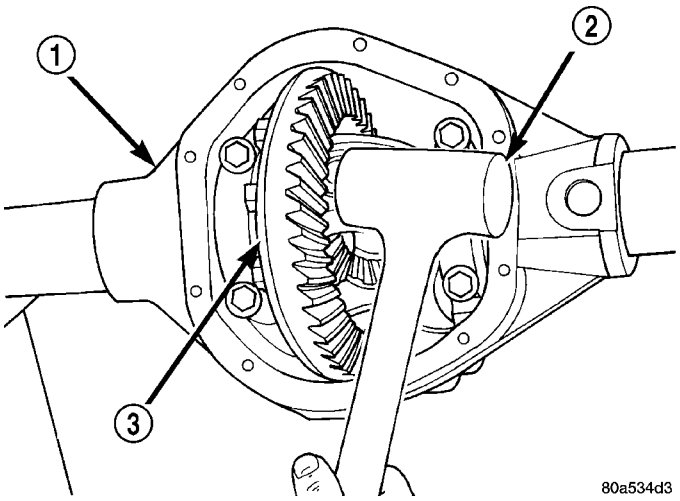

Fig. 17 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - MALLET
3 - DIFFERENTIAL CASE

(8) Thread Pilot Stud C-3288-B into rear cover bolt hole below ring gear (Fig. 18).

(9) Attach the Dial Indicator C-3339 to pilot stud. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 18).

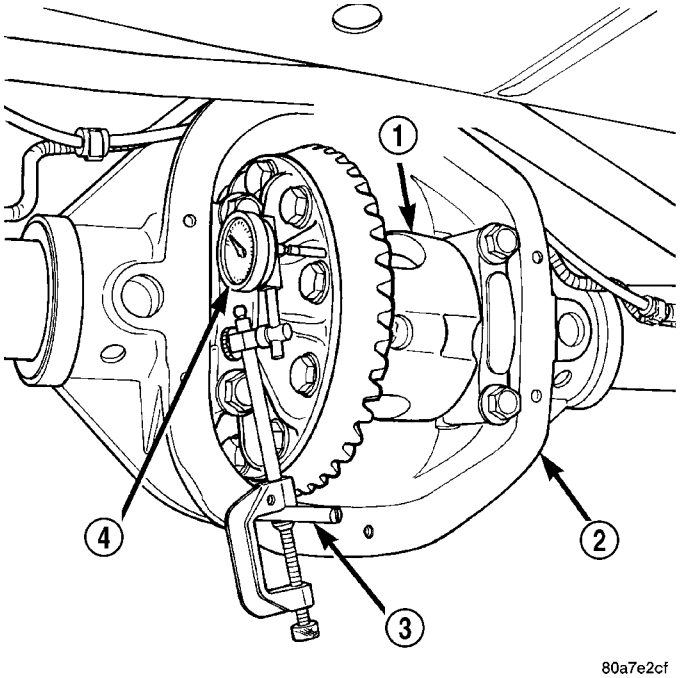

Fig. 18 DIFFERENTIAL SIDE PLAY MEASUREMENT

1 - DIFFERENTIAL CASE
2 - DIFFERENTIAL HOUSING
3 - PILOT STUD
4 - DIAL INDICATOR

(10) Push and hold differential case to pinion gear side of the housing and zero dial indicator (Fig. 19).