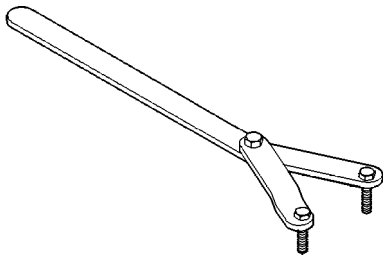

SPANNER WRENCH 6958

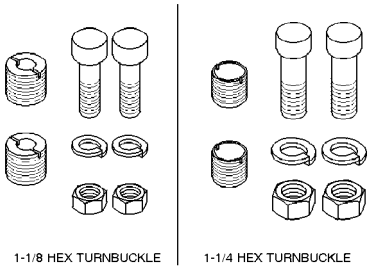

ADAPTER KIT 6987B

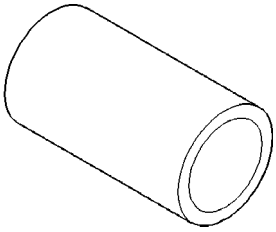

CUP 8109

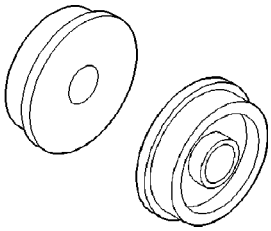

INSTALLER DISCS 8110

SHAFT - AXLE

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake components.

(3) Remove cotter pin, nut retainer and axle hub nut.

(4) Remove hub bearing bolts (Fig. 28).

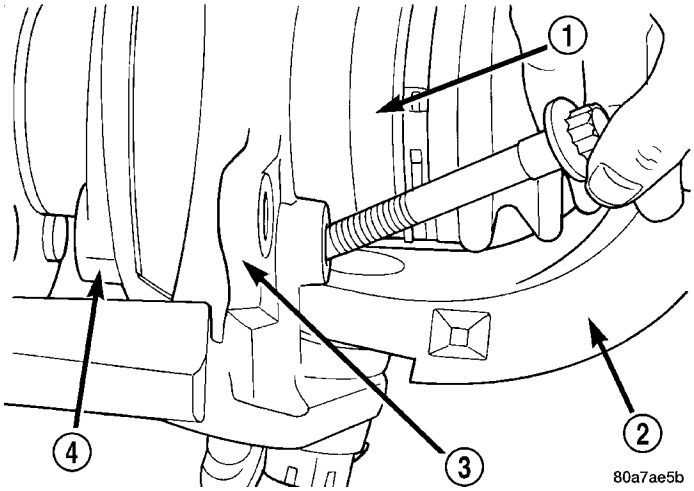

Fig. 28 HUB BEARING BOLTS

1 - AXLE SHAFT
2 - AXLE
3 - KNUCKLE
4 - HUB BEARING

(5) Remove hub bearing from steering knuckle.

(6) Remove axle shaft assembly (Fig. 29) from axle

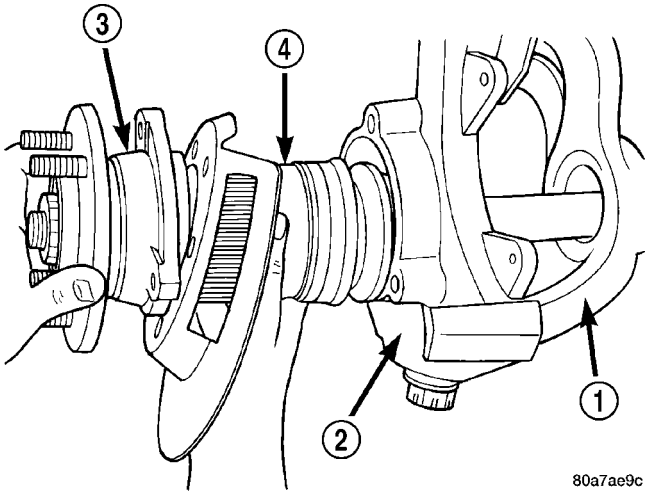

Fig. 29 HUB BEARING AND AXLE ASSEMBLY

1 - AXLE
2 - KNUCKLE
3 - HUB BEARING
4 - AXLE SHAFT

(7) Remove brake rotor shield from the hub bearing or knuckle.

INSTALLATION

(1) Clean axle shaft and apply a thin film of Mopar Wheel Bearing Grease or equivalent to the shaft splines, seal contact surface and hub bore.

(2) Install brake rotor shield on knuckle.

(3) Install axle shaft into differential side gears.

(4) Install hub bearing and tighten bolts to 102 N·m (75 ft. lbs.).