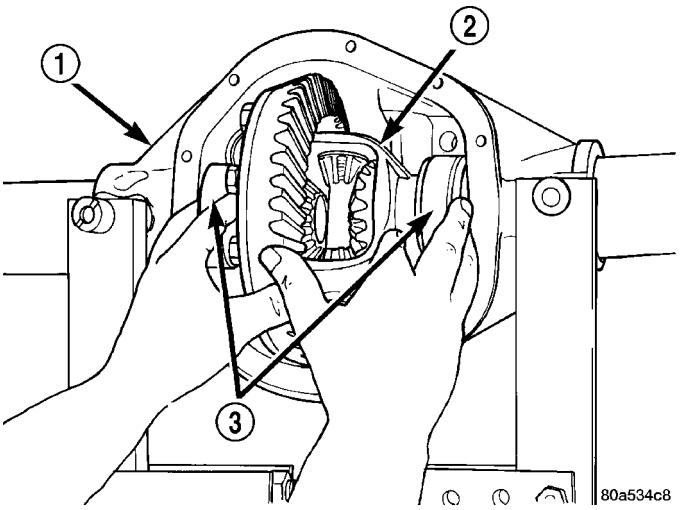

Fig. 32 DIFFERENTIAL CASE

1 - AXLE HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

(4) Remove inner axle shaft seals with a pry bar.

INSTALLATION

(1) Remove any sealer remaining from original seals.

(2) Install oil seals with Discs 8110 and Turnbuckle 6797 (Fig. 33). Tighten tool until disc bottoms in housing.

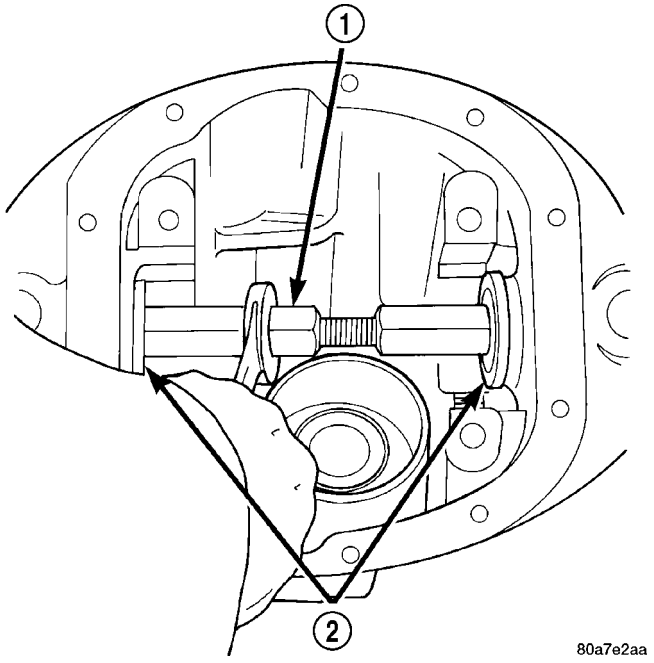

Fig. 33 AXLE SEAL INSTALLATION

1 - TURNBUCKLE
2 - DISCS

(3) Install differential and axle shafts.

UNIVERSAL JOINT - SINGLE CARDAN

REMOVAL

CAUTION: Clamp only the narrow forged portion of the yoke in the vise. Failure to heed caution may result in damage.

(1) Remove axle shaft.

(2) Remove bearing cap retaining snap rings (Fig. 34).

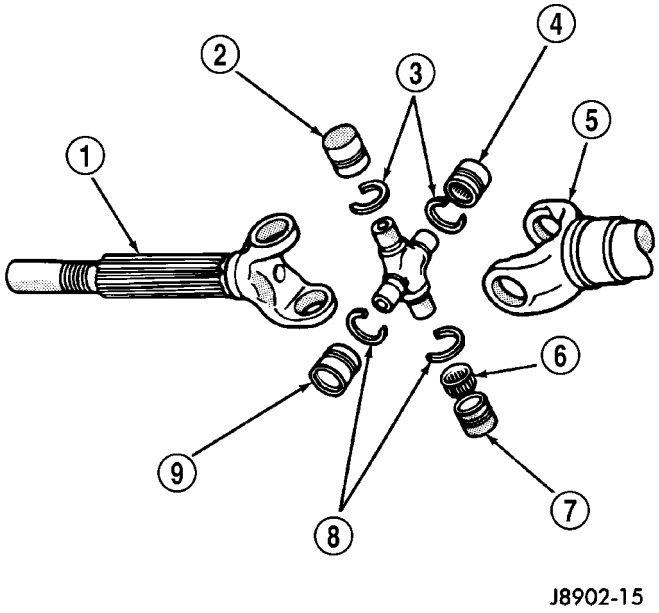

Fig. 34 AXLE SHAFT OUTER U-JOINT

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

NOTE: Saturate the bearing caps with penetrating oil prior to removal.

(3) Place a socket (receiver) with an inside diameter larger than the bearing cap against the yoke and the perimeter of the bearing cap to be removed.

(4) Place a socket (driver) with an outside diameter smaller than the bearing cap against the opposite bearing cap.

(5) Position yoke with the sockets in a vise (Fig. 35).