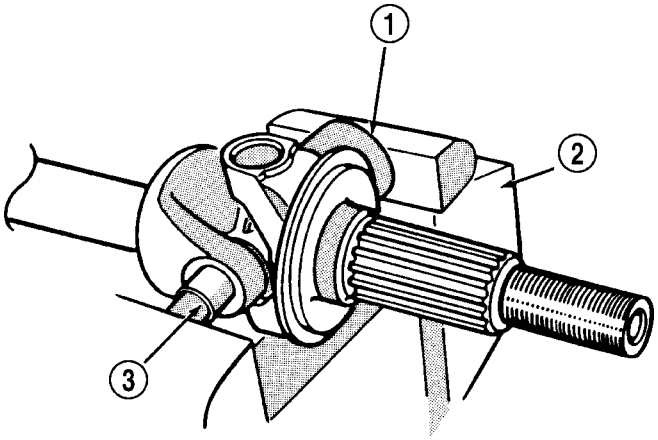

J8902-16

Fig. 35 YOKE BEARING CAP REMOVAL

1 - LARGE-DIAMETER SOCKET
2 - VISE
3 - SMALL-DIAMETER SOCKET

(6) Tighten vise jaws, to force bearing cap into the socket (receiver).

(7) Release vise jaws. Remove sockets and bearing cap forced out of the yoke.

(8) Repeat above procedure for the remaining bearing cap and remove cross from propeller shaft yoke.

INSTALLATION

CAUTION: Keep cross and bearing cap straight during installation. Failure to heed caution may result in damage.

(1) Pack bearing caps 1/3 full of wheel bearing lubricant (Fig. 36). Apply extreme pressure (EP), lithium-base lubricant to aid in installation.

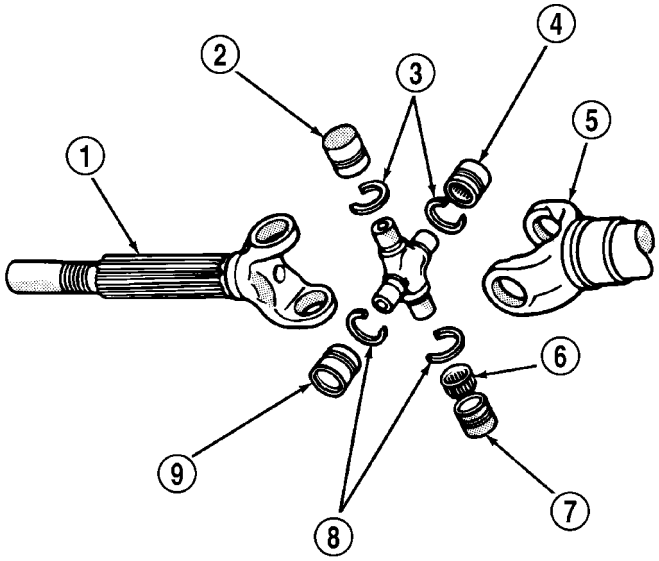

J8902-15

Fig. 36 AXLE SHAFT OUTER U-JOINT

1 - SHAFT YOKE
2 - BEARING CAP
3 - SNAP RINGS
4 - BEARING CAP
5 - SPINDLE YOKE
6 - BEARING
7 - BEARING CAP
8 - SNAP RINGS
9 - BEARING CAP

(2) Position cross in the yoke. Insert seals and bearings, then tap bearing caps into the yoke bores far enough to hold spider in position.

(3) Place socket (driver) against one bearing cap. Position yoke with the socket in a vise.

(4) Tighten vise to force bearing caps into the yoke. Force the caps enough to install retaining clips.

(5) Install bearing cap retaining clips.

(6) Install axle shaft.

SEAL - PINION

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake rotors and calipers.

(3) Remove propeller shaft from the yoke.

(4) Rotate pinion gear three or four times.

(5) Record rotating torque of the pinion gear with an inch pound torque wrench, for installation reference.

(6) Hold pinion yoke with Wrench 6958 and remove pinion nut and washer.

(7) Remove pinion yoke with Remover C-452 and Wrench C-3281 (Fig. 37).