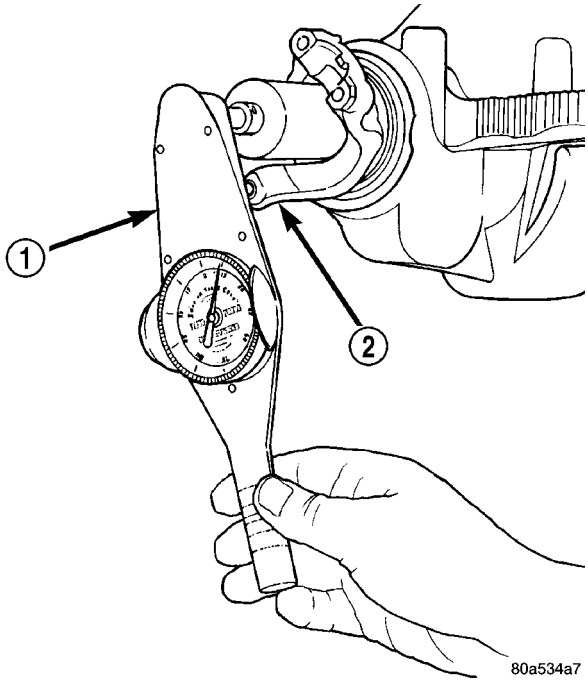

Fig. 40 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE

(6) If rotating torque is low, use Spanner 6958 (Fig. 41) to hold the pinion yoke and tighten pinion shaft nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

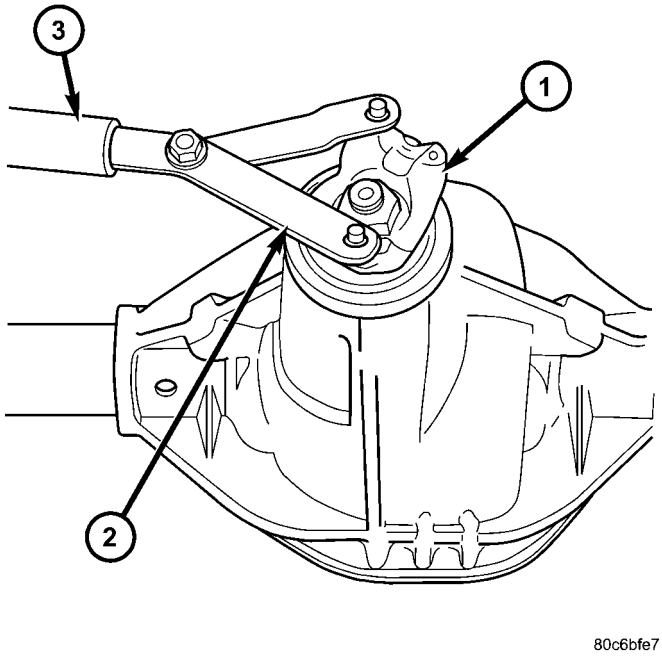

Fig. 41 YOKE HOLDER

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(7) Install propeller shaft with reference marks aligned.

(8) Install brake rotors and calipers.

SPACER - COLLAPSIBLE

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake rotors and calipers.
(3) Remove propeller shaft from axle yoke.
(4) Rotate pinion gear three or four times.
(5) Record rotating torque of the pinion gear with an inch pound torque wrench.
(6) Hold pinion yoke with Spanner Wrench 6958 and remove pinion nut and washer.
(7) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 42).

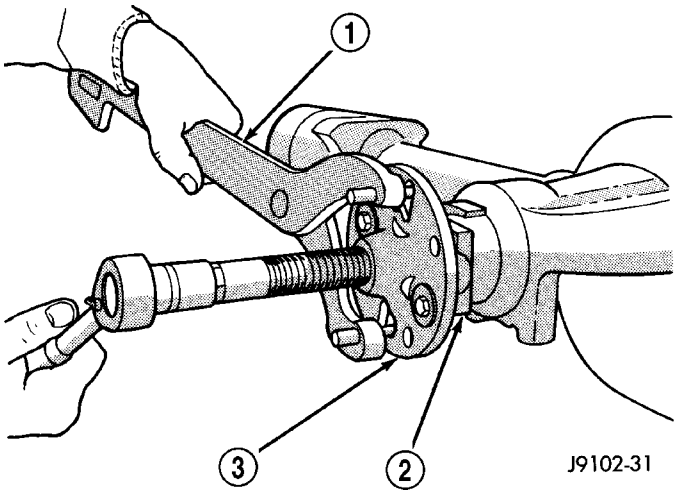

Fig. 42 PINION YOKE REMOVER

1 - WRENCH
2 - PINION YOKE
3 - REMOVER

(8) Remove pinion seal with a suitable pry tool or a slide hammer mounted screw.
(9) Remove front pinion bearing off pinion gear shaft, with a pair of pick tools. If bearing becomes bound on the shaft, lightly tap the end of the pinion gear with a rubber hammer.
(10) Remove collapsible spacer.

INSTALLATION

(1) Install **new** collapsible spacer on pinion shaft.
(2) Install front pinion bearing.
(3) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 43).