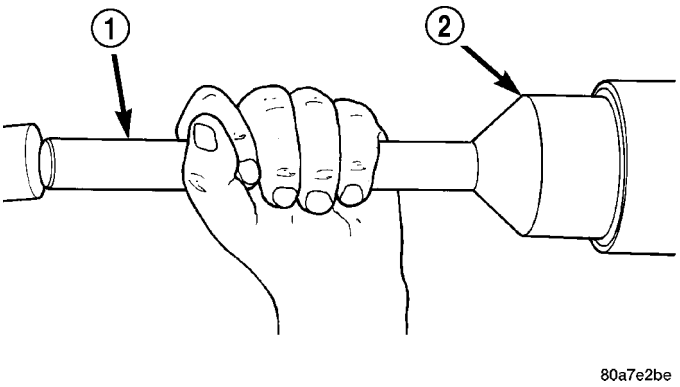

Fig. 43 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(4) Install yoke with Installer W-162-D, Cup 8109 and Spanner Wrench 6958 (Fig. 44).

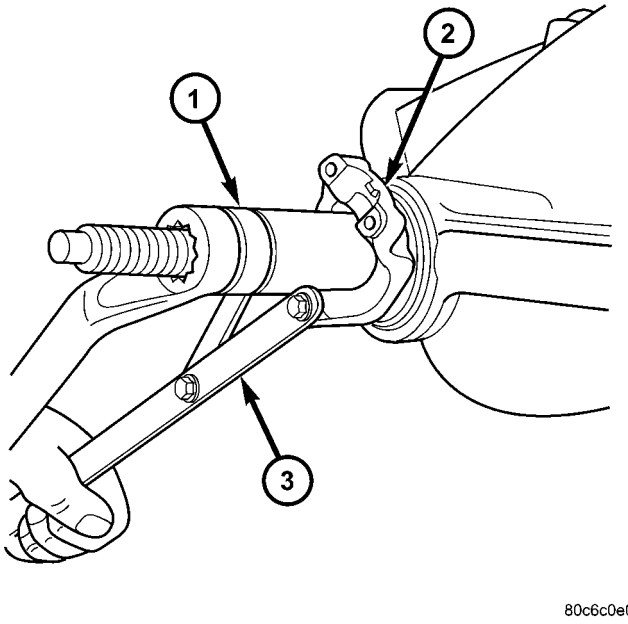

Fig. 44 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(5) Install pinion washer and **new** nut and tighten nut to 217 N·m (160 ft. lbs.).

CAUTION: Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. Failure to heed caution may result in damage.

(6) With yoke Spanner Wrench 6958 and a torque wrench set at 678 N·m (500 ft. lbs.), slowly tighten nut (Fig. 45) in 6.8 N·m (5 ft. lbs.) increments until rotating torque is achieved. Measure rotating torque with inch pound torque wrench frequently to avoid over crushing the collapsible spacer (Fig. 46).

CAUTION: If more than 687 N·m (500 ft. lbs.) torque is required to crush the collapsible spacer, the spacer is defective and must be replaced. Failure to heed caution may result in damage.

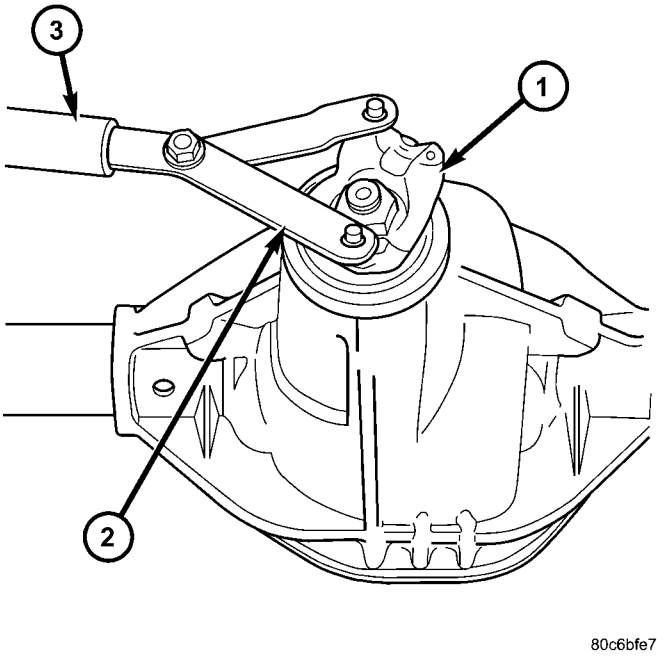

Fig. 45 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(7) Rotating torque should be the recorded reading during removal, plus an additional 0.56 N·m (5 in. lbs.).