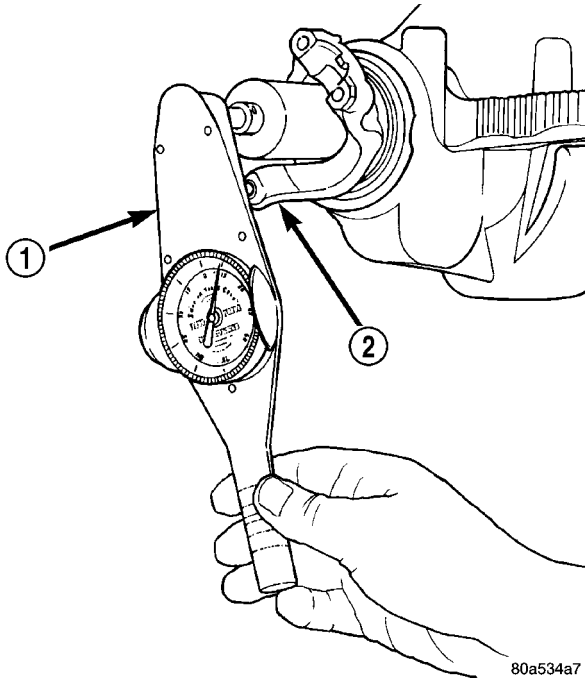

Fig. 46 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE

(8) Install propeller shaft.
(9) Install brake rotors and calipers.

COVER - DIFFERENTIAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove drain plug.
(3) Remove cover bolts.
(4) Remove cover and drain lubricant.

INSTALLATION

(1) Apply a 6.35mm (1/4 in.) bead of Mopar Silicone Rubber Sealant or equivalent to the housing cover (Fig. 47).

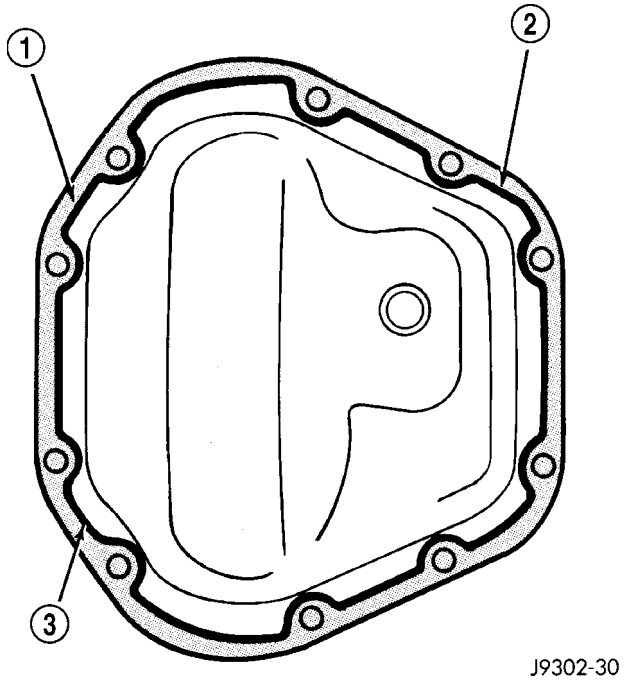

Fig. 47 HOUSING COVER - TYPICAL

1 - SEALANT SURFACE
2 - SEALANT
3 - SEALANT THICKESS

CAUTION: If housing cover is not installed within 3 to 5 minutes, the cover must be cleaned and new RTV applied. Failure to heed caution may result in damage.

(2) Install cover and identification tag. Tighten cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.).
(3) Fill differential to specifications.
(4) Install fill plug and tighten to 34 N·m (25 ft. lbs.).

DIFFERENTIAL

REMOVAL

(1) Remove differential cover and fluid to drain.
(2) Remove hub bearings and axle shafts.
(3) Note the installation reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 48).