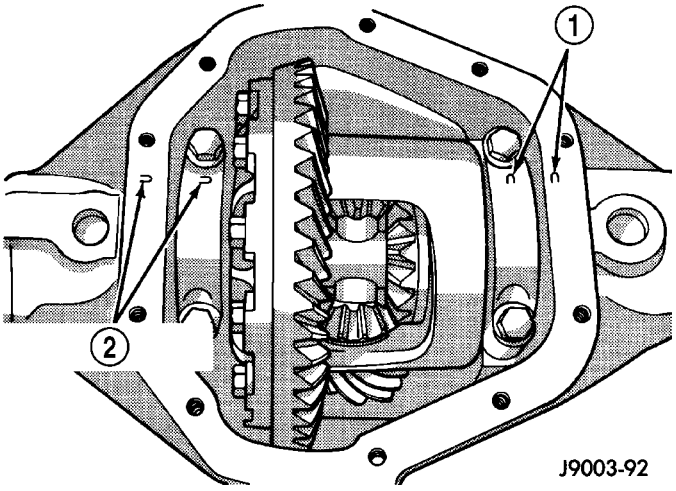


Fig. 48 BEARING CAP IDENTIFICATION

1 - INSTALLATION REFERENCE LETTERS
2 - INSTALLATION REFERENCE LETTERS

(4) Loosen the differential bearing cap bolts.

(5) Position Spreader W-129-B and Adapter from Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 49). Install holddown clamps and tighten the tool turnbuckle finger-tight.

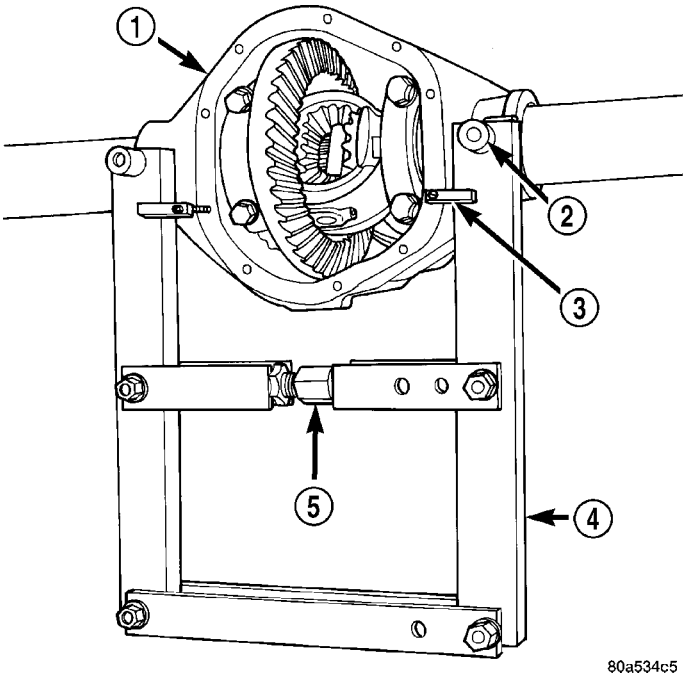


Fig. 49 SPREADER LOCATION

1 - AXLE HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(6) Install Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to guide pin. Load indicator plunger against the opposite side of the housing (Fig. 50) and zero indicator.

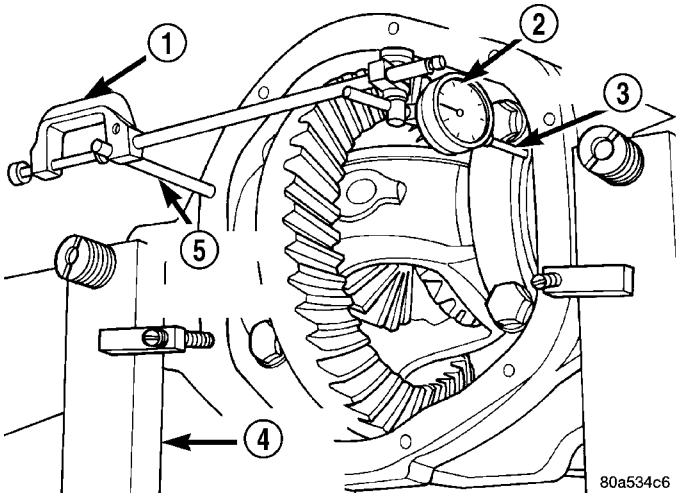


Fig. 50 DIAL INDICATOR LOCATION

1 - INDICATOR CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD

(7) Spread housing while measuring the distance with the dial indicator (Fig. 51).

CAUTION: Do not spread over 0.50 mm (0.020 in). Failure to heed caution may result in damage.

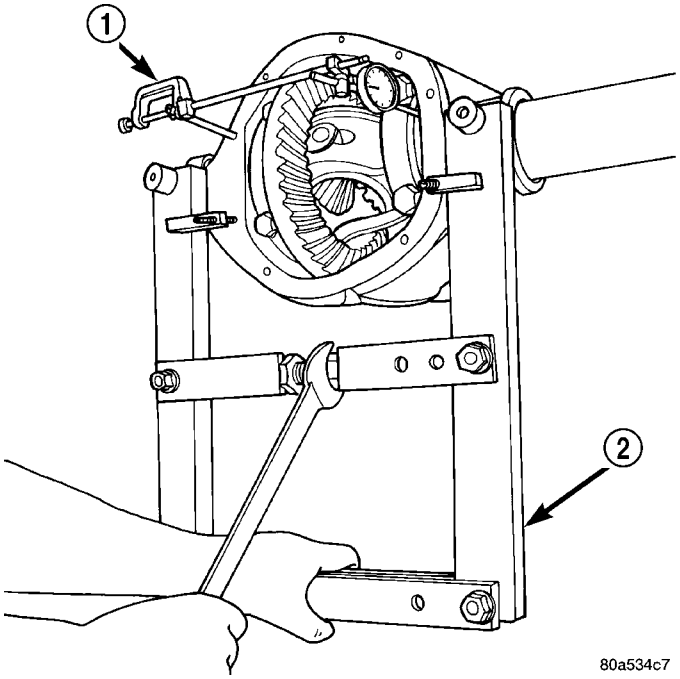


Fig. 51 SPREAD DIFFERENTIAL HOUSING

1 - INDICATOR
2 - SPREADER

(8) Remove dial indicator.

(9) Hold differential case in position while removing differential bearing caps.

(10) Remove differential from the housing (Fig. 52).