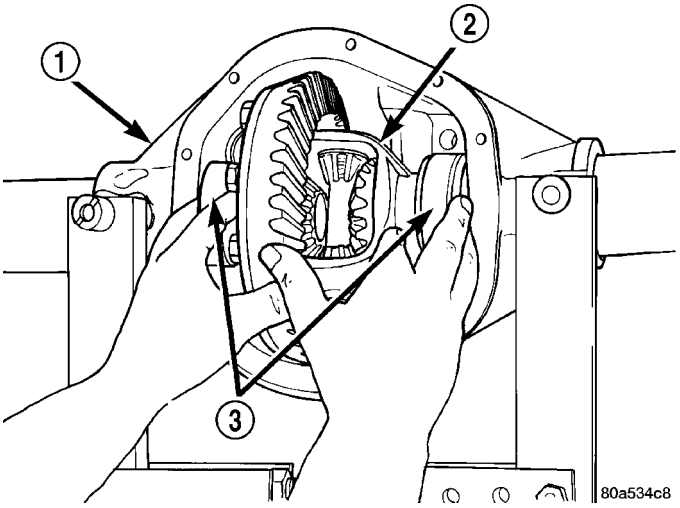

Fig. 52 DIFFERENTIAL CASE

1 - AXLE HOUSING
2 - DIFFERENTIAL CASE
3 - BEARING CUPS

(11) Remove spreader from housing.
(12) Clean housing cavity with a flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Remove ring gear.
(2) Drive out roll pin holding pinion gear mate shaft with a punch (Fig. 53).

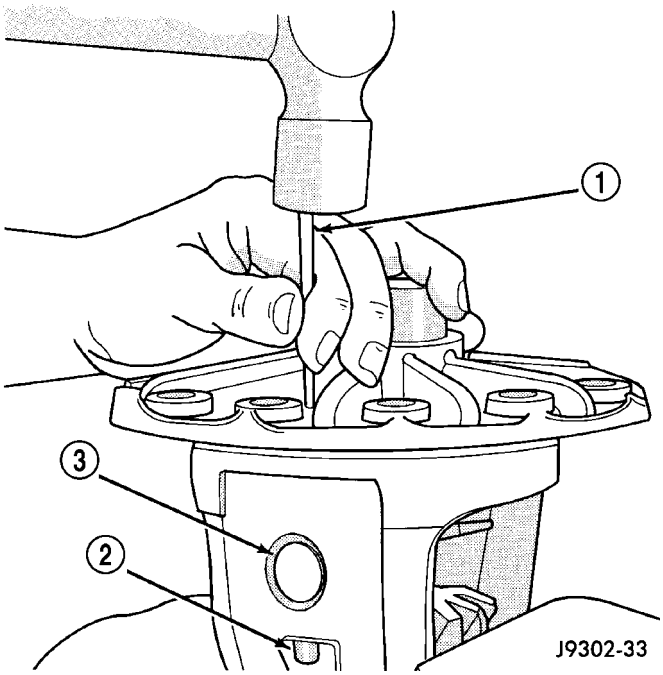

Fig. 53 MATE SHAFT ROLL PIN

1 - DRIFT
2 - LOCKPIN
3 - MATE SHAFT

(3) Remove pinion gear mate shaft from the differential case and pinion mate gears.
(4) Rotate differential side gears and remove pinion mate gears and thrust washers (Fig. 54).

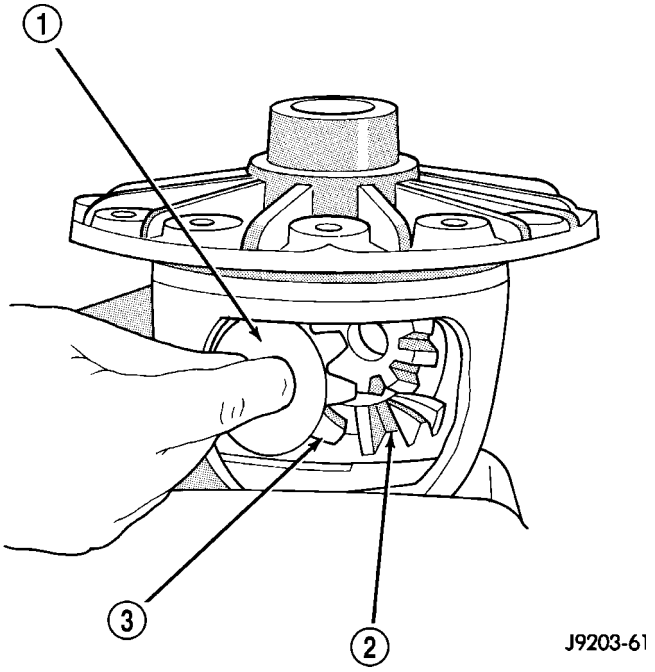

Fig. 54 PINION MATE GEAR

1 - THRUST WASHER
2 - SIDE GEAR
3 - PINION MATE GEAR

(5) Remove differential side gears and thrust washers.

ASSEMBLY

(1) Install differential side gears and thrust washers.
(2) Install pinion mate gears and thrust washers.
(3) Install pinion gear mate shaft. Align roll pin holes in shaft and the differential case.
(4) Install pinion mate shaft roll pin in the differential case (Fig. 55).