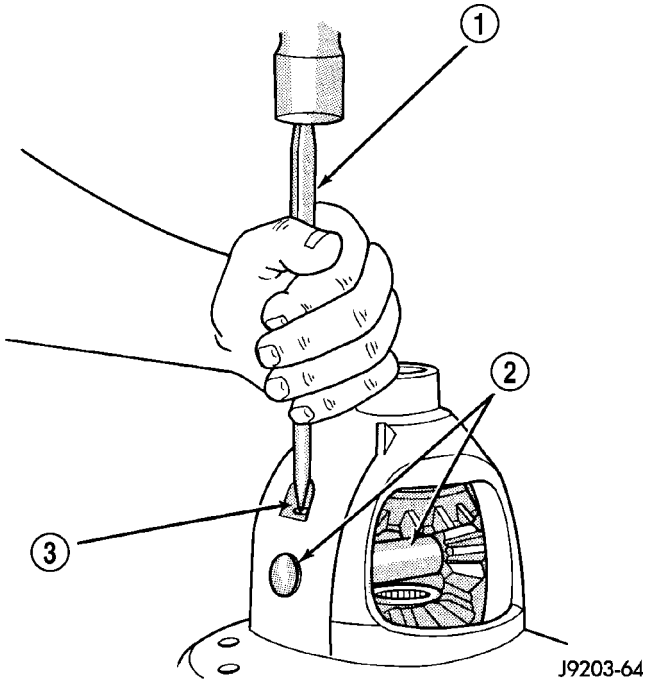

Fig. 55 MATE SHAFT ROLL PIN

1 - PUNCH
2 - PINION MATE SHAFT
3 - MATE SHAFT LOCKPIN

(5) Install the ring gear.

INSTALLATION

NOTE: If replacement differential bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Position Spreader W-129-B and Adapter Kit 6987, with the tool dowel pins seated in the locating holes (Fig. 56). Install holddown clamps and tighten turnbuckle finger-tight.

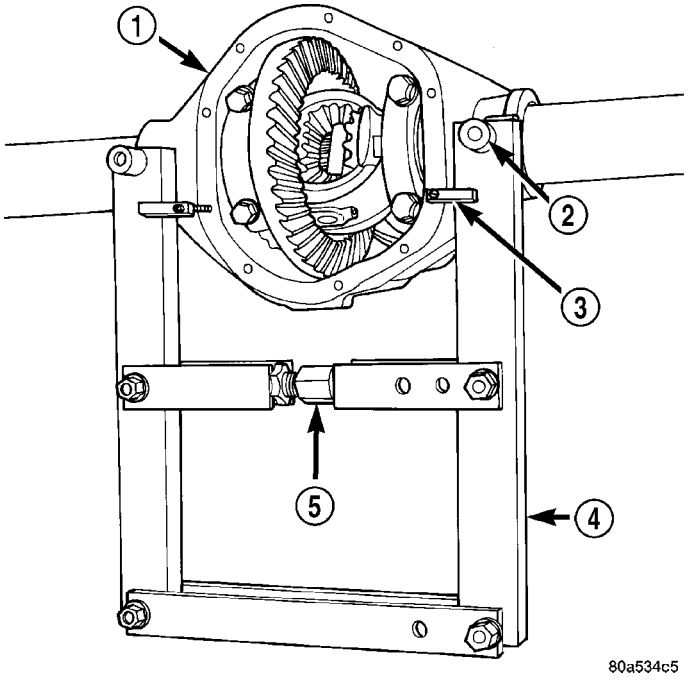

Fig. 56 SPREADER LOCATION

1 - AXLE HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(2) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load the lever adapter against the opposite side of the housing (Fig. 57) and zero indicator.

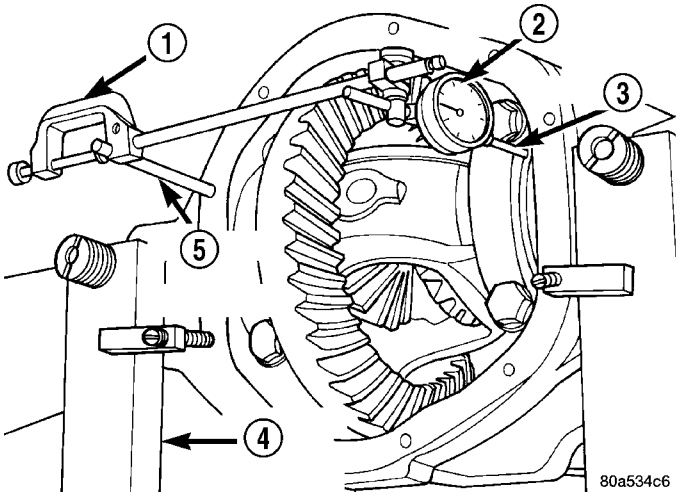

Fig. 57 DIAL INDICATOR LOCATION

1 - CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD

(3) Spread housing while measuring the distance with the dial indicator (Fig. 58).