CAUTION: Do not spread over 0.50 mm (0.020 in). Failure to heed caution may result in damage.

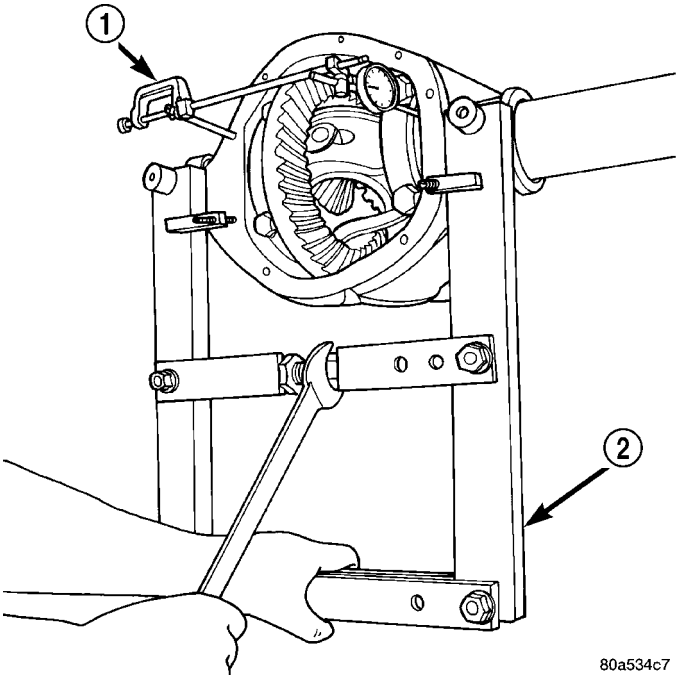


Fig. 58 SPREAD DIFFERENTIAL HOUSING

1 - INDICATOR
2 - SPREADER

(4) Remove dial indicator.

(5) Install differential case in the housing. Tap differential case to seat bearings cups in the housing.

(6) Install bearing caps at their original locations (Fig. 59).

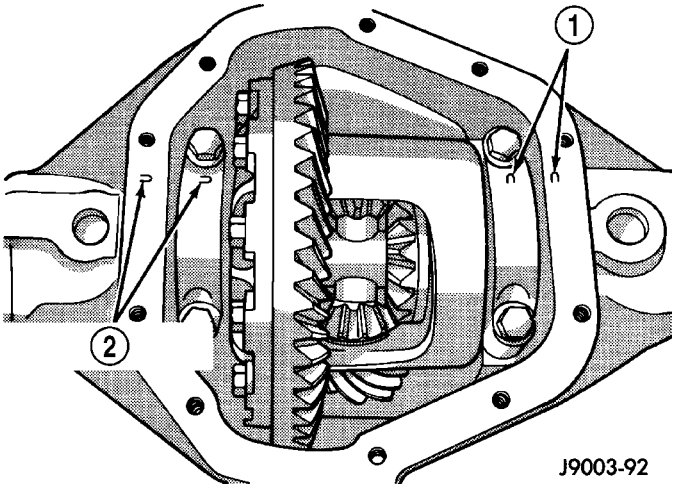


Fig. 59 BEARING CAP IDENTIFICATION

1 - INSTALLATION REFERENCE LETTERS
2 - INSTALLATION REFERENCE LETTERS

(7) Loosely install differential bearing cap bolts.

(8) Remove axle housing spreader.

(9) Tighten bearing cap bolts to 61 N·m (45 ft. lbs.).

(10) Install hub bearings and axle shafts.

(11) Install differential cover.

BEARINGS - DIFFERENTIAL CASE

REMOVAL

(1) Remove bearings from the differential case with Puller/Press C-293-PA, C-293-39 Adapter and Plug SP-3289 (Fig. 60).

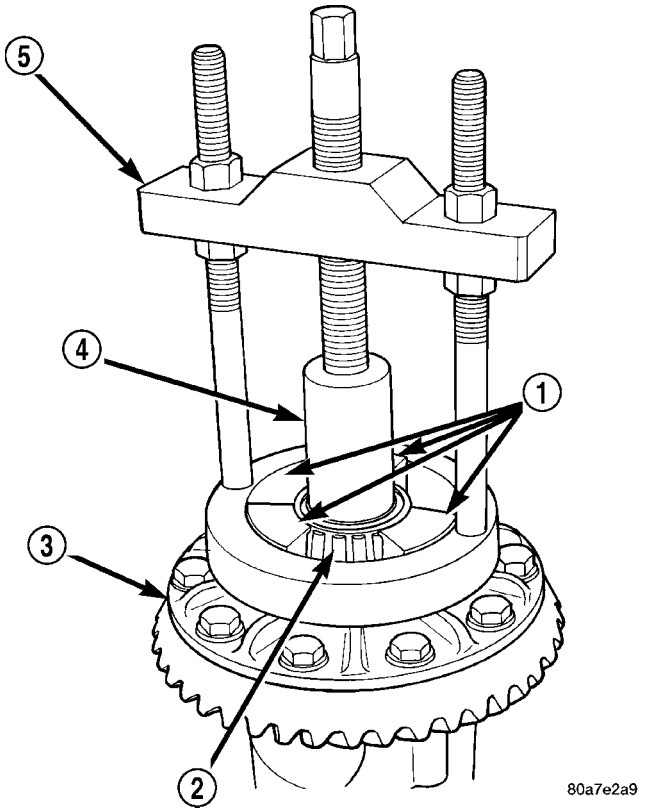


Fig. 60 DIFFERENTIAL BEARING

1 - ADAPTERS
2 - BEARING
3 - DIFFERENTIAL
4 - PLUG
5 - PULLER

INSTALLATION

NOTE: If replacement differential side bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments (Differential Bearing Preload and Gear Backlash) to determine the proper shim selection.

(1) Install differential side bearing shims onto differential case hubs.

(2) Install differential side bearings with Installer C-3716-A and Handle C-4171 (Fig. 61).