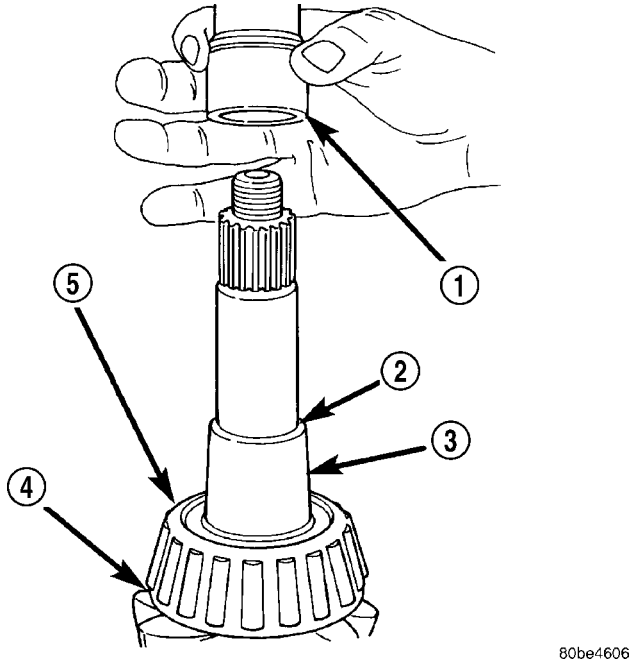

Fig. 68 COLLAPSIBLE SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION
4 - PINION DEPTH SHIM
5 - REAR BEARING

(11) Remove rear pinion bearing with Puller/Press C-293-PA and Adapters C-293-39 (Fig. 69).

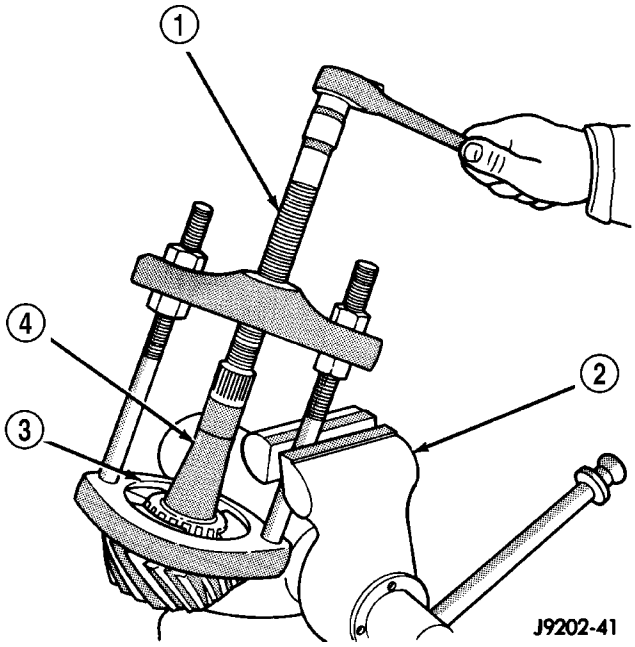

Fig. 69 REAR PINION BEARING

1 - PULLER
2 - VISE
3 - ADAPTERS
4 - PINION GEAR SHAFT

(12) Remove pinion depth shim/oil slinger from the pinion shaft and record thickness.

INSTALLATION

NOTE: A pinion depth shim/oil slinger is placed between the rear pinion bearing cone and the pinion head to achieve proper ring gear and pinion mesh. If ring gear and pinion are reused, the pinion depth shim/oil slinger should not require replacement. Refer to Adjustment (Pinion Gear Depth) to select the proper thickness shim/oil slinger if ring and pinion gears are replaced.

(1) Apply Mopar® Door Ease or equivalent lubricant to outside surface of the pinion bearing cups. Install rear bearing cup with Installer D-146 and Driver Handle C-4171 (Fig. 70) and verify cup is seated.

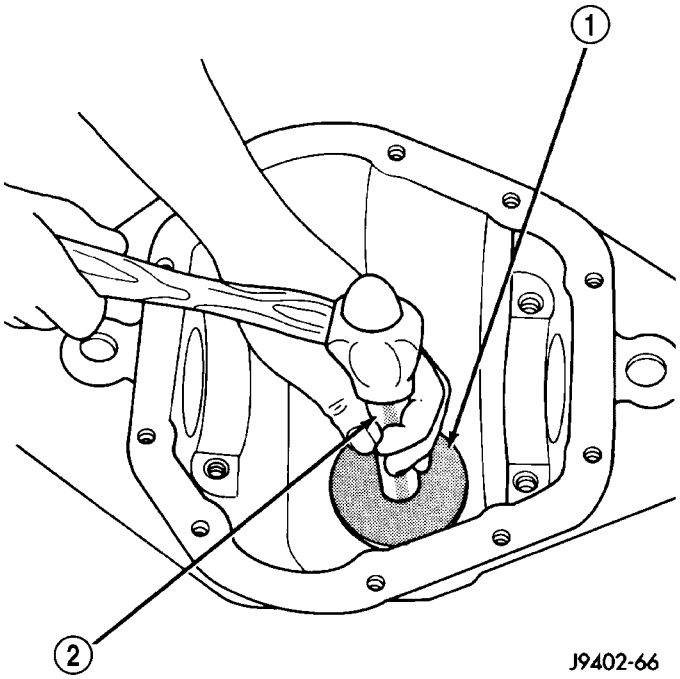

Fig. 70 REAR PINION BEARING CUP

1 - INSTALLER
2 - HANDLE

(2) Install front bearing cup with Installer D-130 and Handle C-4171 (Fig. 71) and verify cup is seated.