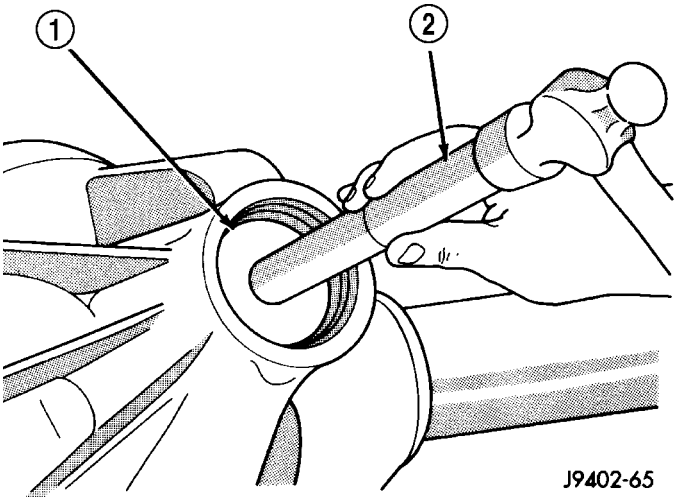

Fig. 71 FRONT PINION BEARING CUP

1 - INSTALLER
2 - HANDLE

(3) Install front pinion bearing, and oil slinger.

(4) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 72).

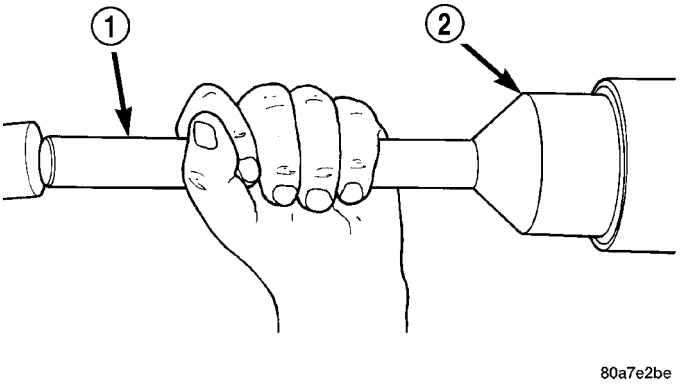

Fig. 72 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(5) Install rear pinion depth shim/oil slinger and bearing on the pinion shaft with Installer W-262 and a press (Fig. 73).

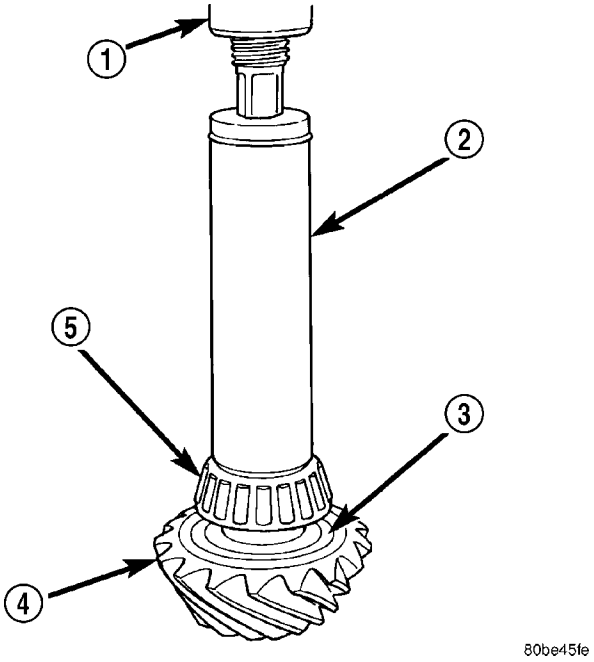

Fig. 73 REAR PINION BEARING

1 - PRESS
2 - INSTALLATER
3 - PINION DEPTH SHIM/OIL SLINGER
4 - DRIVE PINION
5 - REAR PINION BEARING

(6) Install **new** collapsible spacer on pinion shaft and install pinion into the housing (Fig. 74).

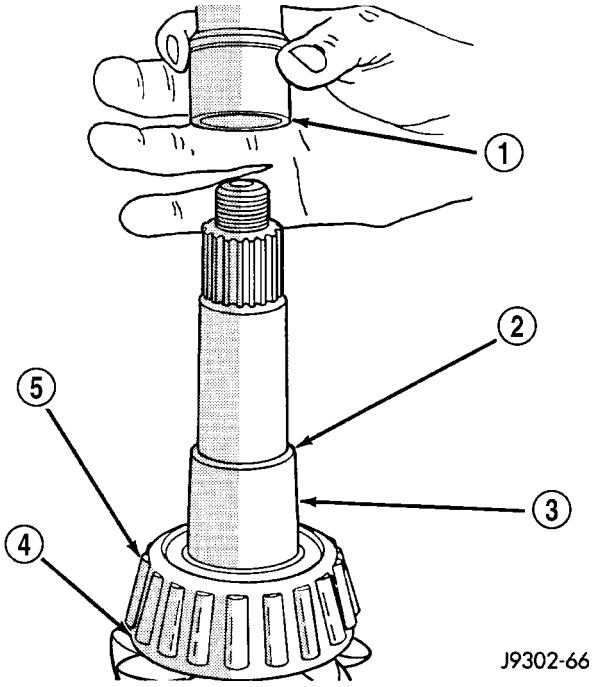

Fig. 74 COLLAPSIBLE PRELOAD SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION GEAR
4 - OIL SLINGER
5 - REAR BEARING