(7) Install yoke with Installer W-162-B, Cup 8109 and Spanner Wrench 6958 (Fig. 75).

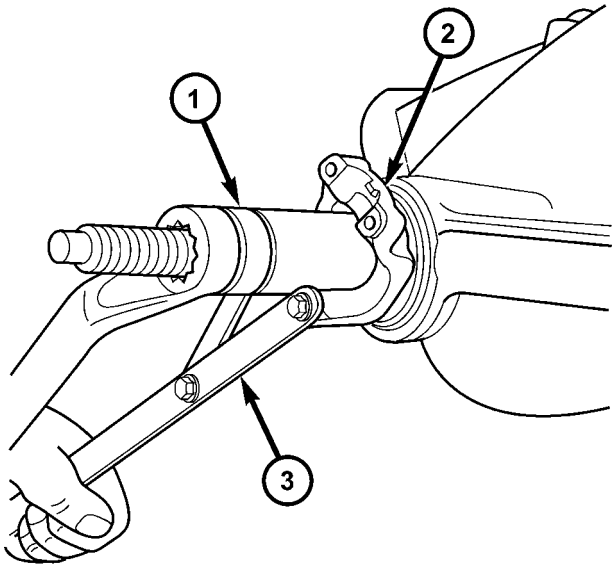

Fig. 75 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(8) Install pinion washer and a **new** nut onto the pinion. Tighten the nut to 216 N·m (160 ft. lbs.).

CAUTION: Never loosen the pinion nut to decrease pinion bearing rotating torque and never exceed specified preload torque. Failure to heed caution may result in damage.

(9) Using Spanner Wrench 6958 and torque wrench set at 678 N·m (500 ft. lbs.) (Fig. 76). Slowly tighten the nut in 6.8 N·m (5 ft. lb.) increments until the rotating torque is achieved. Measure rotating torque frequently to avoid over crushing the collapsible spacer (Fig. 77).

CAUTION: If more than 678 N·m (500 ft. lbs.) torque is required to crush the collapsible spacer, the spacer is defective and must be replaced. Failure to heed caution may result in damage.

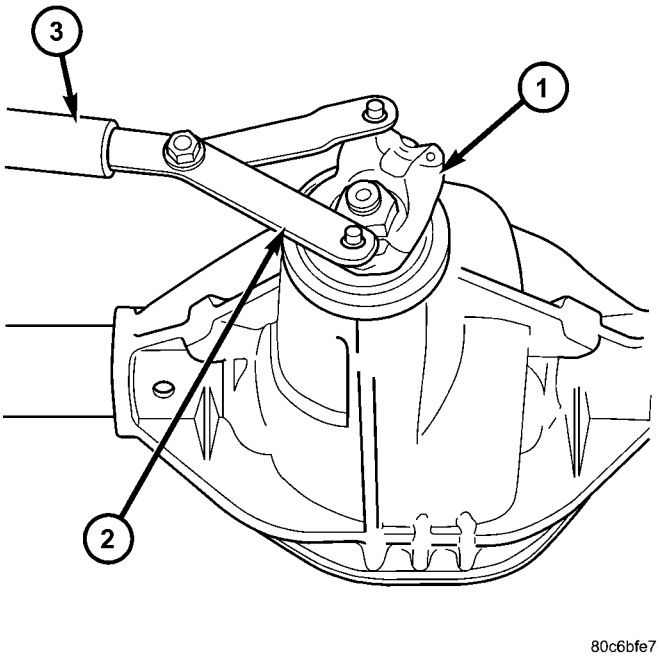

Fig. 76 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(10) Check bearing rotating torque with an inch pound torque wrench (Fig. 77). The torque necessary to rotate the pinion should be:

- Original Bearings: 1.13 to 2.26 N·m (10 to 20 in. lbs.).
- New Bearings: 1.7 to 3.4 N·m (15 to 30 in. lbs.).

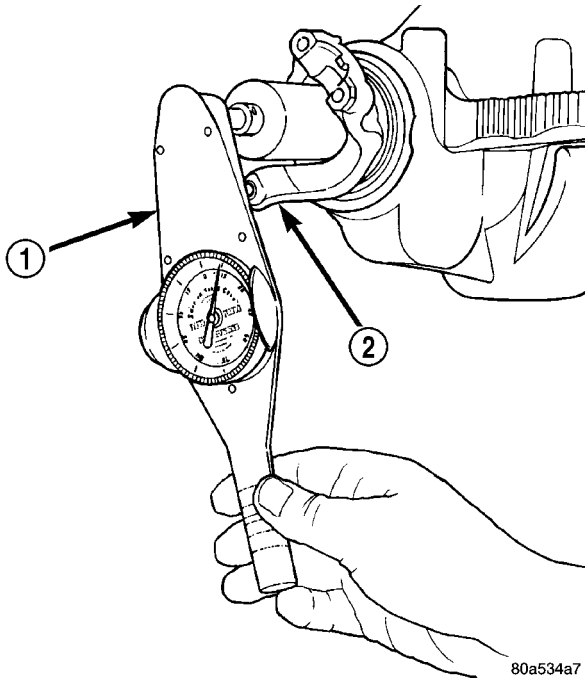

Fig. 77 PINION ROTATION TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE