(11) Invert the differential case and start two ring gear bolts. This will provide case-to-ring gear bolt hole alignment.

(12) Invert the differential case in the vise and install **new** ring gear bolts and alternately tighten to 108 N·m (80 ft. lbs.) (Fig. 78).

CAUTION: Never reuse ring gear bolts. Failure to heed caution may result in damage.

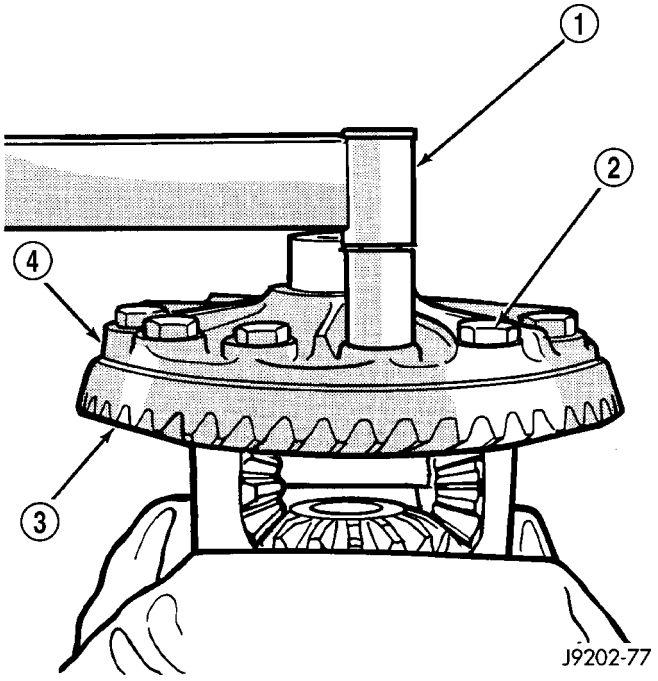

Fig. 78 RING GEAR BOLT

1 - TORQUE WRENCH
2 - RING GEAR BOLT
3 - RING GEAR
4 - CASE

(13) Install differential and verify differential bearing preload, gear mesh and contact pattern.