(7) Remove shock absorbers from axle brackets (Fig. 2).

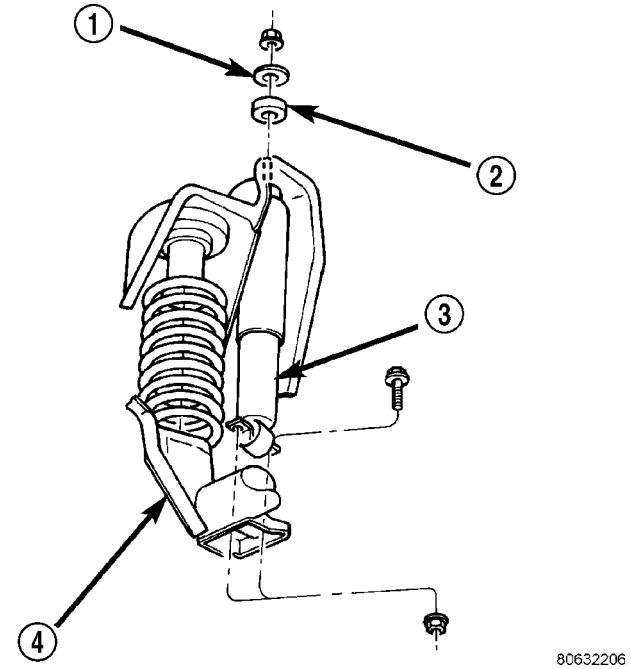

Fig. 2 COIL SPRING AND SHOCK ABSORBER

1 - RETAINER
2 - GROMMET
3 - SHOCK
4 - FRONT AXLE

(8) Remove track bar from axle bracket (Fig. 3).

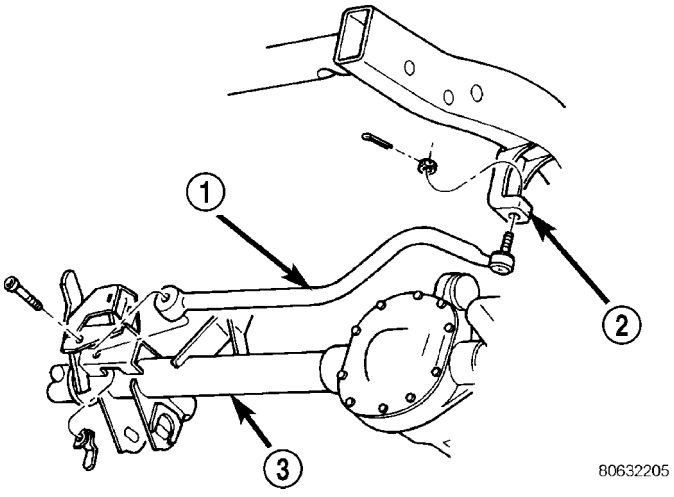

Fig. 3 TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE

(9) Remove tie rod and drag link from steering knuckle.

(10) Remove steering damper from axle bracket.

(11) Remove upper and lower suspension arms from axle brackets.

(12) Lower lift enough to remove the axle. The coil springs will drop with the axle.

(13) Remove coil springs from the axle.

INSTALLATION

CAUTION: The weight of the vehicle must be supported by the springs before suspension arms and track bar fasteners can be tightened. Failure to heed caution may result in damage.

(1) Install springs and retainers and tighten retainer bolts to 21 N·m (16 ft. lbs.).

(2) Position axle under vehicle and align it with the spring pads.

(3) Install upper and lower suspension arms in the axle brackets and loosely install bolts and nuts (Fig. 4).

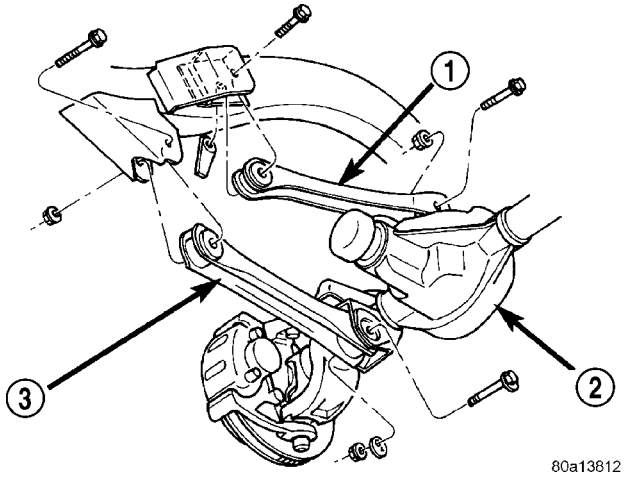

Fig. 4 UPPER AND LOWER SUSPENSION ARMS

1 - UPPER SUSPENSION ARM
2 - FRONT AXLE
3 - LOWER SUSPENSION ARM

(4) Connect the vent hose to the axle shaft tube.

(5) Install track bar to the axle bracket and loosely install bolt (Fig. 5).

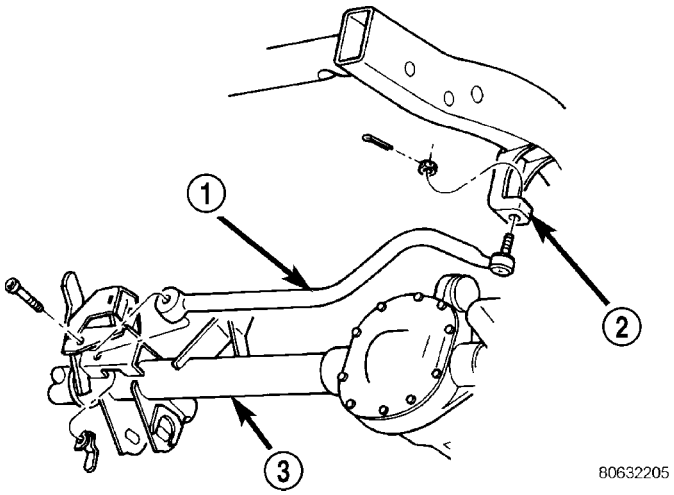

Fig. 5 TRACK BAR

1 - TRACK BAR
2 - FRAME BRACKET
3 - FRONT AXLE