Original Pinion Gear Depth Variance	Replacement Pinion Gear Depth Variance									
	−4	−3	−2	−1	0	+1	+2	+3	+4	
−1		+0.003	+0.002	+0.001	0	−0.001	−0.002	−0.003	−0.004	−0.005
−2		+0.002	+0.001	0	−0.001	−0.002	−0.003	−0.004	−0.005	−0.006
−3		+0.001	0	−0.001	−0.002	−0.003	−0.004	−0.005	−0.006	−0.007
−4		0	−0.001	−0.002	−0.003	−0.004	−0.005	−0.006	−0.007	−0.008

PINION DEPTH MEASUREMENT AND ADJUSTMENT

Measurements are taken with pinion bearing cups and pinion bearings installed in the housing. Take measurements with Pinion Gauge Set and Dial Indicator C-3339 (Fig. 10).

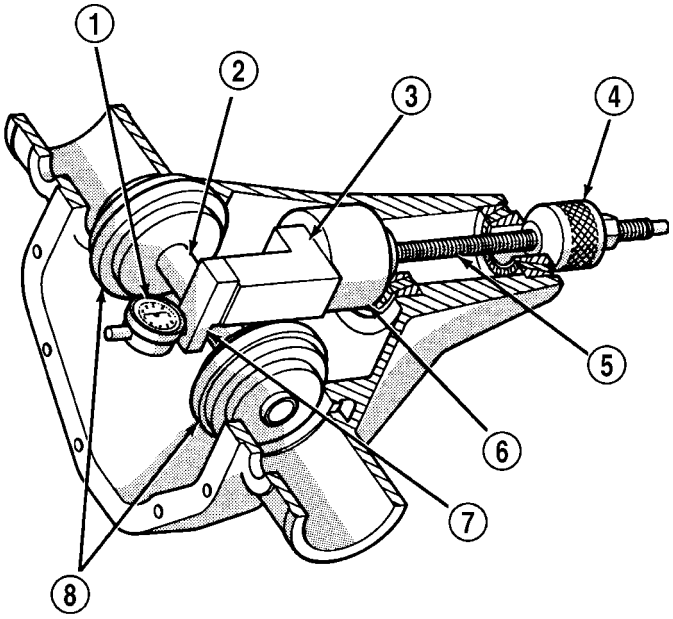

J9403-45

Fig. 10 PINION GEAR DEPTH GAUGE TOOLS

1 - DIAL INDICATOR
2 - ARBOR
3 - PINION HEIGHT BLOCK
4 - CONE
5 - SCREW
6 - PINION BLOCK
7 - SCOOTER BLOCK
8 - ARBOR DISC

(1) Assemble Pinion Height Block 6739, Pinion Block 6734 and rear pinion bearing onto Screw 6741 (Fig. 10).

(2) Insert assembled height gauge components, rear bearing and screw into the housing through pinion bearing cups (Fig. 11).

(3) Install front pinion bearing and Cone-nut 6740 hand tight.

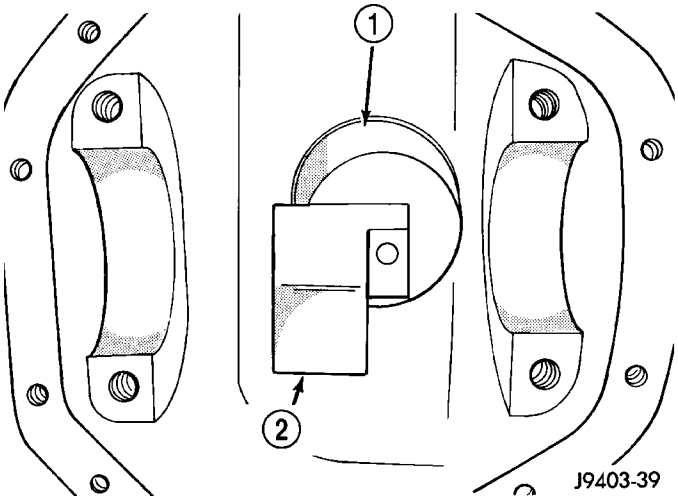

Fig. 11 PINION HEIGHT BLOCK

1 - PINION BLOCK
2 - PINION HEIGHT BLOCK

(4) Place Arbor Disc 6732 on Arbor D-115-3 in position in the housing side bearing cradles (Fig. 12).

NOTE: Arbor Discs 6732 has different step diameters to fit other axles. Choose proper step for axle being serviced.

(5) Install differential bearing caps on arbor discs and install bearing cap bolts. Tighten bearing cap bolts to 108 N·m (80 ft. lbs.).