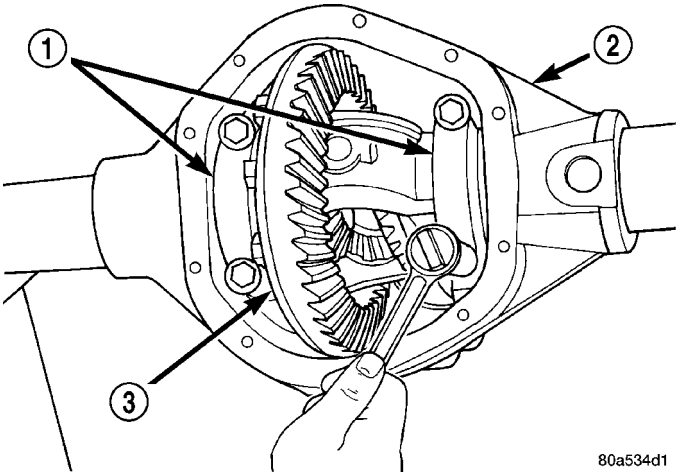

Fig. 15 BEARING CAP BOLTS

1 - BEARING CAP
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

(7) With a dead-blow hammer, seat the differential dummy bearings to each side of the housing (Fig. 16) and (Fig. 17).

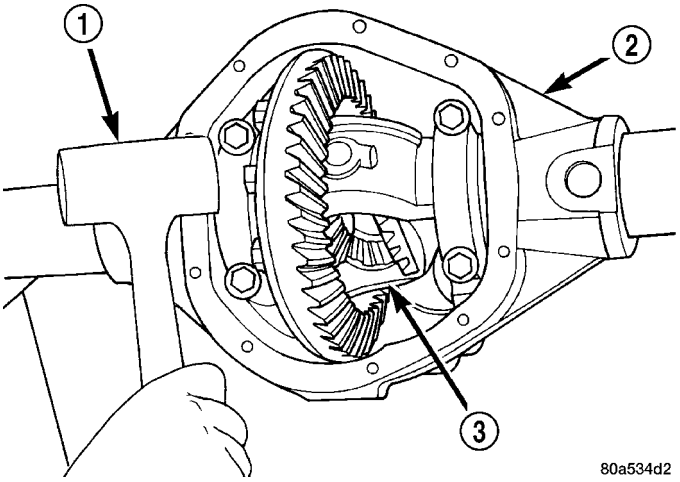

Fig. 16 SEAT DUMMY BEARING PINION SIDE

1 - DEAD-BLOW HAMMER
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

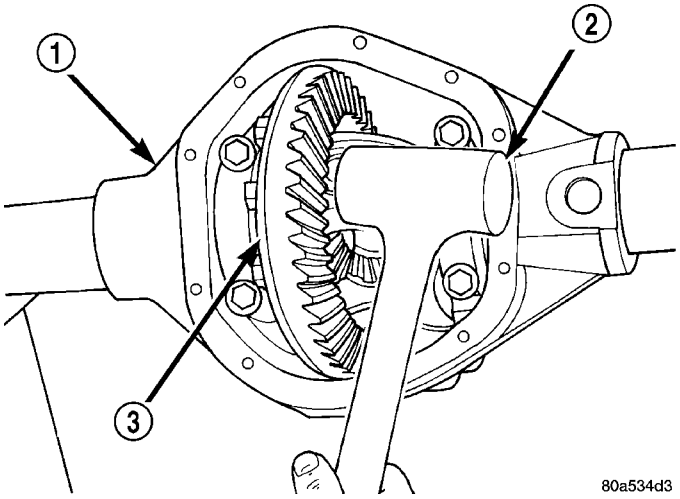

Fig. 17 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - DEAD-BLOW HAMMER
3 - DIFFERENTIAL CASE

(8) Thread Pilot Stud C-3288-B into rear cover bolt hole below ring gear (Fig. 18).

(9) Attach the Dial Indicator C-3339 to pilot stud. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 18).

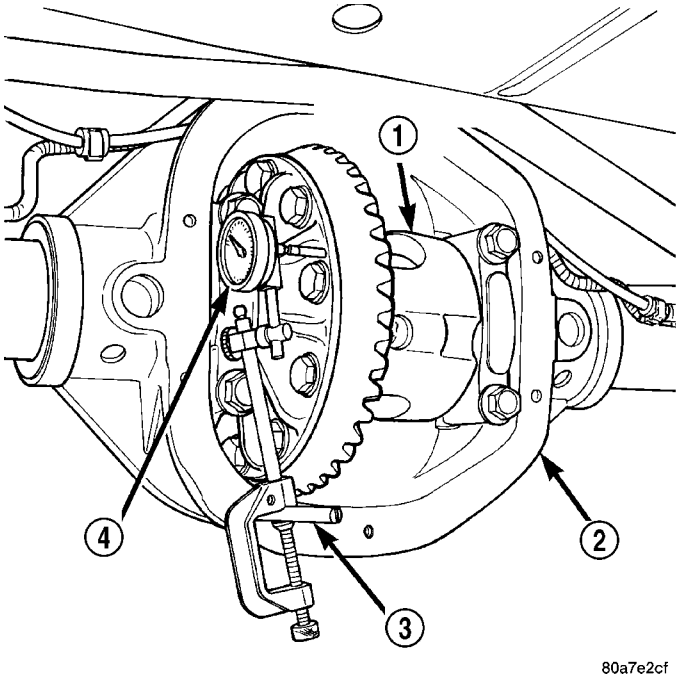

Fig. 18 DIFFERENTIAL SIDE PLAY MEASUREMENT

1 - DIFFERENTIAL CASE
2 - DIFFERENTIAL HOUSING
3 - PILOT STUD
4 - DIAL INDICATOR

(10) Push and hold differential case to pinion gear side of the housing and zero dial indicator (Fig. 19).