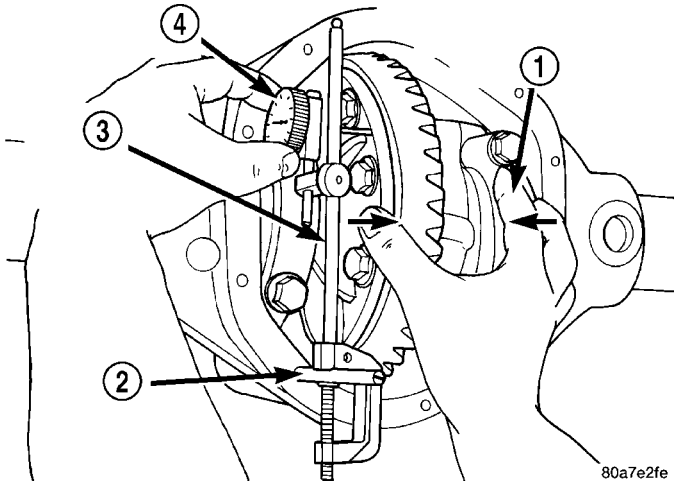

Fig. 19 DIAL INDICATOR LOCATION

1 - DIFFERENTIAL CASE TO PINION GEAR SIDE
2 - PILOT STUD
3 - DIAL INDICATOR ARM
4 - DIAL INDICATOR FACE

(11) Push and hold differential case to ring gear side of the housing and record dial indicator reading (Fig. 20).

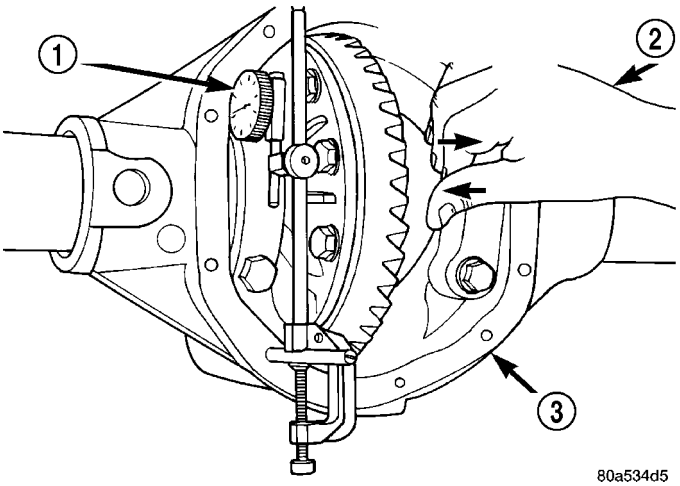

Fig. 20 RECORD DIAL INDICATOR READING

1 - DIAL INDICATOR
2 - DIFFERENTIAL CASE TO RING GEAR SIDE
3 - DIFFERENTIAL HOUSING

(12) Add 0.25 mm (0.010 in.) to the zero end play total. This total represents the thickness of shims needed to preload the new bearings when the differential is installed.

(13) Rotate dial indicator out of the way on the pilot stud.

(14) Remove differential case and dummy bearings from the housing.

(15) Install the pinion gear in the housing. Install the pinion yoke and establish the correct pinion rotating torque.

(16) Install differential case and dummy bearings D-345 in the housing (without shims), install bearing caps and tighten bolts snug.

(17) Seat ring gear side dummy bearing (Fig. 17).

(18) Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 18).

(19) Push and hold differential case toward pinion gear and zero dial indicator (Fig. 21).

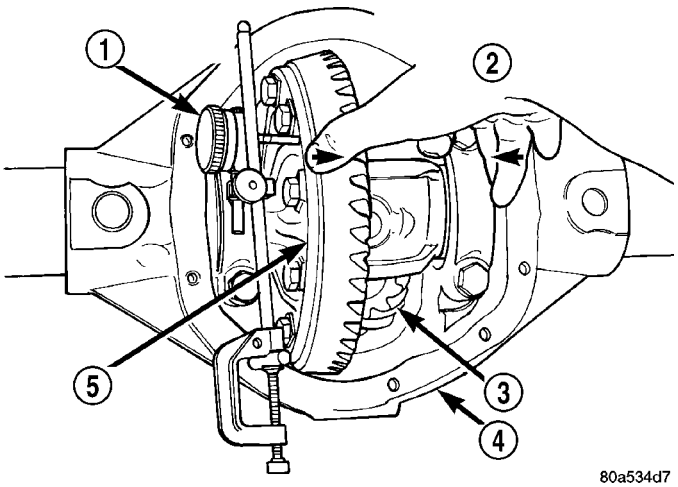

Fig. 21 ZERO DIAL INDICATOR

1 - DIAL INDICATOR FACE
2 - DIFFERENTIAL CASE TO PINION GEAR SIDE
3 - PINION GEAR
4 - DIFFERENTIAL HOUSING
5 - DIFFERENTIAL CASE

(20) Push and hold differential case to ring gear side of the housing and record dial indicator reading (Fig. 22). Subtract 0.05 mm (0.002 in.) from this reading. This is the shim thickness for the ring gear side.