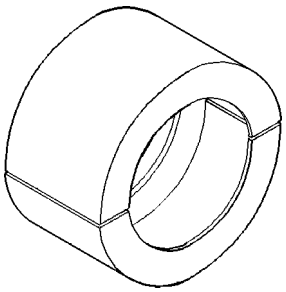

JAWS 6447

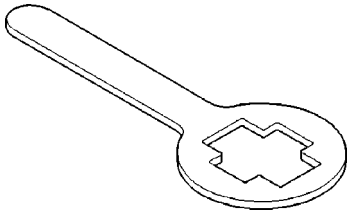

HOLDER YOKE 6719A

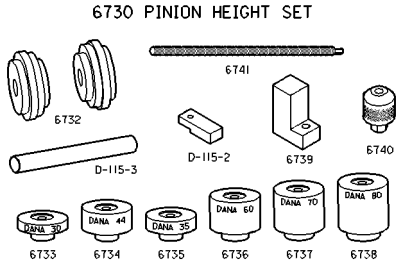

PINION DEPTH SET 6730

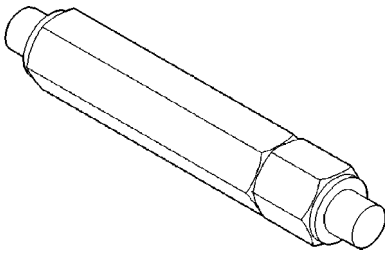

TURNBUCKLE 6797

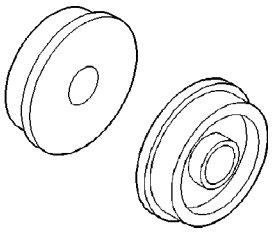

INSTALLER DISCS 8110

SHAFT - AXLE

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake components.

(3) Remove cotter pin, nut retainer and axle hub nut.

(4) Remove hub bearing bolts (Fig. 28).

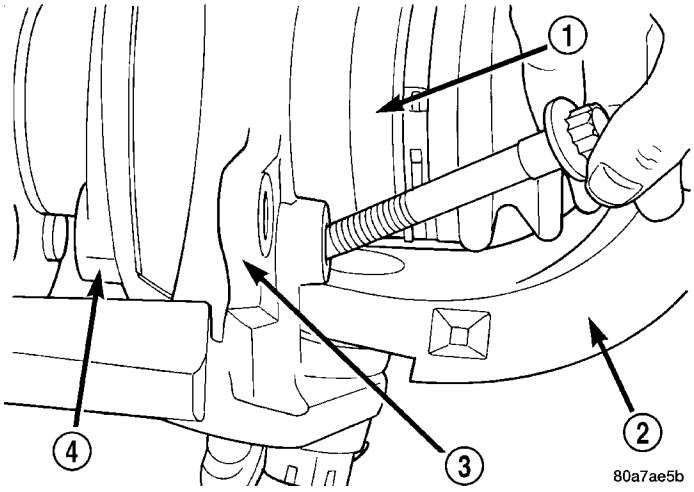

Fig. 28 HUB BEARING BOLTS

1 - AXLE SHAFT
2 - AXLE
3 - KNUCKLE
4 - HUB BEARING

(5) Remove hub bearing from steering knuckle.

(6) Remove axle shaft assembly (Fig. 29) from axle

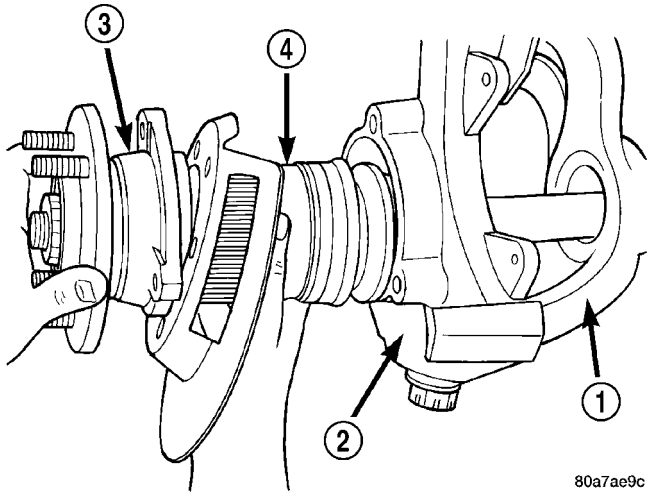

Fig. 29 HUB BEARING AND AXLE

1 - AXLE
2 - KNUCKLE
3 - HUB BEARING
4 - AXLE SHAFT

(7) Remove brake rotor shield from the hub bearing or knuckle.