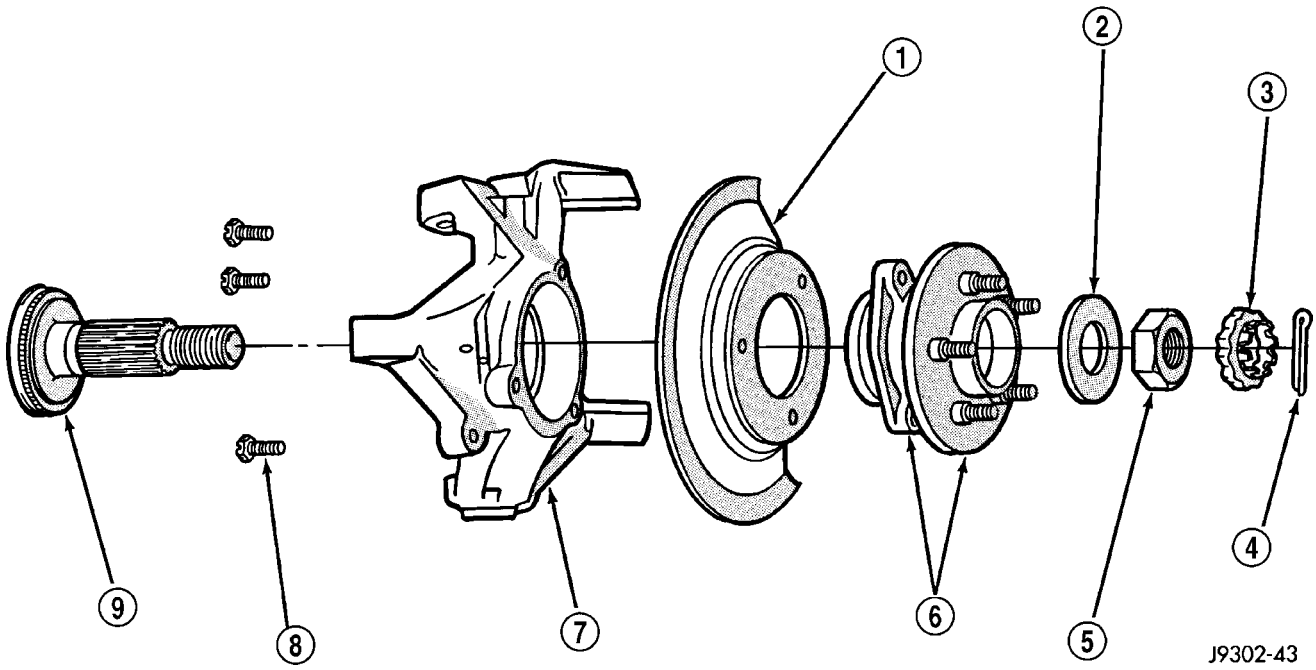

Fig. 30 HUB BEARING AND KNUCKLE

1 - BRAKE SHIELD
2 - WASHER
3 - RETAINER
4 - COTTER PIN
5 - NUT
6 - HUB AND BEARING ASSEMBLY
7 - STEERING KNUCKLE
8 - BOLT
9 - TONE WHEEL (ABS)

(6) Install brake components.

SEAL - AXLE SHAFT

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove axle shafts (Fig. 31).

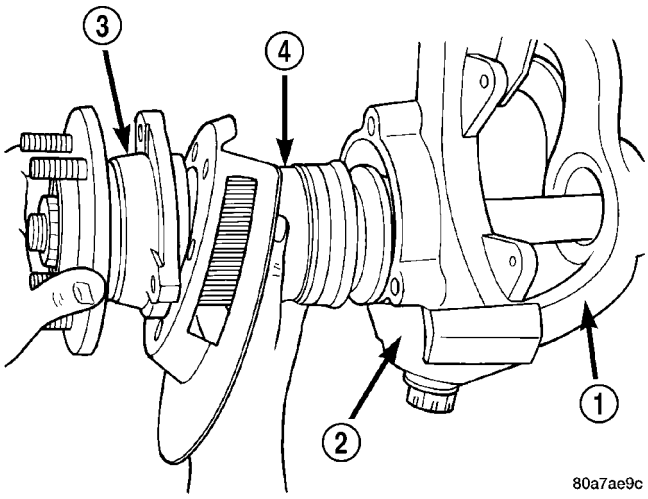

Fig. 31 HUB BEARING AND AXLE ASSEMBLY

1 - AXLE
2 - KNUCKLE
3 - HUB BEARING
4 - AXLE SHAFT

(3) Remove differential assembly (Fig. 32).