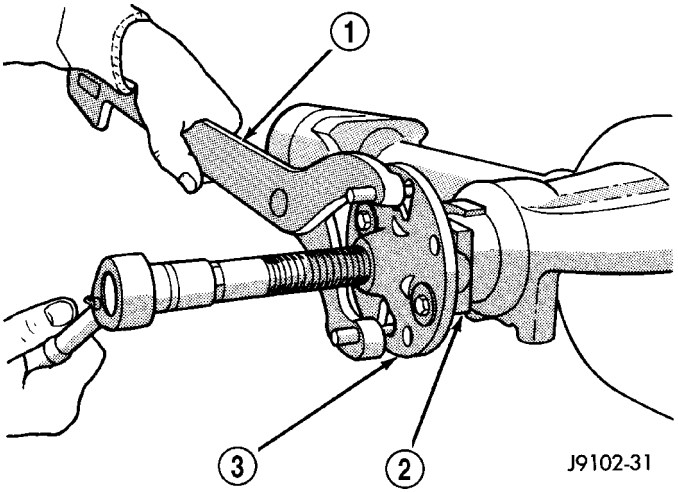

Fig. 37 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - PULLER

(5) Remove pinion shaft seal with a pry tool or slide hammer mounted screw.

INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with an appropriate installer (Fig. 38).

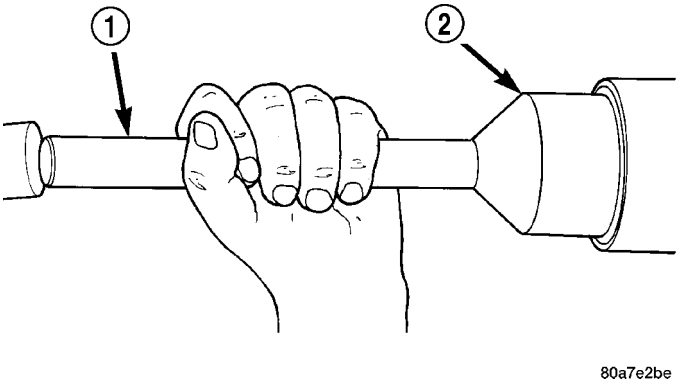

Fig. 38 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(2) Install yoke on the pinion gear with Installer W-162-D and Spanner Wrench 6958 (Fig. 39).

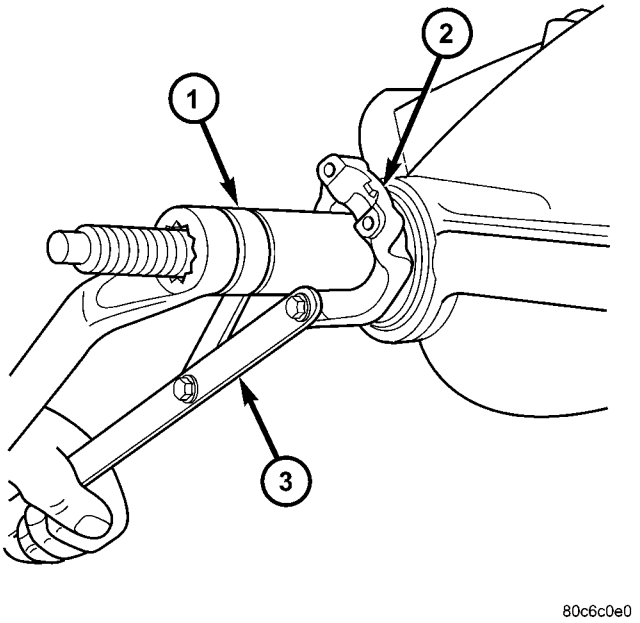

Fig. 39 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(3) Install a **new** nut on the pinion gear and tighten the nut to 217-271 N·m (160-200 ft. lbs.) (Fig. 40).

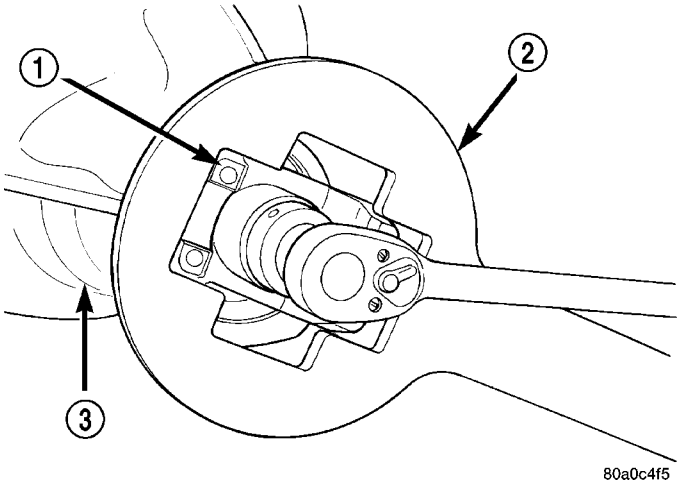

Fig. 40 PINION SHAFT NUT

1 - PINION FLANGE
2 - HOLDING TOOL
3 - DIFFERENTIAL HOUSING

(4) Installation propeller shaft with reference marks aligned.

(5) Check and add gear lubricant to axle if necessary.