COVER - DIFFERENTIAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove drain plug.
(3) Disconnect indicator switch harness and remove connector from differential cover (Fig. 41).

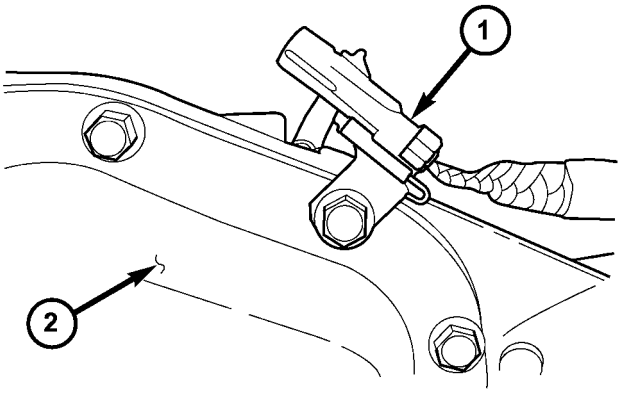

80ebbe24

Fig. 41 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(4) Remove cover bolts.
(5) Remove cover and drain lubricant.

INSTALLATION

(1) Apply a 6.35mm (1/4 in.) bead of Mopar Silicone Rubber Sealant or equivalent to the housing cover (Fig. 42).

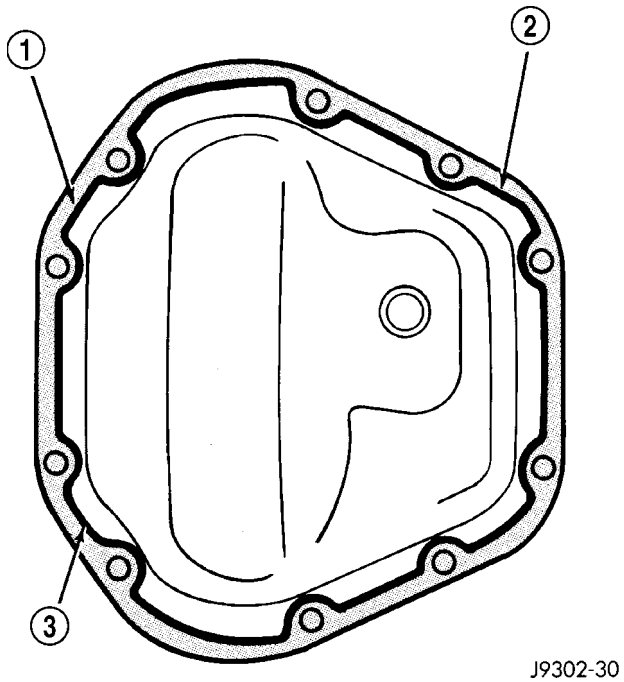

J9302-30

Fig. 42 HOUSING COVER - TYPICAL

1 - SEALANT SURFACE
2 - SEALANT
3 - SEALANT THICKESS

CAUTION: If housing cover is not installed within 3 to 5 minutes, the cover must be cleaned and new RTV applied. Failure to heed caution may result in damage.

(2) Install cover, identification tag and indicator switch connector (Fig. 43). Tighten cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.).

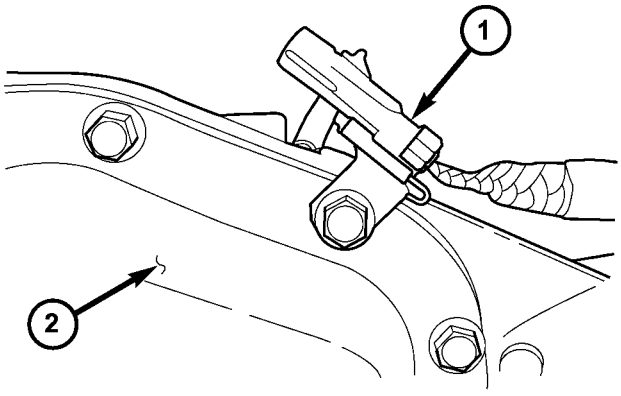

80ebbe24

Fig. 43 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(3) Connect indicator switch harness.
(4) Fill differential to specifications.
(5) Install fill plug and tighten to 34 N·m (25 ft. lbs.).