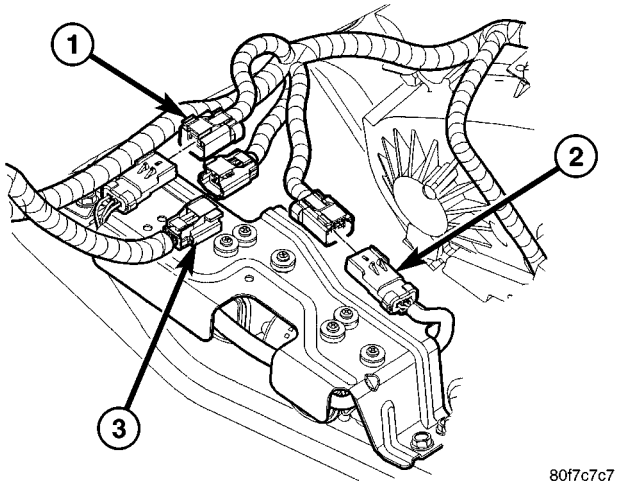

Fig. 45 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(4) With the pump running the pressure gauge should show 5 psi..

NOTE: If pump does not produce 5 psi. replace the pump.

REMOVAL

(1) Remove drain plug from the differential housing.

(2) Disconnect indicator switch harness and remove connector from differential cover (Fig. 46).

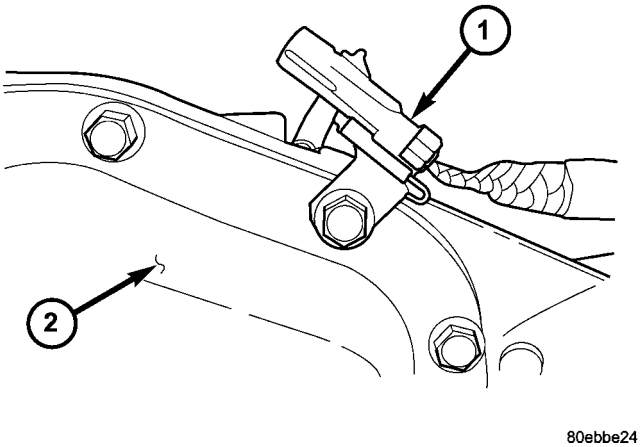

Fig. 46 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(3) Remove differential housing cover.

(4) Remove axle shafts.

(5) Remove pressure hose from actuator assembly (Fig. 47).

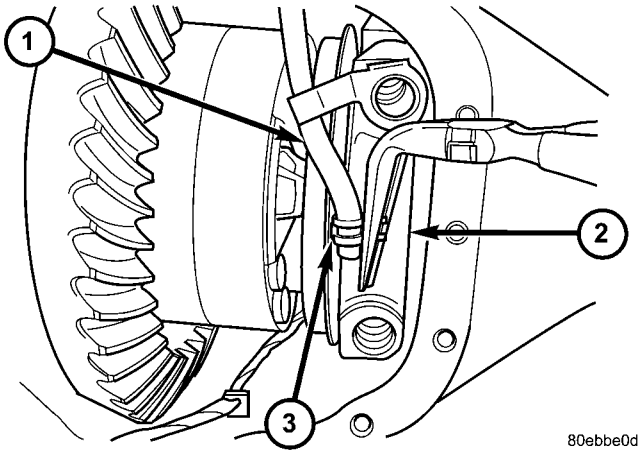

Fig. 47 PRESSURE HOSE

1 - PRESSURE HOSE
2 - BEARING CAP
3 - PRESSURE HOSE CLAMP

(6) Note the reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 48).

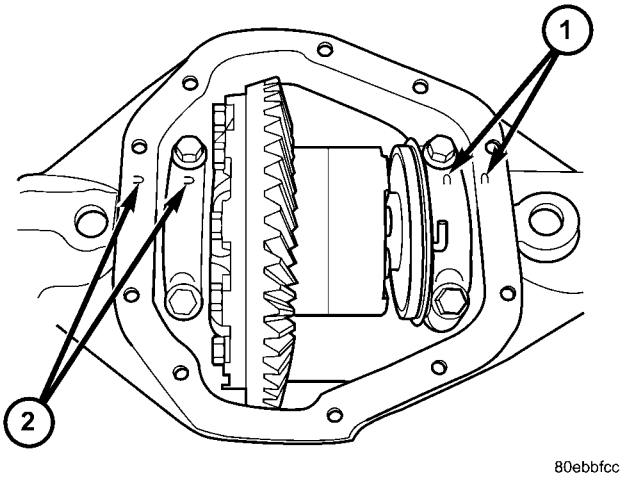

Fig. 48 BEARING CAP REFERENCE MARKS

1 - REFERENCE MARKS
2 - REFERENCE MARKS

(7) Loosen differential bearing cap bolts.

(8) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 49). Install hold-down clamps and tighten the turnbuckle finger-tight.