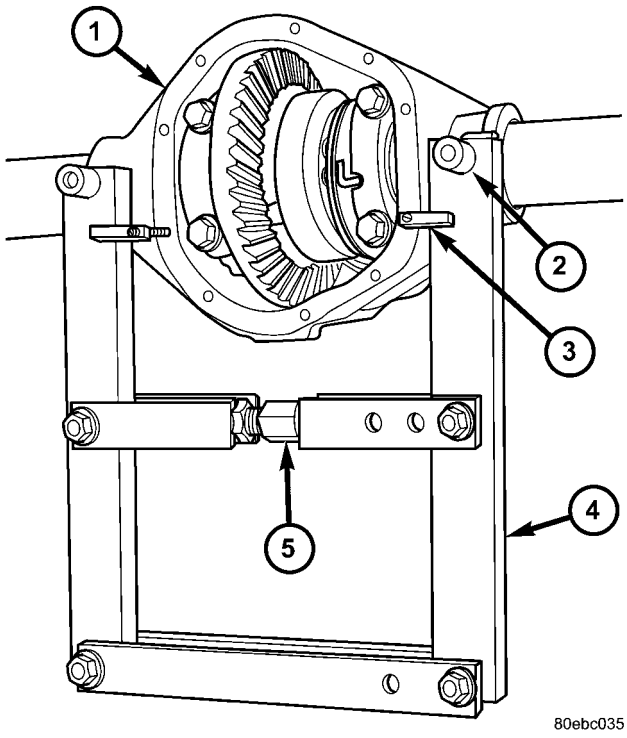

Fig. 49 SPREADER LOCATION

1 - DIFFERENTIAL CASE
2 - ADAPTER
3 - HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(9) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud (Fig. 50). Load indicator plunger against the opposite side of the housing and zero the indicator.

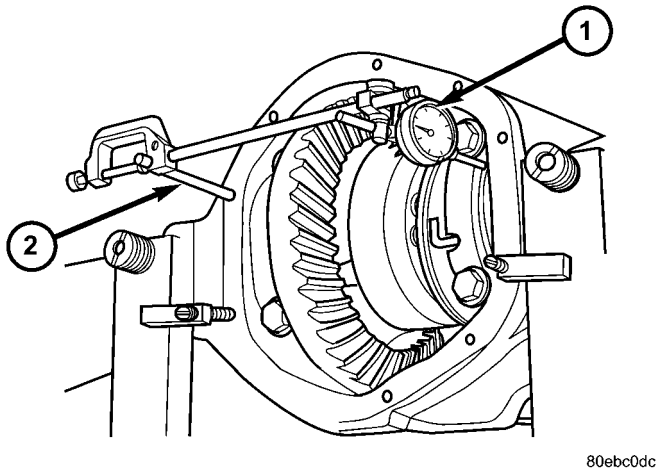

Fig. 50 DIAL INDICATOR LOCATION

1 - DIAL INDICATOR
2 - PILOT STUD

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.

(10) Spread housing while measuring the distance with the dial indicator (Fig. 51).

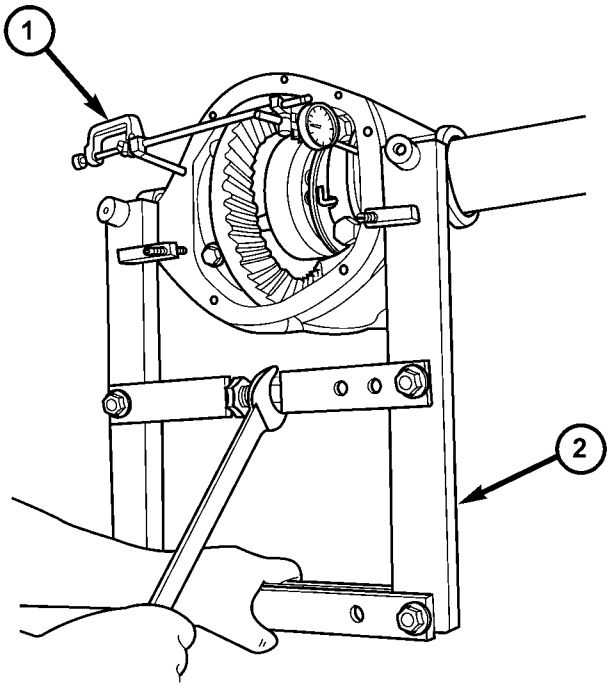

Fig. 51 SPREAD DIFFERENTIAL CASE

1 - DIAL INDICATOR
2 - SPREADER

(11) Remove dial indicator.

(12) Remove differential bearing cap bolts and ring gear side bearing cap.

(13) Remove differential from housing with pinion gear side bearing cap (Fig. 52) and tag differential bearing cups and preload shims to indicate location.

CAUTION: Do not bend actuator mounting tabs, during differential removal. Failure to heed caution may result in damage.