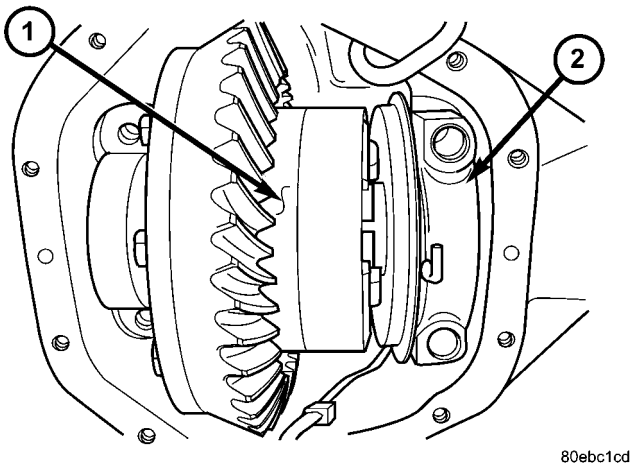

Fig. 52 DIFFERENTIAL

1 - DIFFERENTIAL
2 - BEARING CAP

(14) Remove spreader from housing.

(15) Remove indicator switch (Fig. 53) from differential housing.

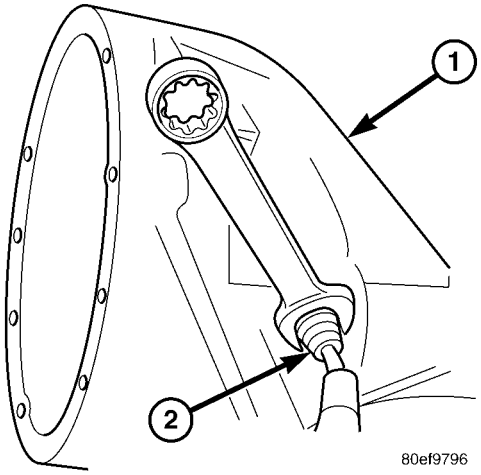

Fig. 53 LOCKER INDICATOR SWITCH

1 - DIFFERENTIAL CASE
2 - SWITCH

(16) Clean the housing cavity with flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Install Plug C-293-3 into the differential axle shaft hole.

(2) Remove differential case bearings with Puller 6444, Puller Rods 6444-4 and Puller Flange 6444-1. Position puller (Fig. 54) on the differential.

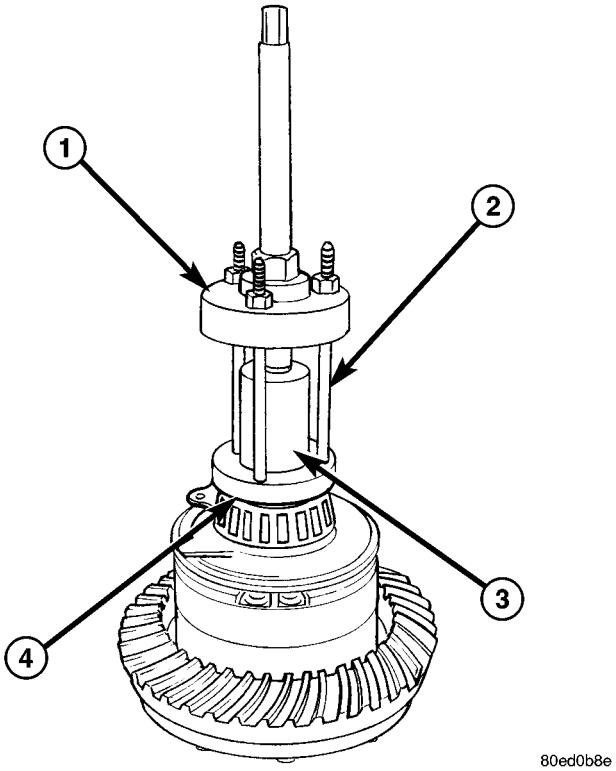

Fig. 54 PULLER AND FLANGE

1 - PULLER
2 - ROD
3 - PLUG
4 - FLANGE

(3) Position Puller Jaws 6447 (Fig. 55) around the case bearing and puller flange.