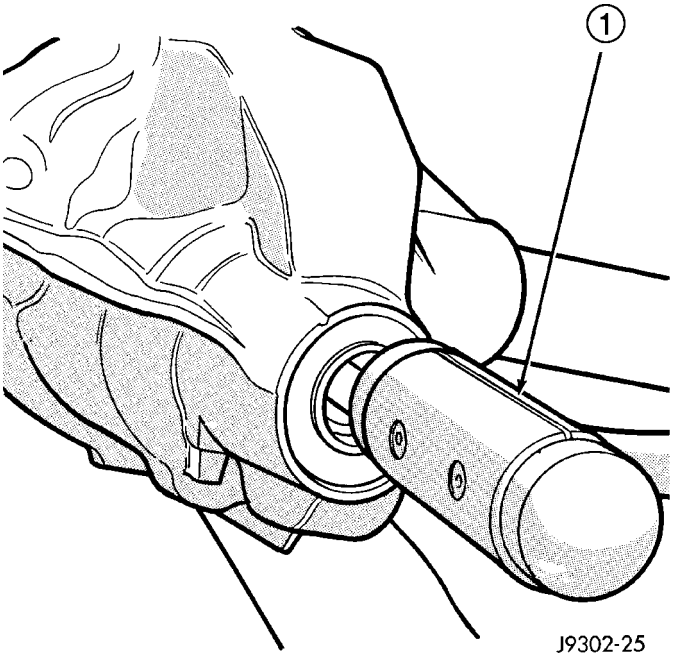


Fig. 71 REMOVE PINION GEAR

1 - DEAD-BLOW HAMMER

(8) Remove pinion seal with a pry bar or slide hammer mounted screw.

(9) Remove front pinion bearing cup with Remover D-147 and Handle C-4171 (Fig. 72). Remove pinion preload shims from cup bore.

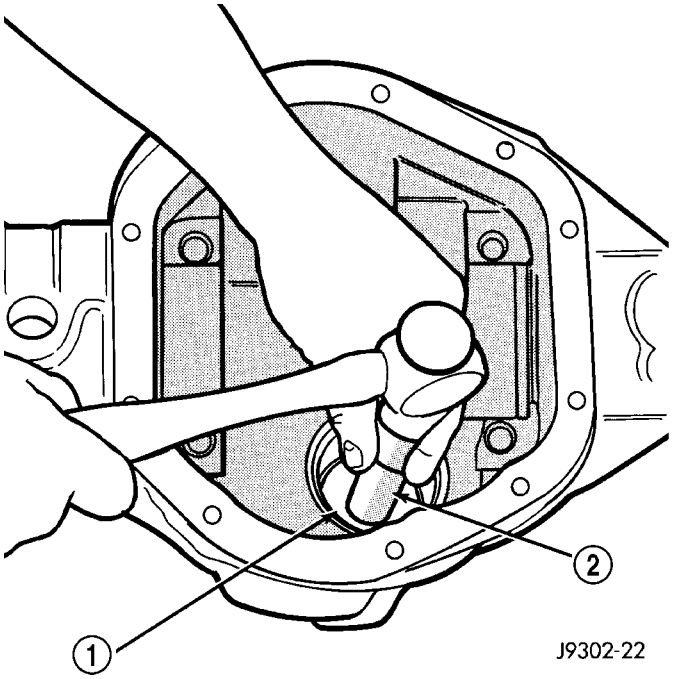


Fig. 72 FRONT BEARING CUP REMOVAL

1 - REMOVER
2 - HANDLE

(10) Remove rear bearing cup (Fig. 73) with Remover D-148 and Handle C-4171.

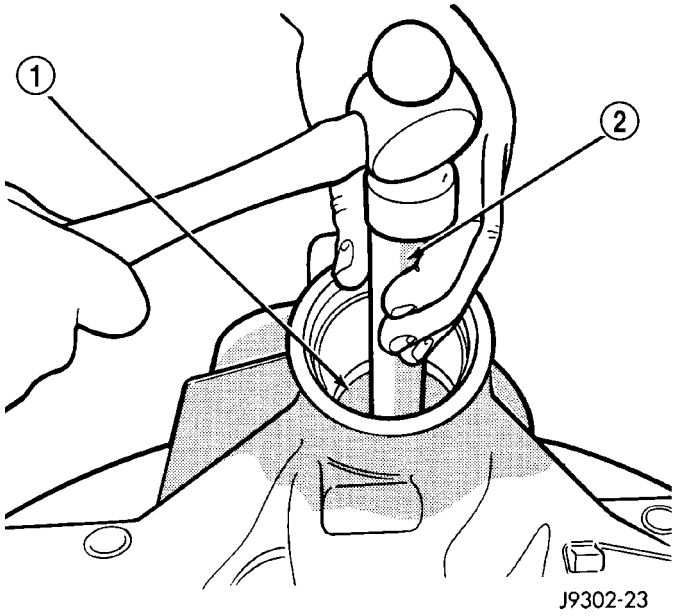


Fig. 73 REAR BEARING CUP REMOVAL

1 - DRIVER
2 - HANDLE

(11) Remove rear pinion bearing with Puller C-293-PA and Adapters C-293-39 (Fig. 74).

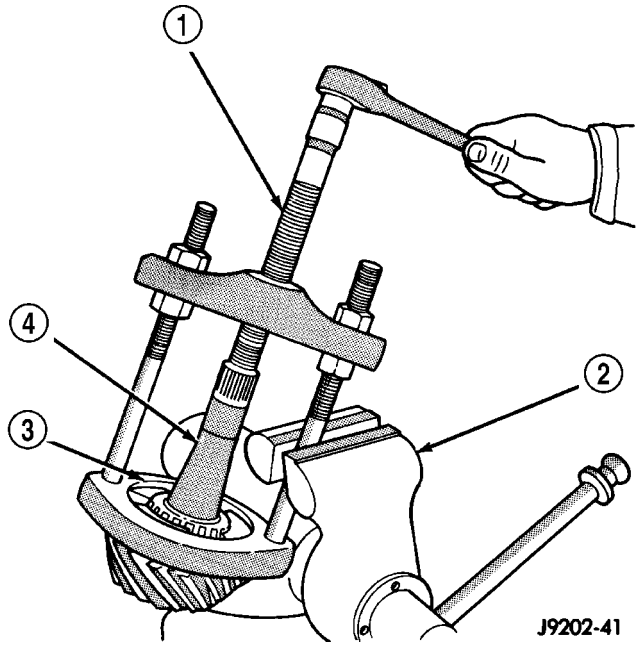


Fig. 74 REAR BEARING REMOVAL

1 - PULLER
2 - VISE
3 - ADAPTERS
4 - PINION SHAFT

(12) Remove pinion depth shim/oil slinger from pinion shaft and record thickness.