INSTALLATION

NOTE: Pinion depth shims are placed between the rear pinion bearing cone and pinion gear to achieve proper ring and pinion gear mesh. If ring and pinion gears are reused, the original pinion depth shim can be used. Refer to Adjustments (Pinion Gear Depth) to select the proper shim thickness if ring and pinion gears are replaced.

(1) Apply Mopar Door Ease stick or equivalent lubricant to outside surface of bearing cups.

(2) Install rear pinion bearing cup with Installer D-146 and Handle C-4171 (Fig. 75).

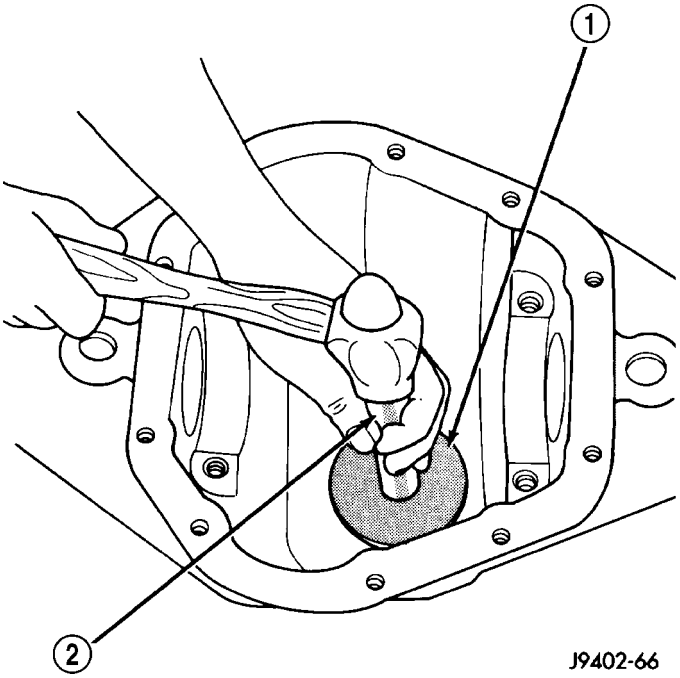

Fig. 75 REAR PINION BEARING CUP

1 - INSTALLER
2 - HANDLE

(3) Install pinion preload shims in front pinion cup housing bore (Fig. 76)

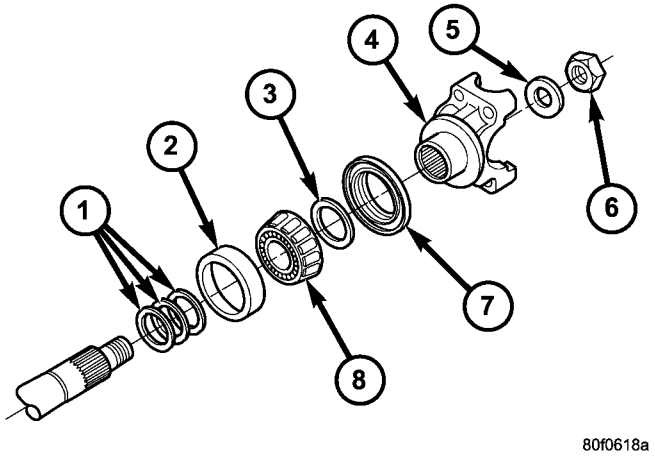

Fig. 76 PINION PRELOAD SHIMS

1 - PRELOAD SHIMS
2 - FRONT BEARING CUP
3 - SLINGER
4 - PINION YOKE
5 - WASHER
6 - PINION NUT
7 - PINION OIL SEAL
8 - FRONT PINION BEARING

(4) Install front pinion bearing cup with Installer D-145 and Handle C-4171 (Fig. 77).

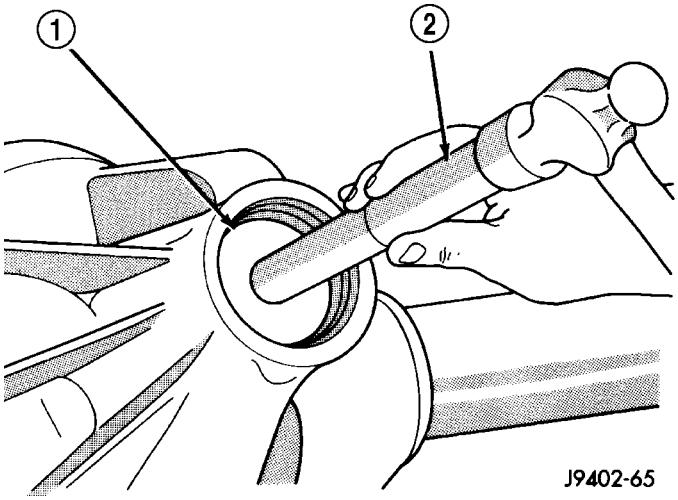

Fig. 77 FRONT PINION BEARING CUP INSTALLER

1 - INSTALLER
2 - HANDLE

(5) Install pinion front bearing, oil slinger. Apply a light coating of gear lubricant on the lip of pinion seal.

(6) Install pinion seal with an appropriate installer (Fig. 78).