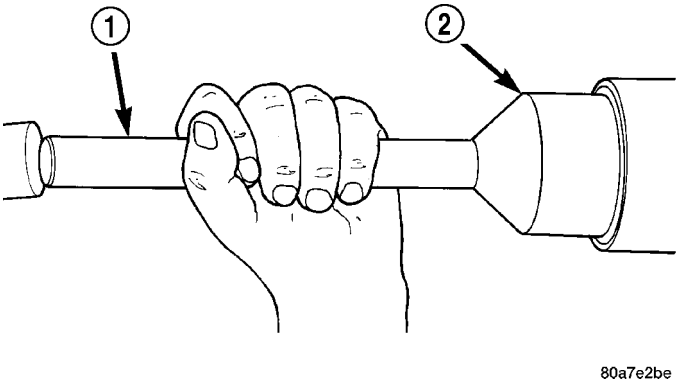

Fig. 78 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(7) Install proper thickness depth shim on the pinion gear.

(8) Install rear bearing and oil slinger, if equipped on pinion gear with Installer W-262 (Fig. 79).

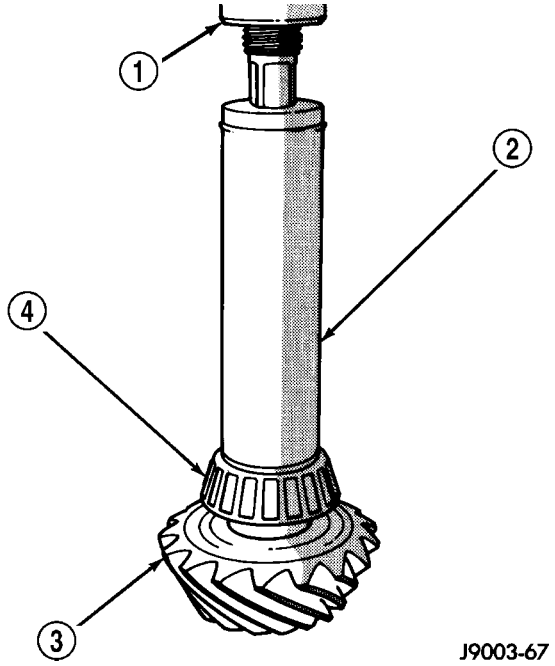

Fig. 79 REAR PINION BEARING

1 - PRESS
2 - INSTALLER
3 - PINION GEAR
4 - PINION BEARING

(9) Install pinion gear in housing.

(10) Install yoke with Installer W-162-D and Yoke Holder 6719A (Fig. 80).

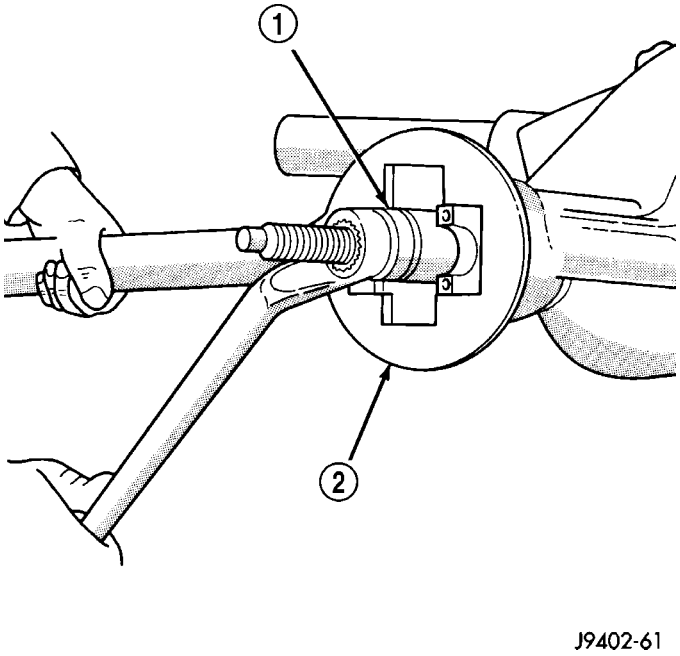

Fig. 80 PINION YOKE INSTALLER

1 - INSTALLER
2 - YOKE HOLDER

(11) Install yoke washer and a **new** nut on the pinion gear. Tighten the nut to specification (Fig. 81).

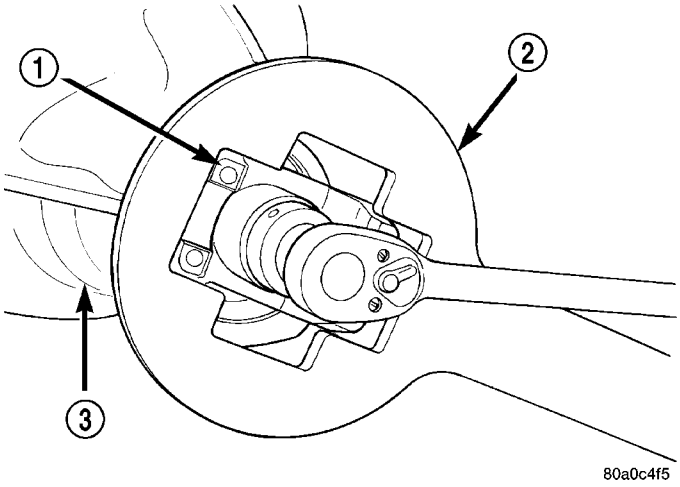

Fig. 81 TIGHTENING PINION NUT

1 - PINION YOKE
2 - YOKE HOLDING
3 - DIFFERENTIAL HOUSING

(12) Check bearing preload torque with an inch pound torque wrench (Fig. 82). The torque to rotate the pinion gear should be:

- Original Bearings: 1 to 2 N·m (10 to 20 in. lbs.).
- New Bearings: 2.3 to 4.5 N·m (20 to 40 in. lbs.).

NOTE: Removing a pinion preload shim will increase the pinion torque to rotate. Adding a pinion preload shim will decrease the pinion torque to rotate.