total overall shim thickness and select that amount for the pinion gear side of the differential (Fig. 12).

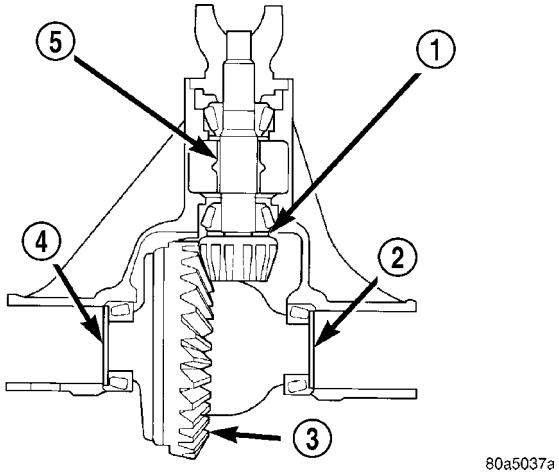

Fig. 12 SHIM LOCATIONS

1 - PINION GEAR DEPTH SHIM
2 - DIFFERENTIAL SHIM-PINION GEAR SIDE
3 - RING GEAR
4 - DIFFERENTIAL SHIM-RING GEAR SIDE
5 - COLLAPSIBLE SPACER

PRELOAD SHIM SELECTION

NOTE: It is difficult to salvage the differential side bearings during the removal procedure. Install replacement bearings if necessary.

(1) Remove side bearings from differential case.
(2) Install ring gear, if necessary, on differential case and tighten bolts to specification.
(3) Install Dummy Bearings D-348 on differential case.
(4) Install differential case in the housing.
(5) Insert Dummy Shims 8107 (3.0 mm / 0.118 in.) starting point shims between the dummy bearing and the housing (Fig. 13).

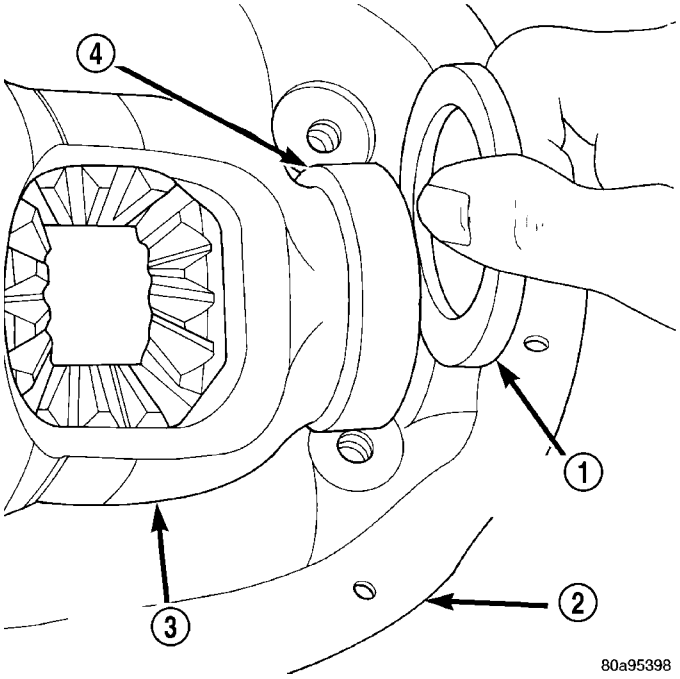

Fig. 13 DUMMY SHIM LOCATION

1 - DUMMY SHIM
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE
4 - DUMMY BEARING

(6) Install bearing caps in their correct positions and snug the bolts.
(7) Using a dead-blow hammer to seat the differential dummy bearings to each side of the housing (Fig. 14) and (Fig. 15).

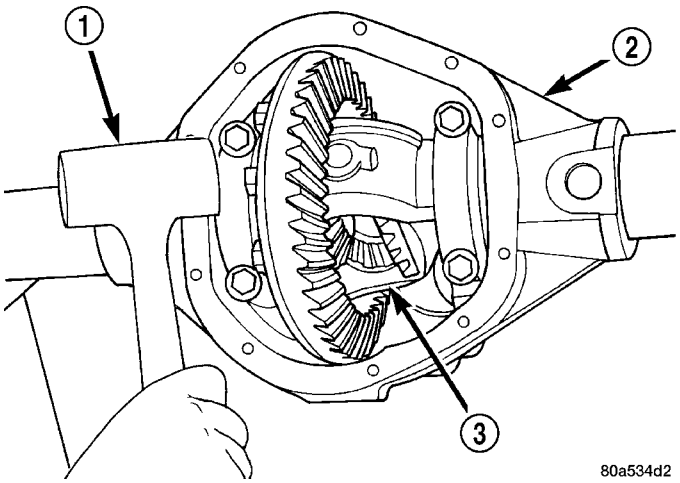

Fig. 14 SEAT DUMMY BEARING PINION GEAR SIDE

1 - MALLET
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE